



HM126 PORTABLE SAWMILL

9.5 and 14 Horsepower Models

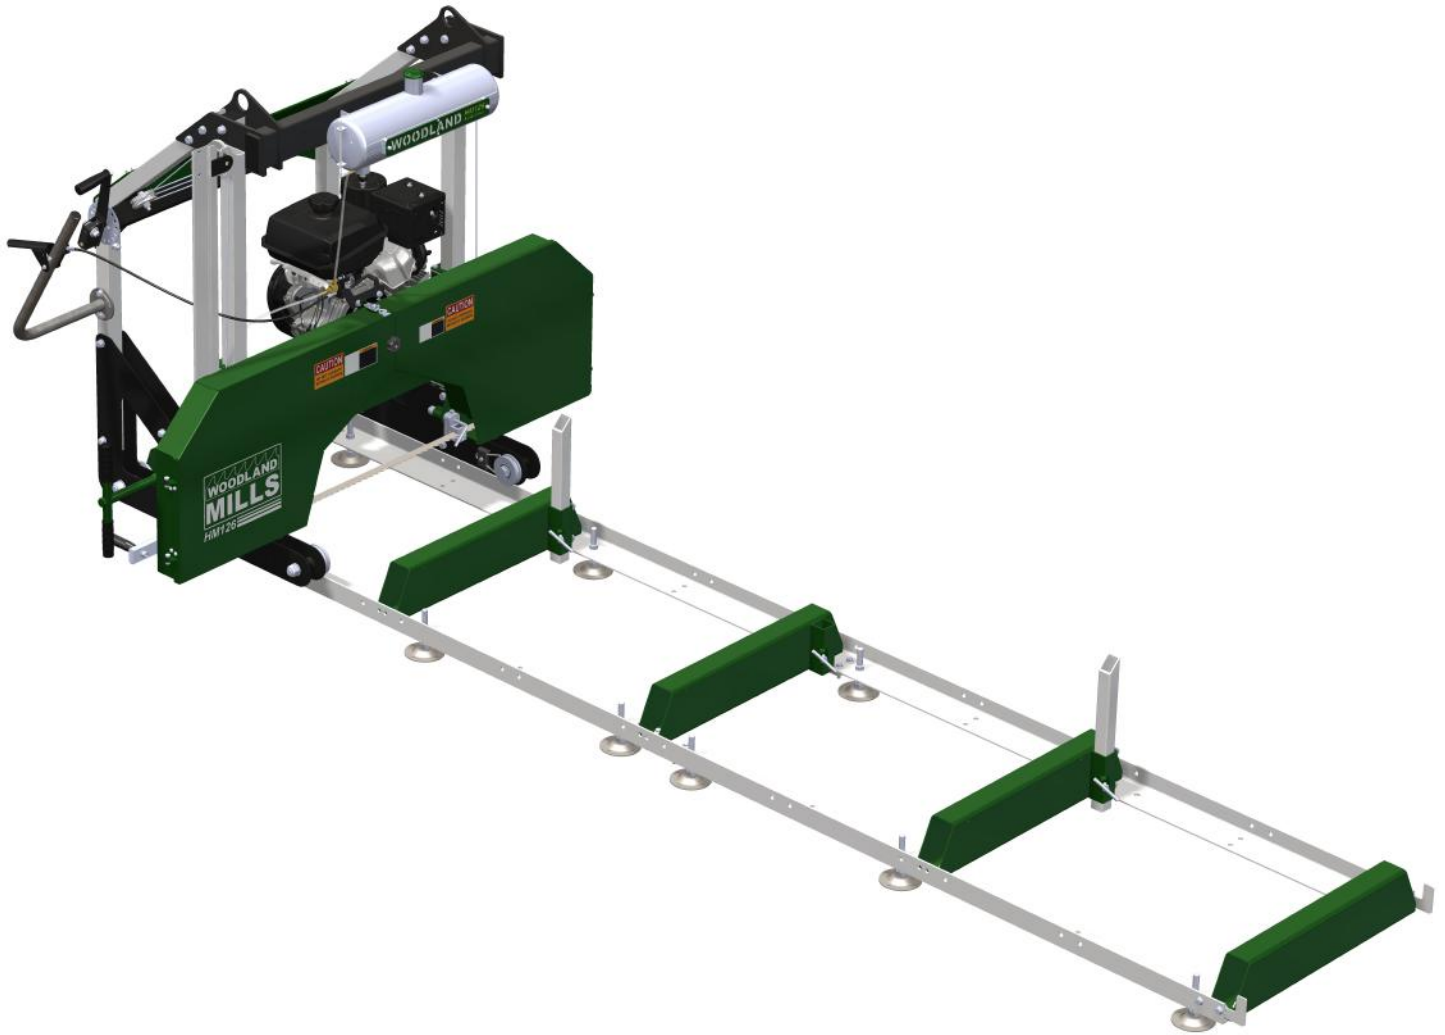

OPERATOR'S MANUAL

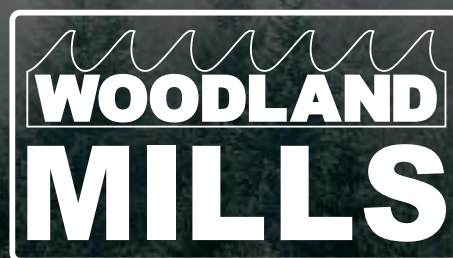

This page intentionally left blank.



TABLE OF CONTENTS

TABLE OF CONTENTS	1
INTRODUCTION	4
INTENDED USE	4
SAFETY GUIDELINES	5
WORK AREA	6
INTERNAL COMBUSTION ENGINE SAFETY	6
PERSONAL SAFETY	7
TOOL USE AND CARE	8
EQUIPMENT OPERATION	9
MAINTENANCE	10
TECHNICAL SPECIFICATIONS	11
OVERALL DIMENSIONS	12
ASSEMBLY	13
1. TOOLS REQUIRED	13
2. UNPACKING	14
3. TRACK	15
4. LOG CLAMP AND SUPPORTS	19
5. SAWMILL HEAD ASSEMBLY	22
FRONT POSTS	22
CARRIAGE LEGS	23
HEAD LOCK-DOWN PLATES	24
STANDING THE SAWHEAD UPRIGHT	25
REAR POSTS	26
CROSS BEAM	27
LUBRICATION TANK	29
DASHBOARD & HOUR METER	30
LIFT MECHANISM	32
LIFT CABLE ROUTING	34
LOG SCALE	36



PUSH HANDLE _____ 39

THROTTLE HANDLE AND CABLE _____ 41

BAND WHEEL DOOR LATCHES _____ 43

LUBRICATION TUBING _____ 44

TIGHTEN CARRIAGE WHEEL BOLTS _____ 46

6. PLACING THE HEAD ON THE TRACK _____ 47

 METHOD 1 _____ 47

 METHOD 2 _____ 48

 ROLLING THE SAWMILL HEAD ASSEMBLY _____ 49

 RAISING & LOWERING THE SAWHEAD _____ 50

 LEVELLING THE SAWMILL HEAD ASSEMBLY _____ 51

 GREASING THREADS _____ 52

 ENGINE OIL _____ 53

DIRECTION OF CUT _____ 55

SAWMILL SET-UP PROCEDURES _____ 56

 DRIVE BELT TENSION _____ 56

 BLADE TENSION _____ 58

 BLADE TRACKING _____ 59

 REDUCING THE BLADE TENSION _____ 60

 ADJUSTING THE FOLLOWER SIDE TRACKING _____ 61

 BLADE GUIDE ADJUSTMENT _____ 63

SAWMILL MAINTENANCE _____ 65

 CHANGING THE BLADE _____ 65

 REPLACING BELTS _____ 66

TROUBLESHOOTING _____ 69

PARTS LIST _____ 70

EXPLODED ASSEMBLY VIEWS _____ 76

 TRACK _____ 76

 SAWHEAD— 14 hp _____ 77

 SAWHEAD—9.5 hp _____ 78

 BACK BEAM— 14 hp _____ 79



BACK BEAM—9.5 hp _____	80
GUIDE BLOCKS _____	81
BAND WHEEL HOUSING _____	82
BAND WHEEL HOUSING DOORS _____	83
BAND WHEELS AND BELT TENSIONER _____	84
ENGINE COMPONENTS—14 hp _____	85
ENGINE COMPONENTS—9.5 hp _____	86
CARRIAGE _____	87
CARRIAGE LEG, WHEEL, AND SWEEPER _____	88
LIFT MECHANISM _____	89
THROTTLE HANDLE _____	90
CABLES, TUBING & LABELS _____	91
NOTES _____	92



INTRODUCTION

Congratulations on your purchase and welcome to Woodland Mills! This manual gives you the necessary information about your machine so you will be able to use it properly. The entire manual must be read and understood before you start using the machine. If any questions should arise that are not covered by this manual, please contact Woodland Mills Inc.

OWNER'S RECORD

Please take a moment to record the following information about your sawmill. If you need to call for assistance, please be ready to provide your model and serial numbers. This information will allow us to help you more quickly when you call.

MODEL NUMBER

SERIAL NUMBER

DATE OF PURCHASE

This machine is designed for certain applications only. We strongly recommend that this machine is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the machine until you have first contacted us to determine if it can or should be performed on the product.

For technical questions and replacement parts, please contact Woodland Mills Inc.

INTENDED USE

Woodland Mills wood sawmills are designed for acreage owners to aid in the milling of natural, untreated wood with the mill firmly supported on the ground. Materials that are processed may contain chemicals or by-products that could corrode the machine or damage it, resulting in safety concerns.



SAFETY GUIDELINES

****SAVE THESE INSTRUCTIONS****



WARNING!

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.



WARNING!

The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator.



WARNING!

Only operate the engine in a well ventilated area. Carbon Monoxide (CO) produced by the engine during use can kill. Do not use indoors, near windows, or in other sheltered areas.

NOTE: All Federal and State laws and any regulation having jurisdiction covering the safety requirements for use of the machine take precedence over the statements in this manual. Users of this machine must adhere to such regulations.



WORK AREA

- **Keep work area clean, free of clutter and well lit.** Cluttered and dark work areas can cause accidents.
- **Do not use your sawmill where there is a risk of causing a fire or an explosion;** e.g. in the presence of flammable liquids, gasses, or dust. Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away** while operating a power tool. Distractions can cause you to lose control, therefore, visitors should remain a safe distance from the work area.
- **Be aware of all power lines,** electrical circuits, water pipes and other mechanical hazards in your work area, particularly those hazards below the work surface hidden from the operator's view that may be unintentionally contacted and cause personal harm or property damage.
- **Be alert of your surroundings.** Using power tools in confined work areas may put you dangerously close to cutting tools and rotating parts.

INTERNAL COMBUSTION ENGINE SAFETY

WARNING!

Internal combustion engines present special hazards during operation and fuelling. Read and follow the warning instructions in the engine Owner's Manual and the safety guidelines below. Failure to follow the warnings and safety standards could result in severe injury or death.



- **DO NOT** run the machine indoors or in an enclosed area such as a deep trench unless adequate ventilation, through such items as exhaust fans or hoses, is provided. Exhaust gas from the engine contains poisonous carbon monoxide gas (CO); exposure to carbon monoxide can cause loss of consciousness and may lead to death.
- **DO NOT** smoke while operating the machine.
- **DO NOT** smoke when refuelling the engine.
- **DO NOT** refuel a hot or running engine.
- **DO NOT** refuel the engine near an open flame.
- **DO NOT** spill fuel when refuelling the engine.
- **DO NOT** run the engine near an open flame.
- **ALWAYS** refill the fuel tank in a well-ventilated area.
- **ALWAYS** replace the fuel tank cap after refuelling.
- **ALWAYS** check the fuel lines and the fuel tank for leaks and cracks before starting the engine. Do not run the machine if fuel leaks are present or the fuel lines are loose.
- **ALWAYS** avoid contact with hot fuel, oil, and exhaust fumes.



PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool when you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- **Dress properly.** Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts. Air vents often cover moving parts and should be avoided.
- **Use safety apparel and equipment.** Use safety goggles or safety glasses with side shields which comply with current national standards, or when needed, a face shield. Use a dust mask in dusty work conditions. This applies to all persons in the work area. Also use non-skid safety shoes, hardhat, gloves, dust collection systems, and hearing protection when appropriate.
- **Do not overreach.** Keep proper footing and balance at all times.
- **Remove adjusting keys or wrenches** before connecting to the power supply or turning on the tool. A wrench or key that is left attached to a rotating part of the tool may result in personal injury.
- **Never make blade guide adjustments, remove or install blades, or conduct any other maintenance or make any other adjustments while the engine is running.** Always shut the engine off, remove the ignition key, and turn the engine off before carrying out any of the aforementioned procedures. Consult your engine manual for safe shutdown procedures to prevent accidental ignition.



TOOL USE AND CARE

- **Always** be sure the operator is familiar with proper safety precautions and operation techniques before using machine.
- **Never touch** the engine or muffler while the engine is on or immediately after it has been turned off. These areas get extremely hot and can cause burns.
- **Always** close the fuel valve on the engine when the machine is not in use.
- **Do not force the tool.** Tools do a better and safer job when used in the manner for which they are designed.
- **Never use the sawmill** with a malfunctioning switch or throttle. Any power tool that cannot be controlled with the switch is dangerous and must be repaired before using.
- Turn off the engine and place the switch in the locked or off position before servicing, adjusting, installing accessories or attachments, or storing. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Secure logs with the log screw clamping device instead of with your hand or another individual's help. This safety precaution allows for proper tool operation using both hands.
- **Storing sawmill.** When the sawmill is not in use, store it in a dry, secure place or keep well covered and out of the reach of children. Inspect the sawmill for good working condition prior to storage and before re-use.
- **Maintain your sawmill.** It is recommended that the general condition of the sawmill be examined before it is used. Keep your sawmill in good repair by adopting a program of conscientious repair and maintenance in accordance with the recommended procedures found in this manual. If any abnormal vibrations or noise occurs, turn the sawmill off immediately and have the problem corrected before further use.
- **Keep saw blades sharp and clean.** Properly maintained bandsaw blades are less likely to bind and are easier to control.
- **Cleaning and Lubrication.** Use only soap and a damp cloth to clean your sawmill. Many household cleaners are harmful to plastic and rubber components on the sawmill.
- **Use only accessories that are recommended** by the manufacturer for your model. Accessories that may be suitable for another sawmill may create a risk of injury when used on the sawmill.
- **Always** operate machine with all safety devices and guards in place and in working order. DO NOT modify or make changes to safety devices. DO NOT operate machine if any safety devices or guards are missing or inoperative.
- **Never leave sawmill running unattended.**
- **Coiled blades can spring apart with considerable force and unpredictably in any direction.** Always deal with coiled blades, including those packaged in boxes, with the utmost care.
- **Never use the equipment to cut anything other than lumber** or for any purpose other than cutting lumber as described in this manual.



EQUIPMENT OPERATION

1. Wear heavy-duty work gloves, ANSI-approved goggles behind a full face shield, steel-toed work boots, and a dust mask.
2. Operate only with assistance.
3. Cut-off branches from the lumber to be processed.
4. Place the lumber to be cut on the track supports.
5. Clamp the lumber firmly in place using the included log clamp and supports.
6. Fill the lubrication tank with clean water. Add a ¼ cup of liquid dish soap per full tank; add less if topping up a partially full tank. The soap helps keep the blade clean(er) when excess tree oils and sap are encountered.
7. Start and operate the engine according to the provided engine manual.
8. Depress the throttle to bring the blade up to speed—the throttle should be fully depressed while the saw is under load.
9. Roll the head assembly slowly along the track and against the lumber to make the cut.
10. Trim off the rounded sides of the log.
11. When the log is squared-off, boards or posts can be cut to standard or custom specifications.
12. To prevent accidents, turn off the engine and disconnect its spark plug wire after use. Wait for the engine to cool, clean external parts with a clean cloth, then store the equipment out of children's reach.



WARNING!

To avoid death or serious injury, do not cut lumber containing embedded foreign objects such as nails, metal fragments, etc.



WARNING!

The operator and any assistants must stay clear of the front and back of the blade whenever the engine is on.



MAINTENANCE

Proper and routine maintenance is critical to operator safety, achieving good milling results, and to prolong the life of your investment.


- **Band Wheel Bearings** — Inspect before use to ensure they are not worn. Bearings are sealed and do not need to be greased.
- **Blade Guide Bearings** — Inspect before use for excessive grooves or scoring in the bearing case. Replace if necessary.
- **Blade Tension** — Grease threads of tensioning T-handle when dry or as required. Use multi-purpose, extreme-pressure grease.
- **Log Clamp** — Spray the cam mechanism with dry silicone spray frequently.
- **Belts** — Periodically check the condition and wear of the drive and idler belt. Ensure that the blade does not ride on the band wheels.
- **Drive Belt** — Periodically check the tension of the drive belt.
- **Carriage Posts (Front)** — Spray posts before use with a silicone spray lubricant such as 3-in-1 or Jig-A-Loo.
- **Band Wheel Guards** — Routinely remove any build-up of sawdust that may collect inside the band wheel guards.
- **Lubrication Tank** — Only fill with a water and dish soap mixture, or in winter months use windshield washer fluid. Do not leave lubricant in tank if temperature falls below 0° C.
- **Blade Lubricant** — Never use diesel fuel or kerosene as blade lubricant. These substances lead to premature wear of your belts and poor sawing performance. For winter operation, replace the water lubricant with windshield washer fluid.
- **Engine** — Check the engine oil level before each use and maintain the engine per the instructions set out by the engine manufacturer in the engine manual. The engine is equipped with an oil alert system and will not start without adding oil before starting.
- **Lifting Cables** — Before, during, and after operation, regularly inspect the cables for any wear or kinks. Ensure that the cables are in perfect condition. Oil the coiled part of the cable often to prevent premature wear. Replace with new cables as necessary.



TECHNICAL SPECIFICATIONS


The HM126 sawmill comes in two variants: the **HM126-9.5** that utilizes a 9.5 horsepower engine and the **HM126-14** with a 14 horsepower engine and adjustable blade guide. Both versions are assembled and operated in the same manner. Pictures and graphics used in this manual display the HM126-14 sawmill but the instructions still apply to both.

Item	HM126-9.5 Specification	HM126-14 Specification
Gasoline Engine	9.5 hp Kohler Command Pro	14 hp Kohler Command Pro
Max Log Diameter	26 in [660 mm]	
Max Board Width	24 in [610 mm]	
Max Board Thickness	7 in [178 mm]	
Blade Size	1-¼ x 144 in [32 mm x 3657 mm]	
Track Length	153-½ in [3900 mm]	
Track Width	30-½ in [775 mm]	
Track Height Adjustability (top of bunk)	7-⅞ to 10-⅝ in [200 to 270 mm]	
Product Weight	774 lb [351 kg]	794 lb [360 kg]
Shipping Weight	893 lb [405 kg]	913 lb [414 kg]

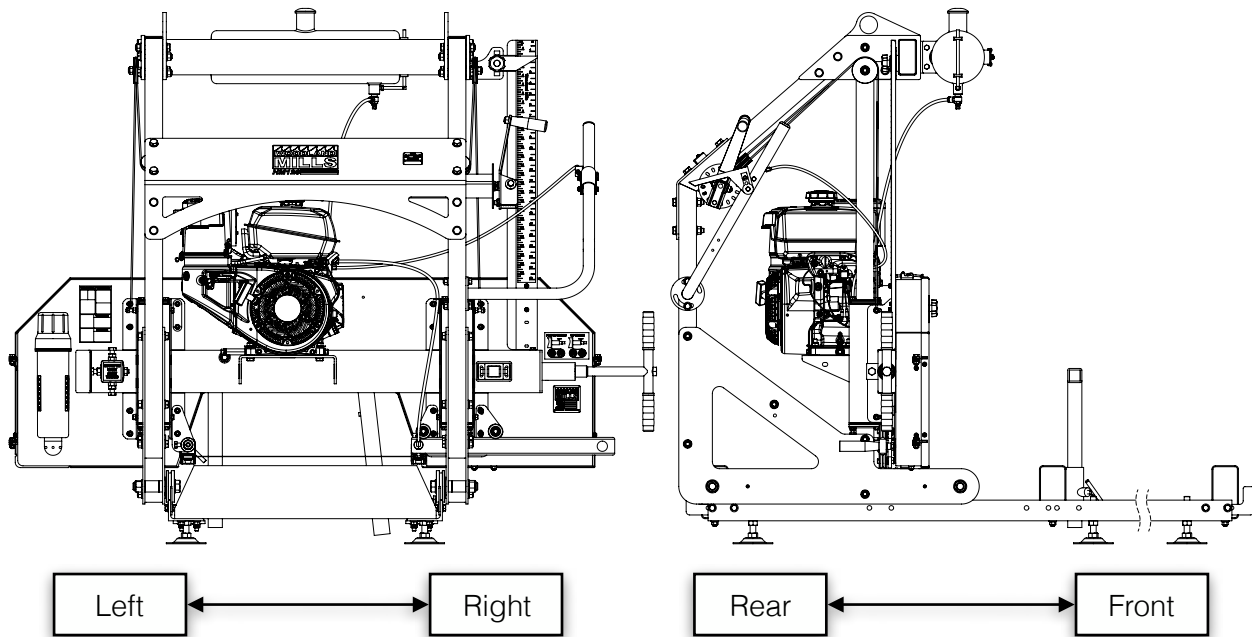



OVERALL DIMENSIONS

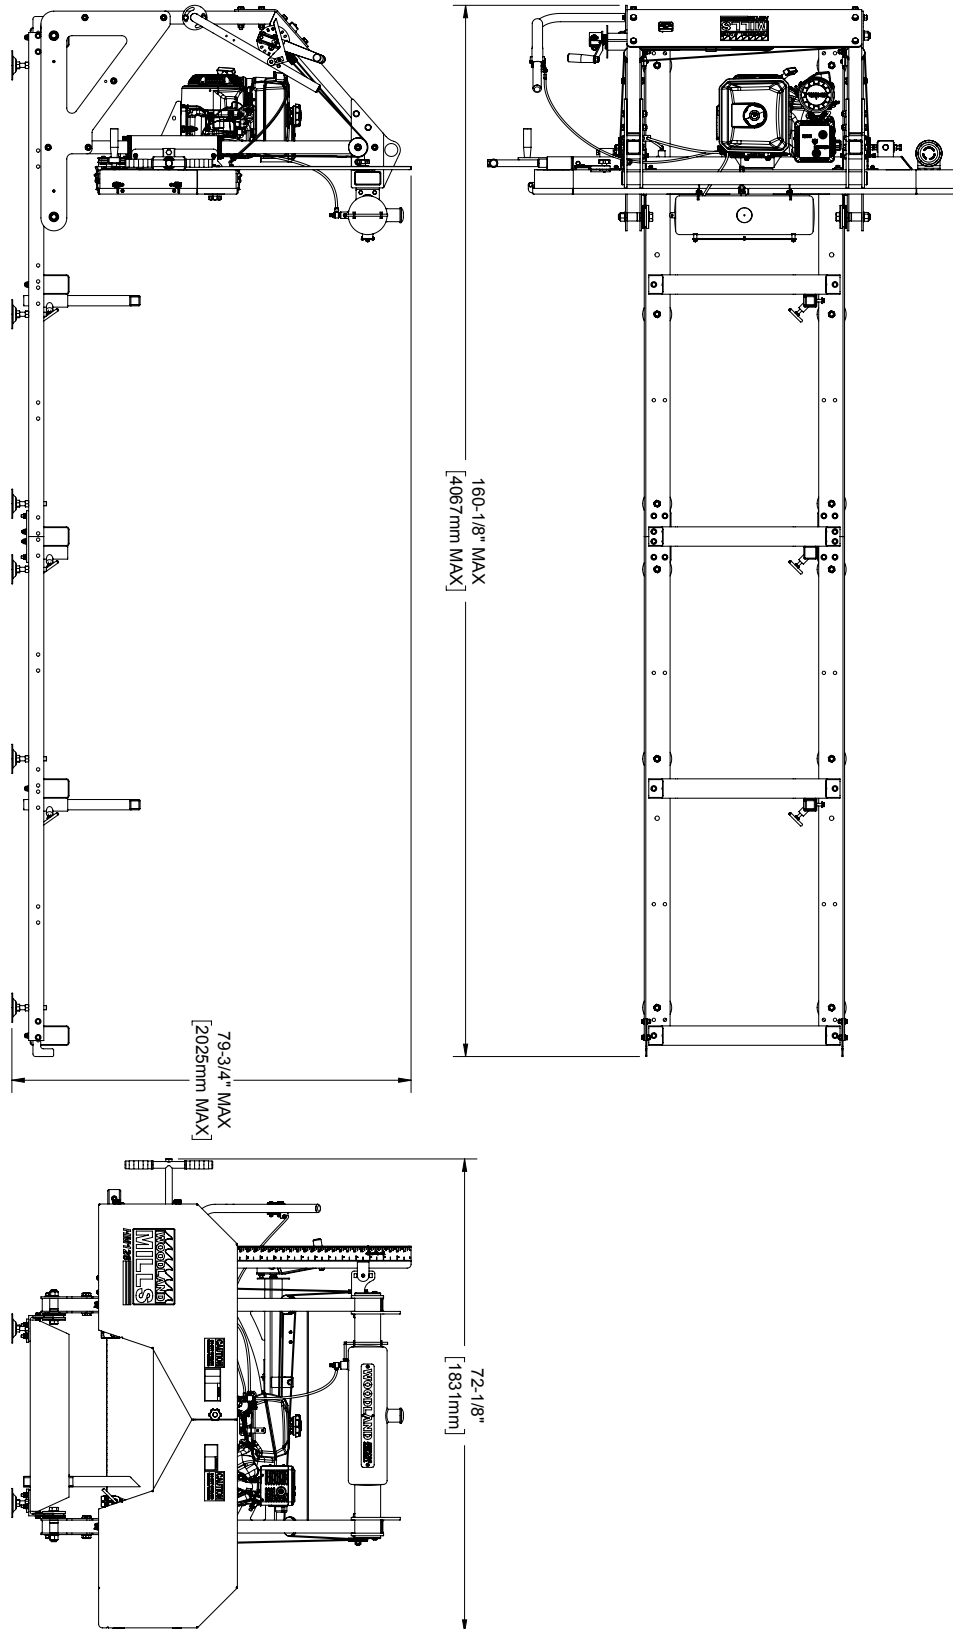



ASSEMBLY


1. TOOLS REQUIRED

Tool	Specification
Wrench/Socket	7 mm (2X)
Wrench/Socket	10 mm (2X)
Wrench/Socket	13 mm (2X)
Wrench/Socket	14 mm (2X)
Wrench/Socket	15 mm (2X)
Wrench/Socket	16 mm (2X)
Wrench/Socket	17 mm (2X)
Wrench/Socket	18 mm (2X)
Wrench/Socket	19 mm (2X)
Wrench	24 mm or Adjustable Wrench (2X)
Wrench	30 mm or Adjustable Wrench (2X)
Hex Key	3 mm
Hex Key	4 mm
Phillips Head Screwdriver	No. 3
Torque Wrench	Capable of at least 25 ft•lb (34 N•m)
Tape Measure	Standard Inch/Metric Tape Measure

During several of the assembly steps, more than one socket or wrench of the same size may be required to assemble the hardware. A socket or box wrench in combination with an adjustable wrench can be utilized if multiple same size tools are in limited supply.

2. UNPACKING

Unpack the contents of the crate except for the sawhead and the two long boxes in the bottom that contain the sections of track. Unfasten the two (2) M8 bolts/nuts on the front of the crate using a socket/wrench. Place two (2) 6-8 in [150-200 mm] tall support blocks in front of the crate, bend the front of the crate down, and then lay the cardboard wall over it. Carefully rotate the sawhead down onto the cardboard and support blocks and slide it out of the crate as shown below.










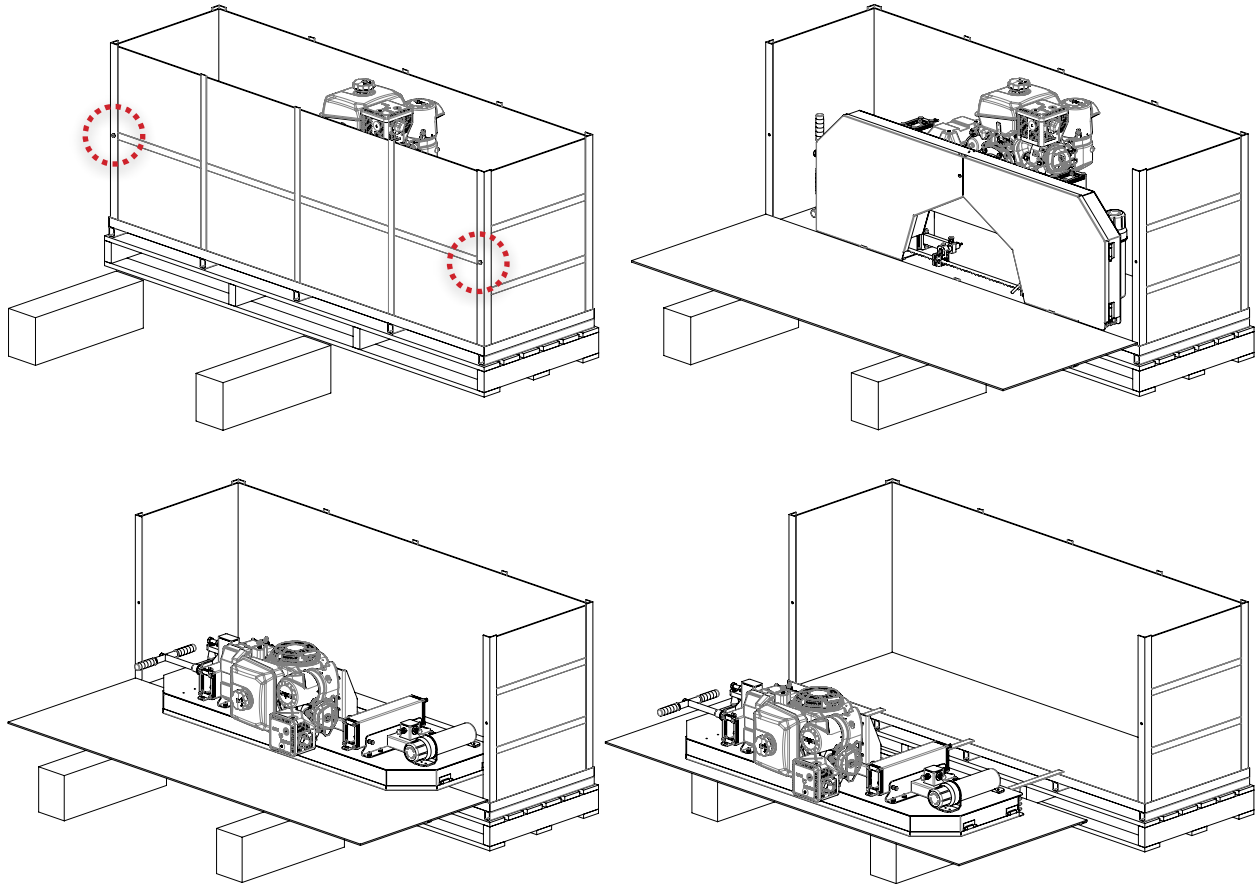


The two long track boxes can now be removed and the crate discarded.



3. TRACK

  Assemble the track system with the provided components and hardware listed in the table below. It is important to assemble and level the track on a firm foundation before tightening all of the hardware and it should ideally be a minimum of 4 in [100 mm] off the ground. This will allow for easy cleanup of sawdust from under the tracks and height adjustment of the log supports.

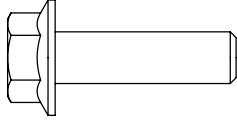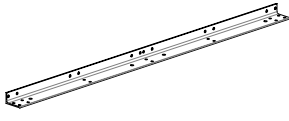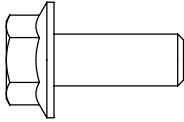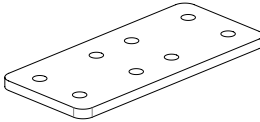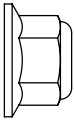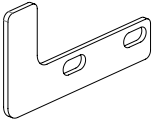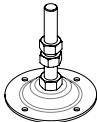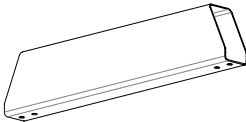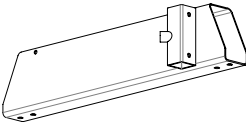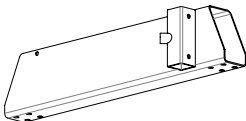16x	M10 X 35 mm Flanged Hex Bolt		4x	Track Rail	
28x	M10 X 25 mm Flanged Hex Bolt		2x	Reinforcement Plate	
40x	M10 Flanged Lock Nut		4x	Carriage Stop	
12x	Track Foot		2x	End Bunk	
			2x	Mid Bunk	
			1x	Centre Bunk*	

* Centre bunk incorporates four (4) mounting holes at each end




If a Woodland Mills sawmill trailer was purchased with this sawmill, skip this track assembly section and follow the track assembly instructions in those manuals.








The track comes completely disassembled from the factory. Lay out all the components on a flat piece of level ground prior to assembly. See the ***TRACK*** exploded view for a more detailed part breakdown.

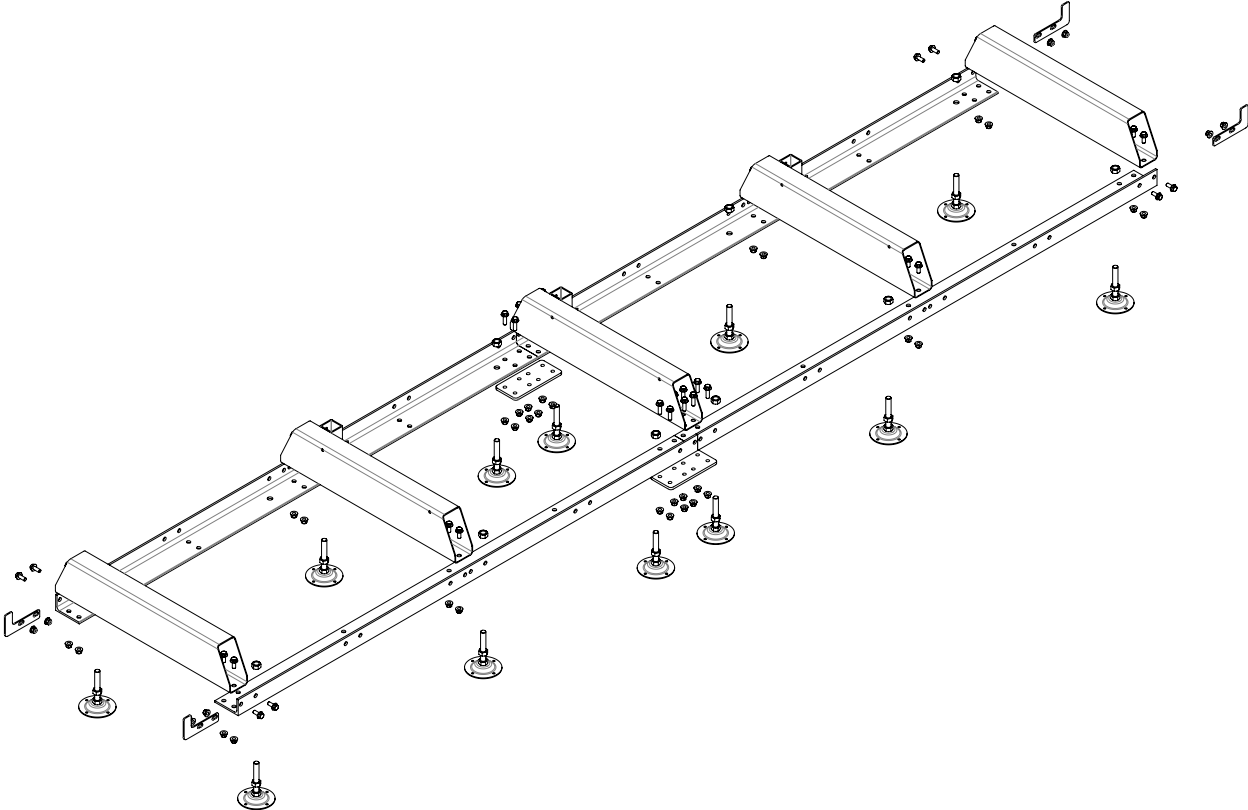

When assembling the log bunks to the rails, ensure that the two end bunks are square (90°) as shown in **Figure 1**. Use sixteen (16) M10 X 25 mm bolts at all end bunk and mid bunk locations (**Figures 1 & 2**).


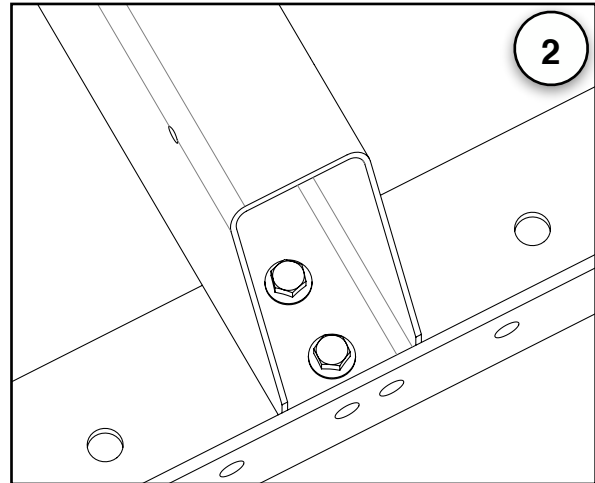
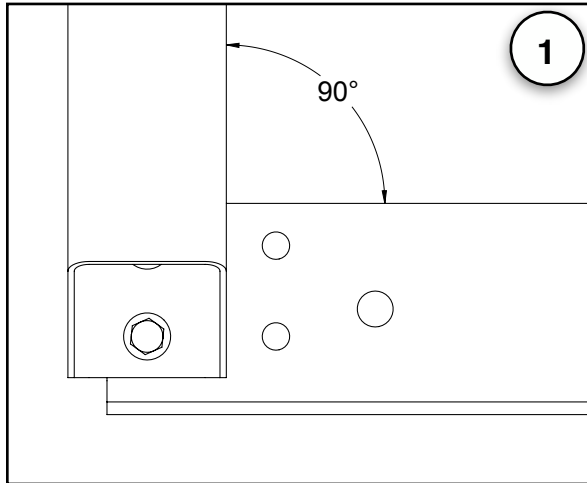


Use sixteen (16) M10 X 35 mm bolts to join the centre bunk and reinforcement plates to the rails at the rail joints (**Figure 3**).

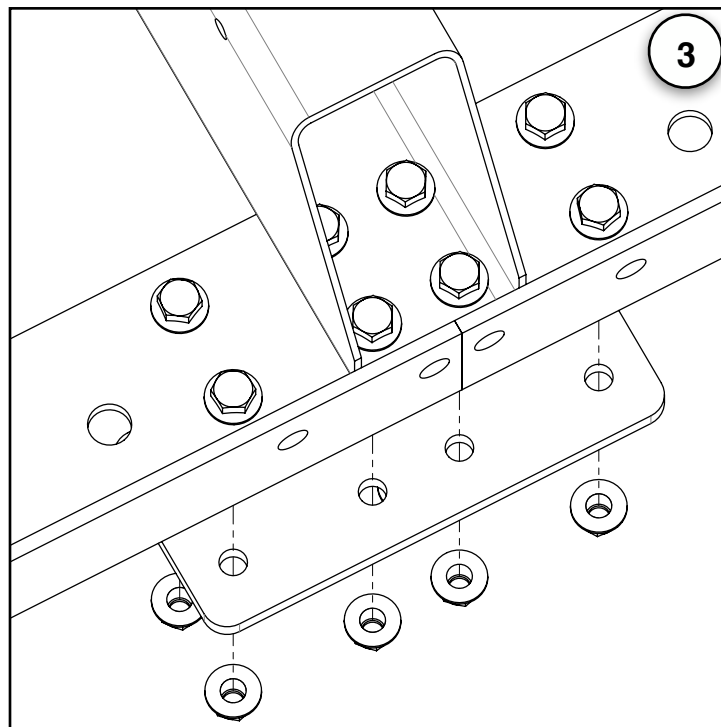




Attach the twelve (12) levelling feet to the track at the locations shown below. The bolt can be turned to either raise or lower the foot to adjust the level of the track (**Figure 4**). If setting the track on wooden blocks, use wood screws in the four holes to secure each foot in place.

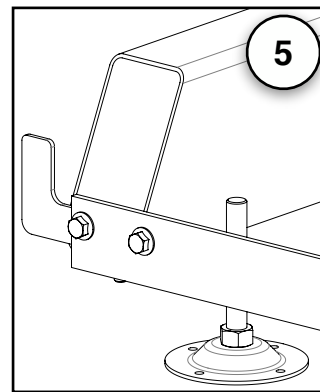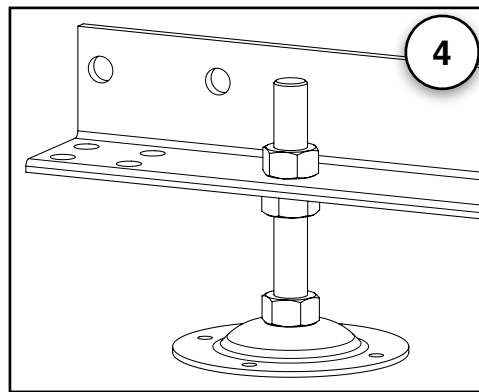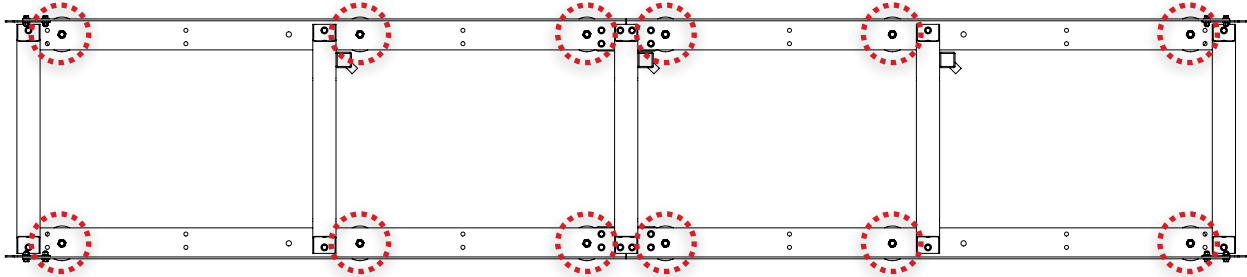

Assemble the four (4) carriage stops to the ends of the rails using eight (8) M10 X 25 mm bolts and lock nuts then fully tighten the bolts. Ensure carriage stops are assembled to the inside face of the rails, *not* the outside (**Figure 5**).










The assembled track should measure 30-½ in [775 mm] wide when measuring from the outside faces of the rails.

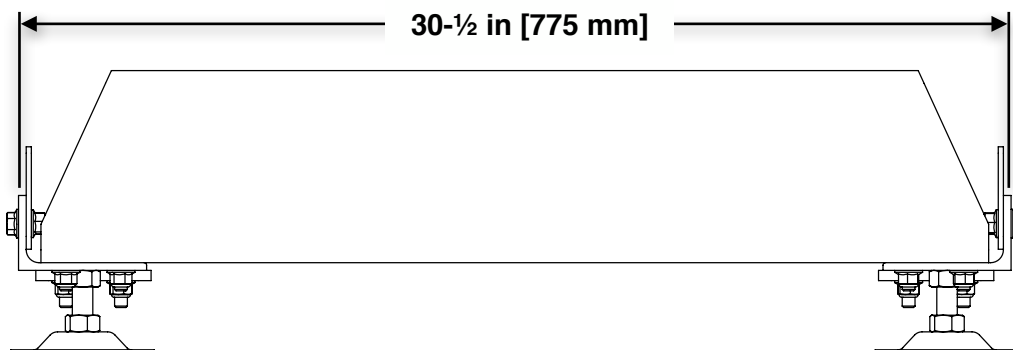





4. LOG CLAMP AND SUPPORTS

      
Assemble the log clamp components as shown below. The HM126-14 and HM126-9.5 each come with one (1) log clamp assembly. Attach the log clamp to the track using four (4) M10 X 25 mm bolts with lock nuts and tighten.

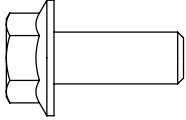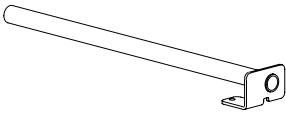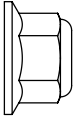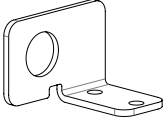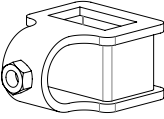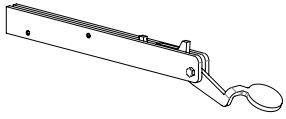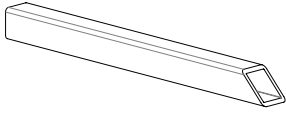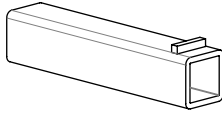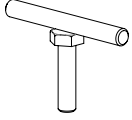4x	M10 X 25 mm Flanged Hex Bolt		1x	Log Clamp Shaft/Bracket Weldment	
4x	M10 Flanged Lock Nut		1x	Log Clamp Bracket	
			1x	Log Dog Receiver	
			1x	Log Dog	
			2x	Long Log Support	
			2x	Short Log Support	
			4x	M10 X 40 mm T-Bolt	

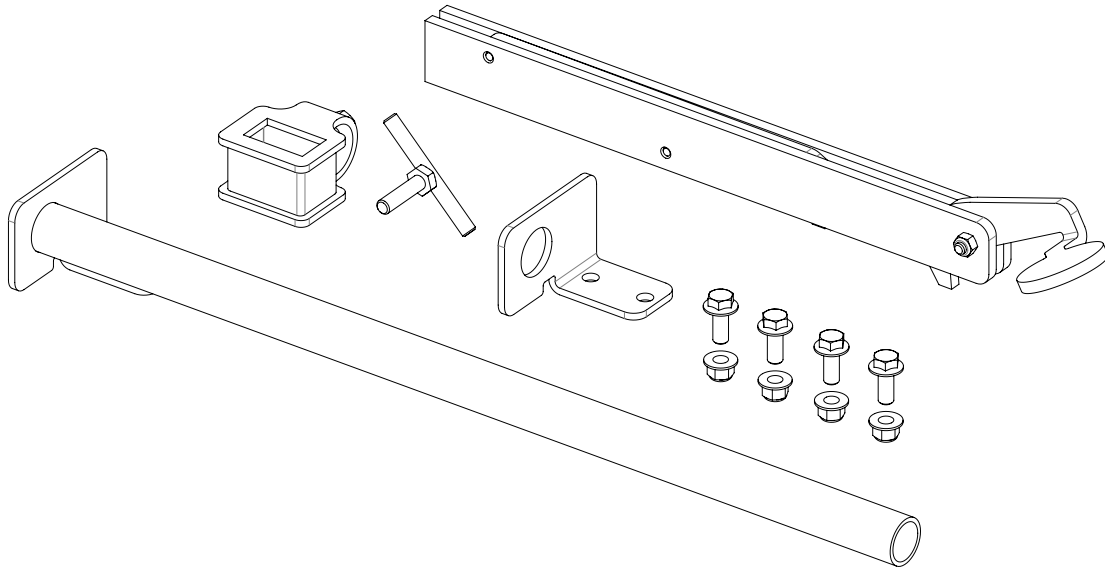


Attach log dog assembly to track as shown below with the four (4) nuts and bolts provided. Note that there are various locations along the track where this assembly can be bolted. Depending on how many track sections are being used, select a log clamp position that will secure the log firmly against the log supports.

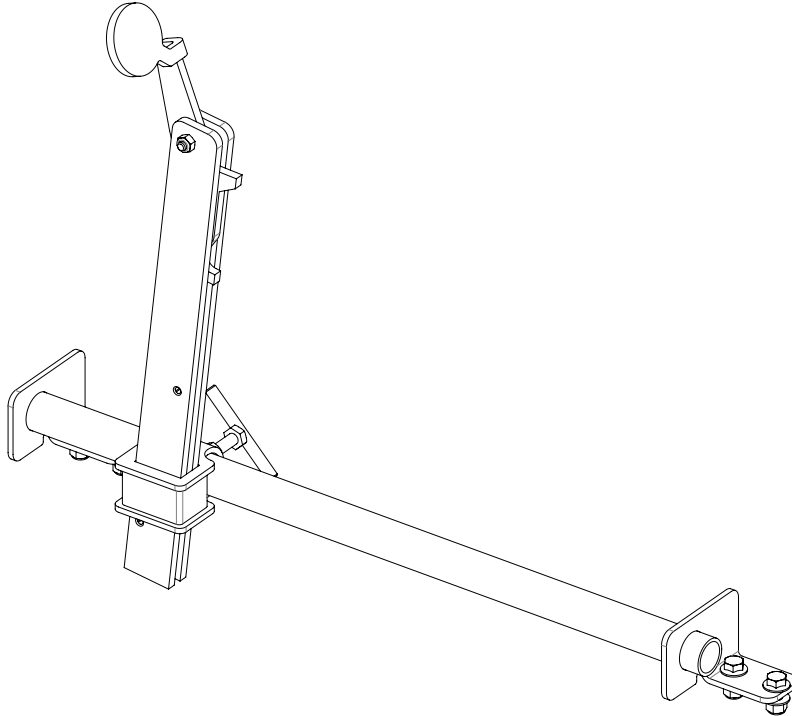

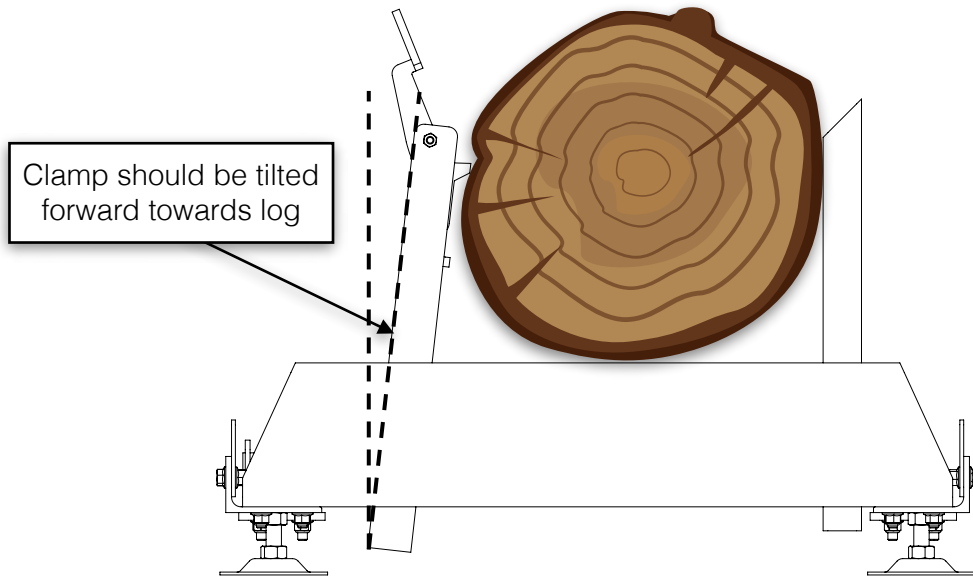

Insert log supports into track cross supports and secure with T-bolts as shown in the picture below. The T-bolt threads should be ***coated with grease***. The sawmill includes two sets of log supports—a short set and a long set. The long set is ideal for large diameter logs while the shorter set is better suited for small logs and square cants.

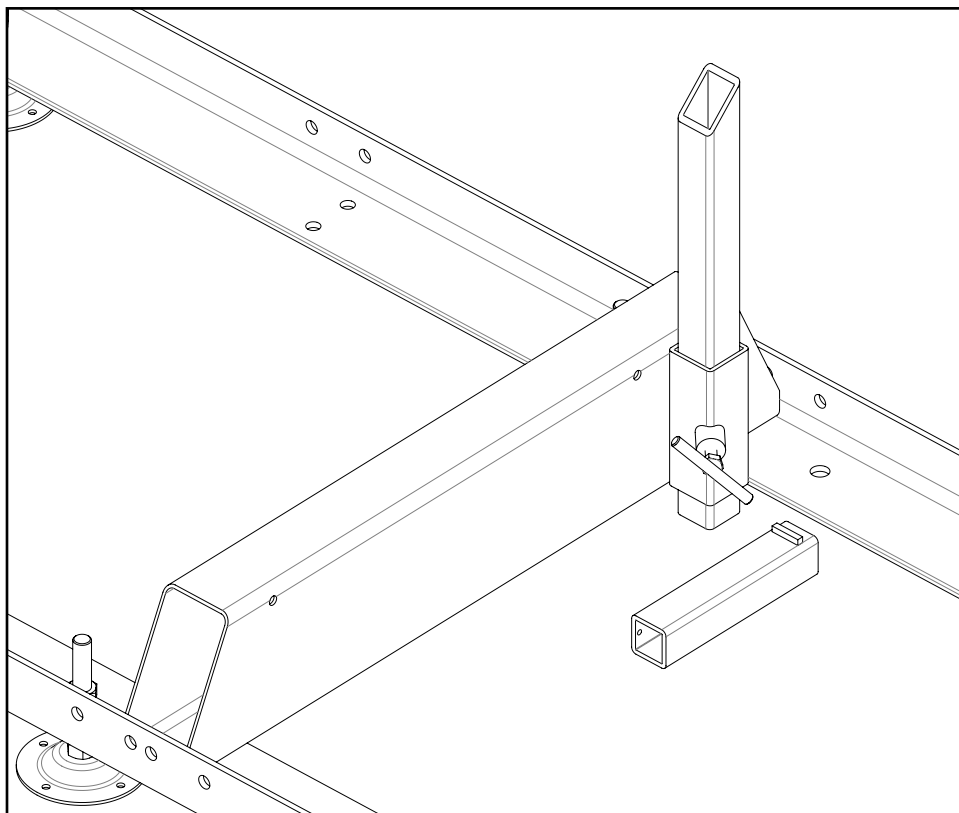





5. SAWMILL HEAD ASSEMBLY

The sawmill head assembly is built in multiple steps. Follow the sub-sections below using the parts table at the top of each sub-section to gather the necessary components for each step.

FRONT POSTS

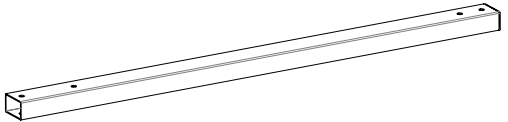2x	Front Post	
----	------------	---





With the sawhead resting approximately 6 in [150 mm] above the ground, slide the two (2) front posts through the post sleeves. Orient the posts so that the ends with the wider hole spacing are towards the bottom of the assembly. The top ends will be capped in a later step.

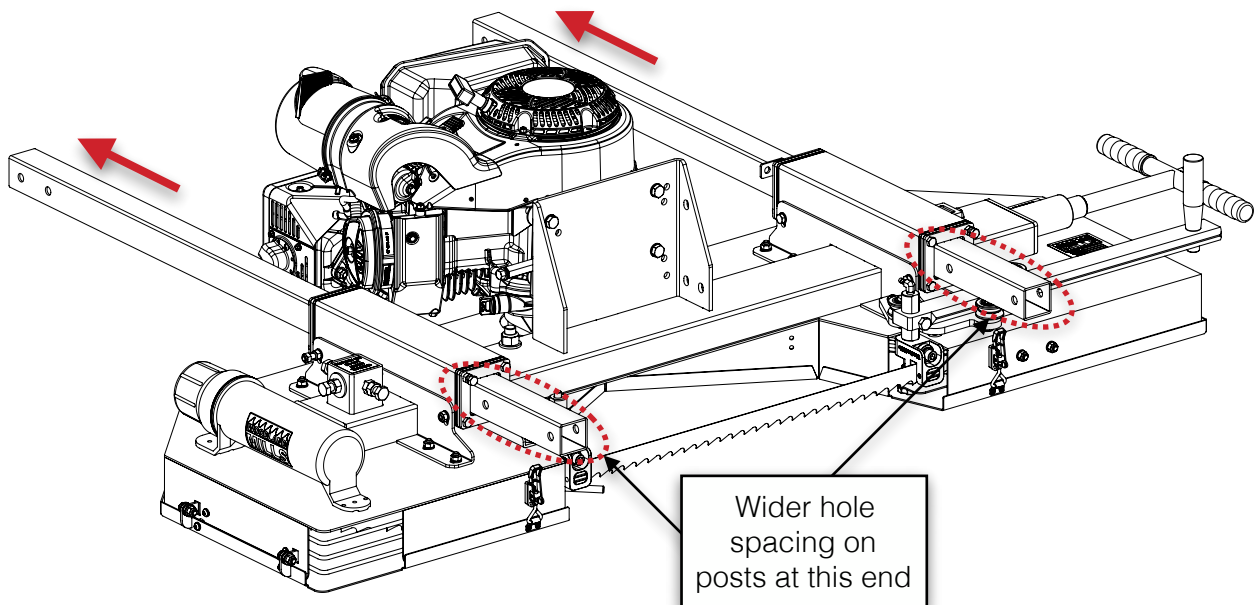




CARRIAGE LEGS

   The carriage leg sub-assemblies come loosely assembled from the factory. Final tightening of these bolts will be done in a later step. See the ***CARRIAGE LEG, WHEEL, AND SWEEPER*** exploded view for a more detailed part breakdown.

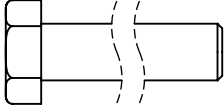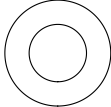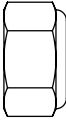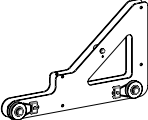4x	M12 X 80 mm Hex Bolt		4x	M12 Flat Washer	
4x	M12 Lock Nut		2x	Carriage Leg Sub-Assembly	

Attach the two (2) carriage leg sub-assemblies to the front posts with four (4) M12 X 80 mm bolts, flat washers, and lock nuts. Be sure the bolts point outward and the carriage wheels are positioned on the inside of the legs. Fully tighten these four (4) M12 bolts so that the plates are firmly attached to the posts. The posts should be pushed all the way up until the carriage leg plates contact the post sleeves.

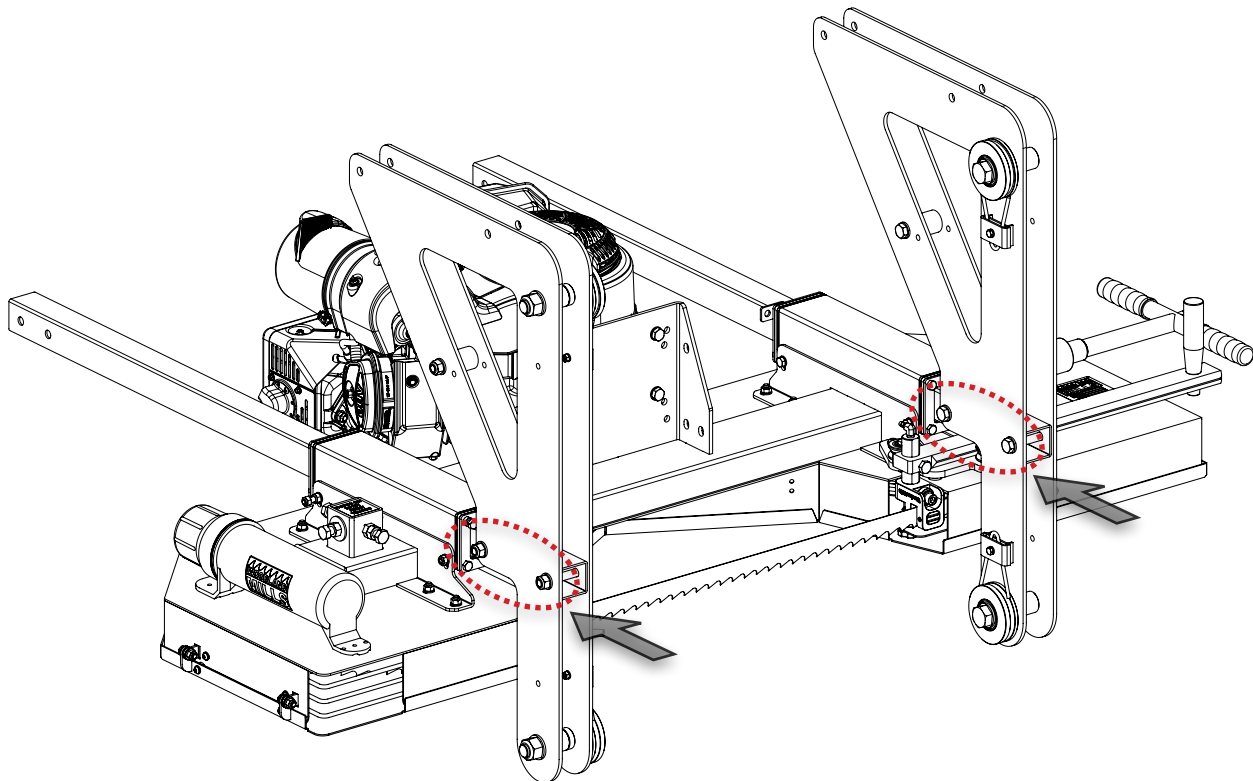






HEAD LOCK-DOWN PLATES

Woodland Mills sawmill trailer owners only

 If a Woodland Mills sawmill trailer was purchased with this sawmill, the head lock-down plates can be loosely installed prior to standing the sawhead upright. The lock-down plates come with the sawmill trailers and are not included with the sawmill.

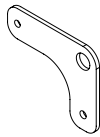8x	Head Lock-Down Plate	
----	----------------------	---

Disassemble each carriage wheel and discard the short spacers as they are no longer necessary. Assemble one (1) lock-down plate on each side of the long spacers—between the carriage legs—and then reassemble the carriage wheels. Do not fully tighten the carriage wheel bolts.

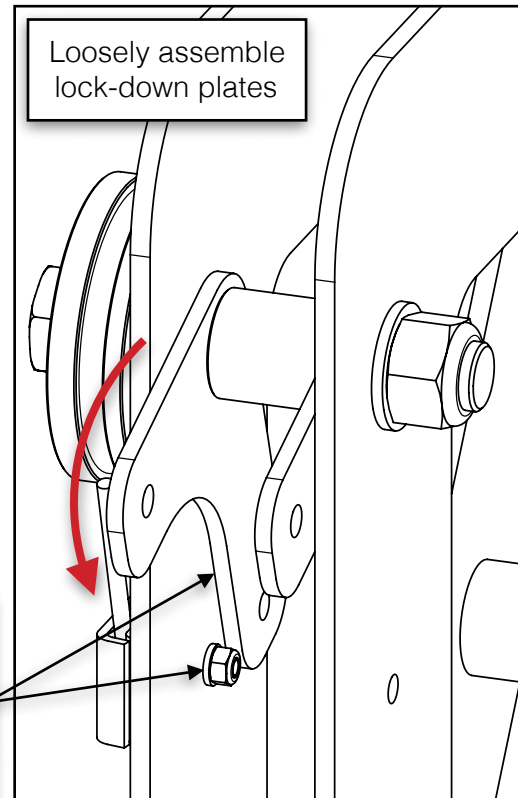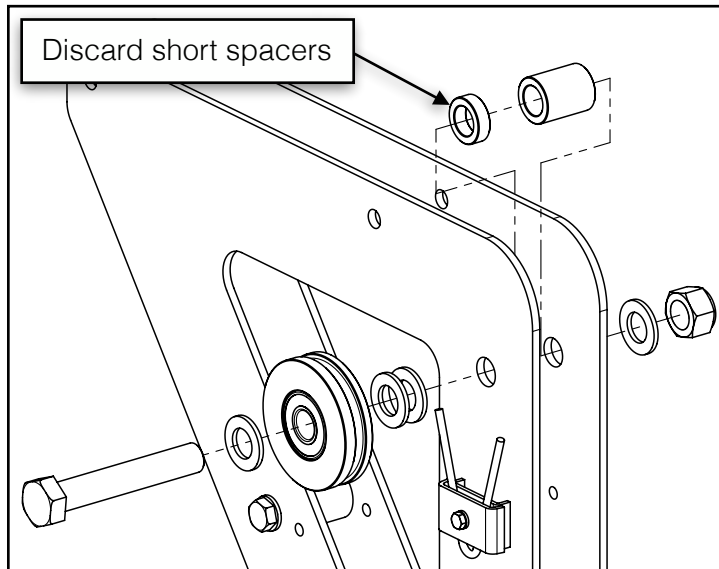


Ensure the longer lock-down plate leg will sit above the wheel sweeper nut when the sawhead is stood upright. This lets the lock-down plates swivel up inside the carriage legs avoiding possible damage until the sawhead is ready to be set on the track.

See section, **HEAD LOCK-DOWN PLATES**, in the sawmill trailer Operator Manuals to complete the lock-down plate installation once the sawmill is on the trailer.

STANDING THE SAWHEAD UPRIGHT





With the help of another person, stand the sawhead upright by rotating it around the rounded profiles at the front of the carriage legs. Do not set the sawhead on the track until instructed to do so later in the assembly process.

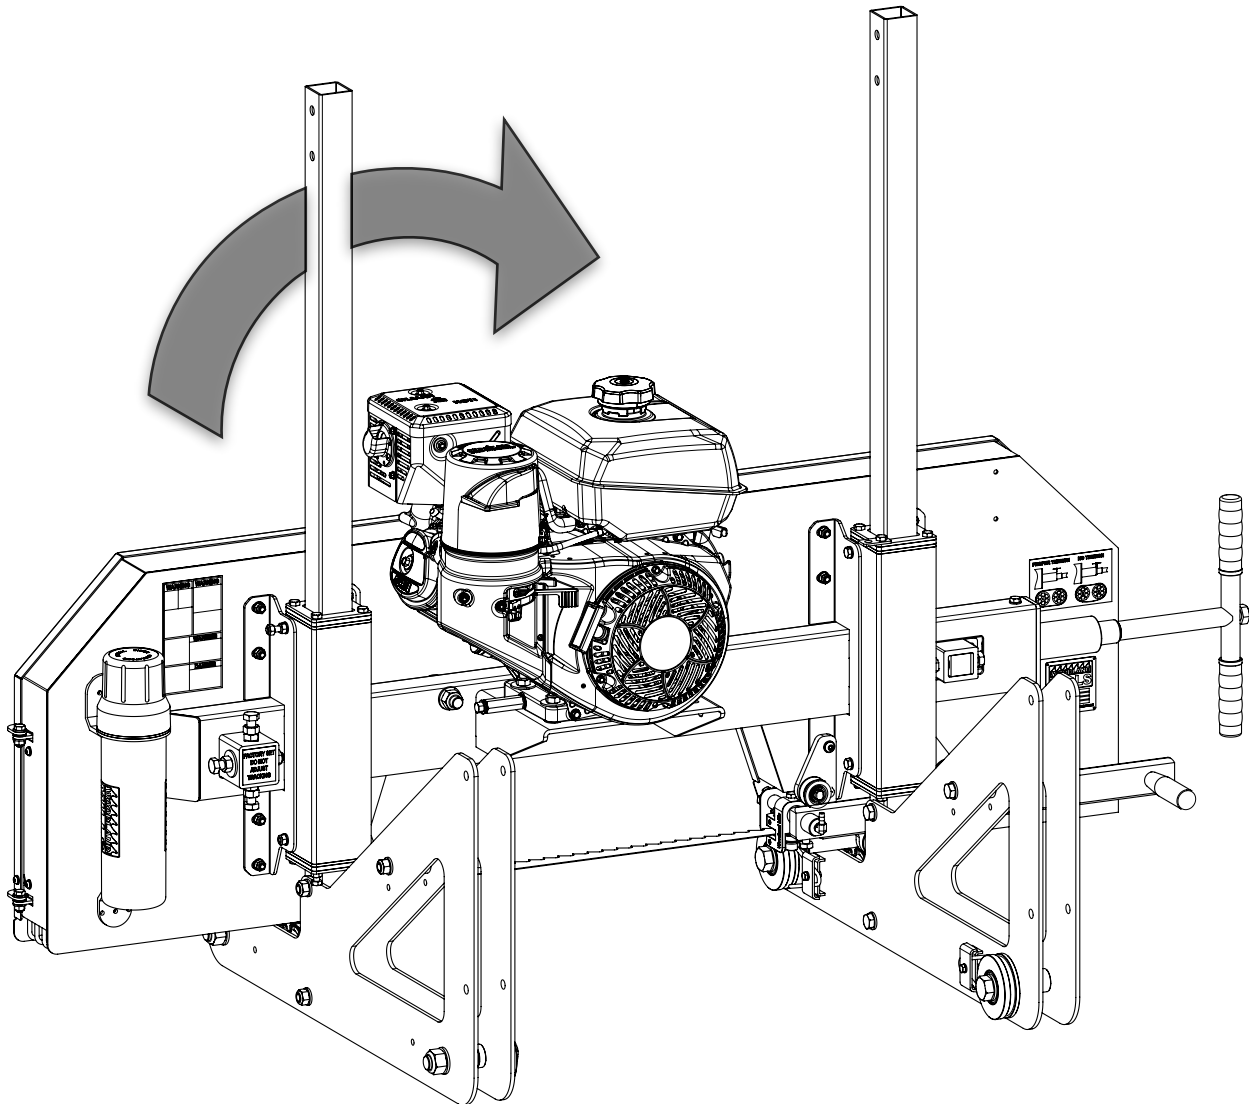




REAR POSTS

   Using the hardware listed below, attach the rear posts between the carriage leg plates using only one (1) M12 X 80 mm bolt, flat washer, and lock nut per post.







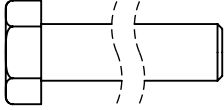
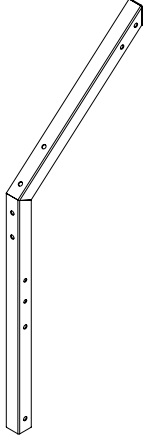
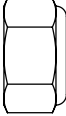
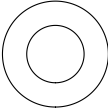
2x	M12 X 80 mm Hex Bolt		2x	Rear Post	
2x	M12 Lock Nut				
2x	M12 Flat Washer				

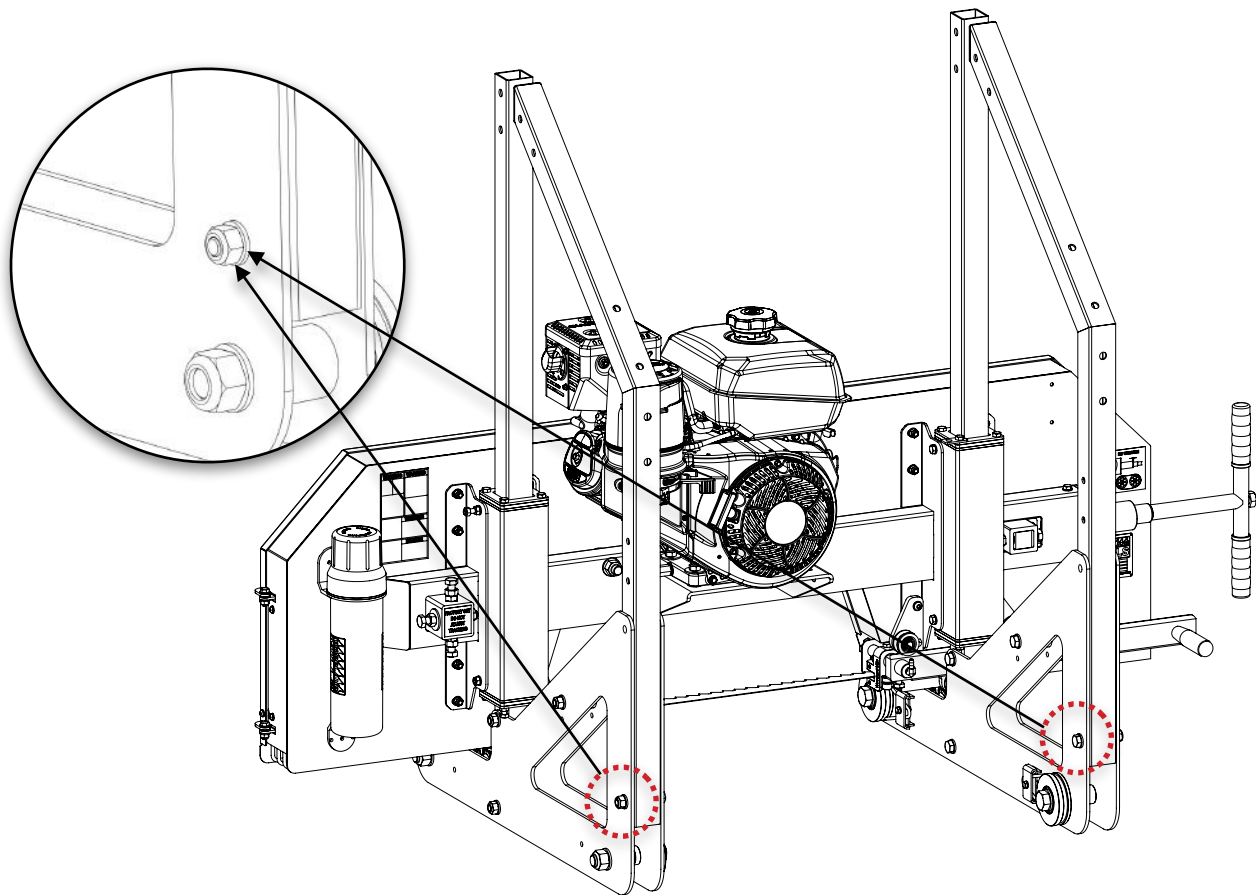




CROSS BEAM

        With the hardware listed below, assemble the cross beam to the carriage posts.

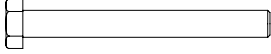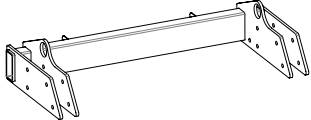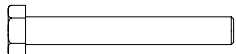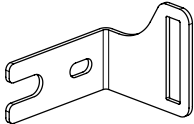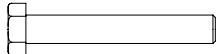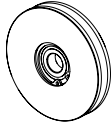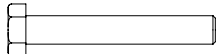2x	M12 X 110 mm Hex Bolt		1x	Cross Beam	
6x	M12 X 90 mm Hex Bolt		1x	Log Scale Indicator Bracket	
2x	M12 X 80 mm Hex Bolt		2x	Pulley	
1x	M12 X 35 mm Hex Bolt		2x	Spacer [12 mm Lg]	
11x	M12 Lock Nut				
22x	M12 Flat Washer				

With the help of a second person, slide the cross beam over the carriage posts. Use six (6) M12 X 90 mm bolts and two (2) M12 X 110 mm bolts (with pulleys and spacers) to fasten it in place. Be sure to install the log scale indicator bracket on the right-side behind the pulley. Install all bolts so they are pointing outward. Use an M12 flat washer under every bolt head and lock nut.




Finally, install two (2) M12 X 80 mm bolts at the top of each carriage leg. Do *not* fully tighten these bolts at this time.

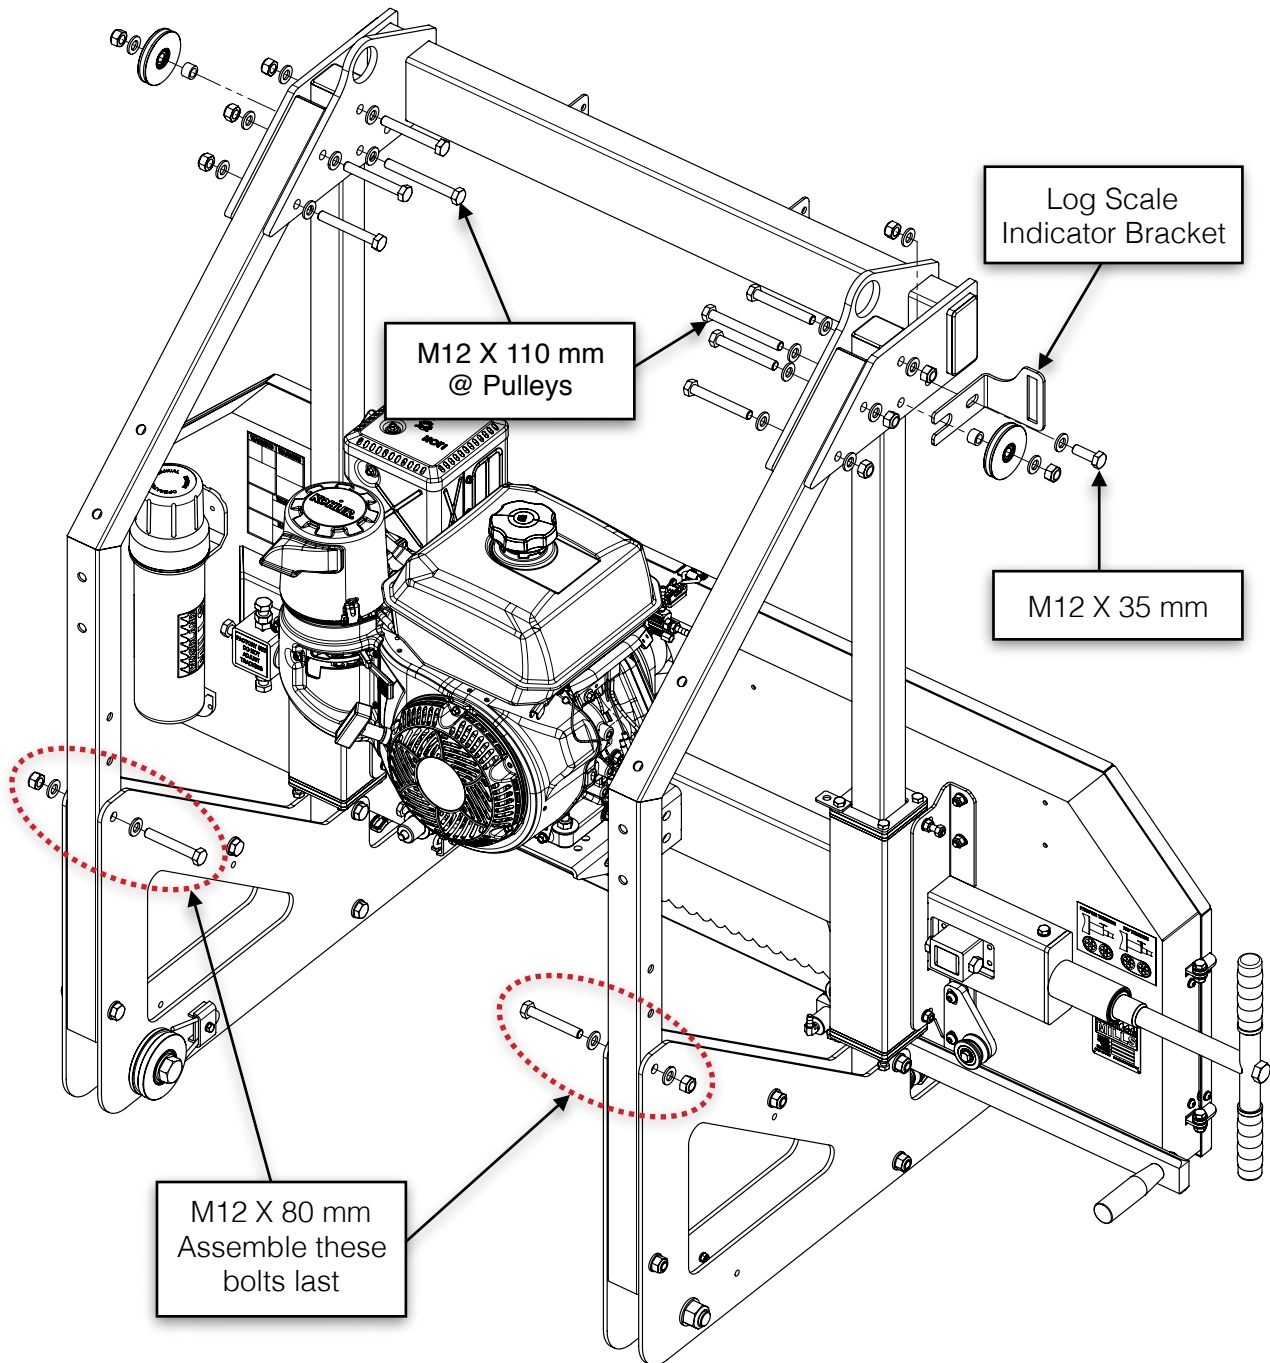





LUBRICATION TANK

 With the hardware listed below, assemble the lubrication tank to the front of the cross beam.

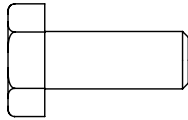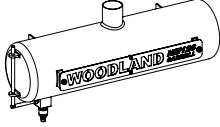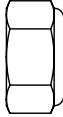4x	M8 X 16 mm Hex Bolt		1x	Lubrication Tank	
4x	M8 Lock Nut				






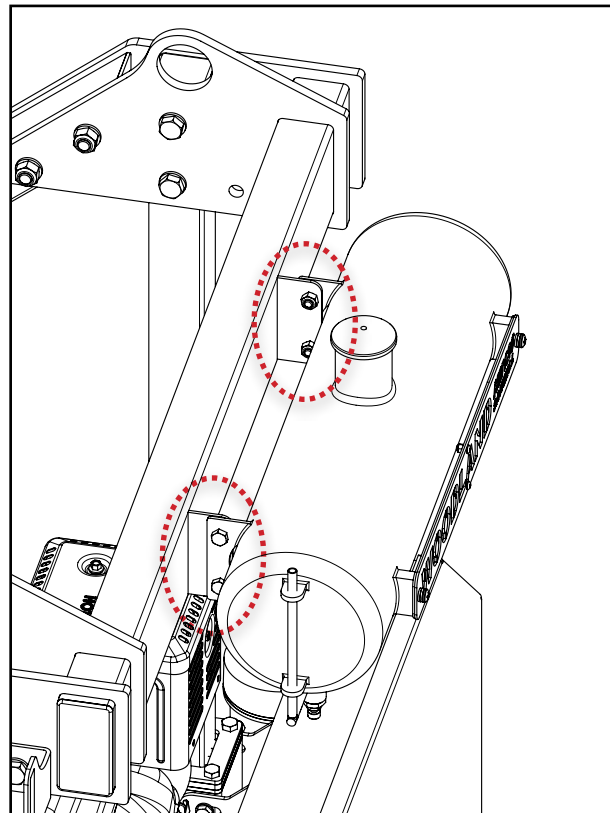
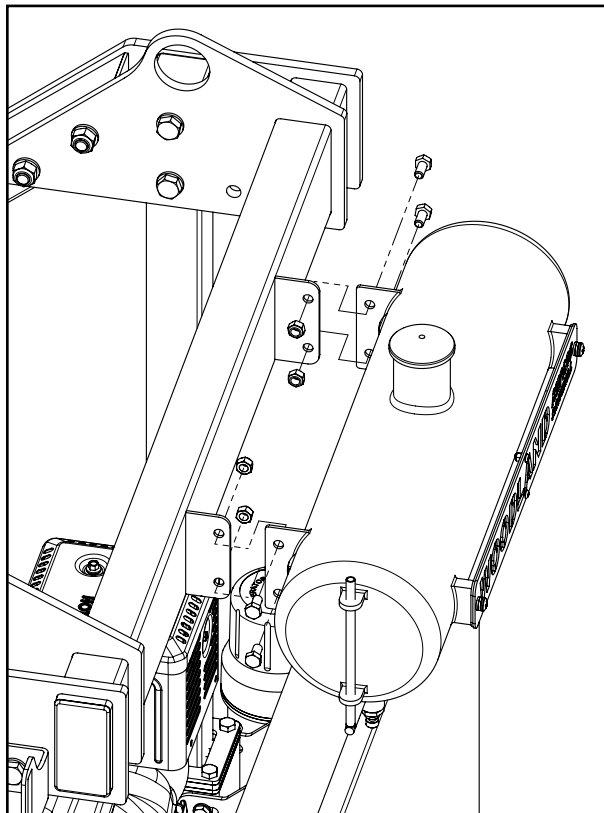




Assemble the lubrication tank to the cross beam with four (4) M8 X 16 mm bolts and lock nuts. Ensure the bolts point inward.






      DASHBOARD & HOUR METER

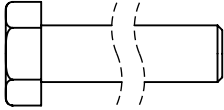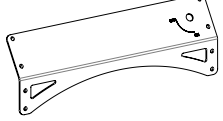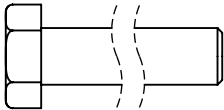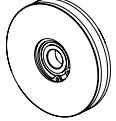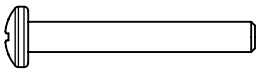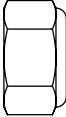  
With the hardware listed below, assemble the dashboard to the rear carriage posts.

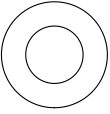1x	M12 X 100 mm Hex Bolt		1x	Dashboard	
5x	M12 X 80 mm Hex Bolt		1x	Pulley	
2x	M4 X 30 mm Pan Head Screw		1x	Spacer [12 mm Lg]	
6x	M12 Lock Nut		1x	Hour Meter	
2x	M4 Lock Nut				
12x	M12 Flat Washer				
4x	M4 Flat Washer				

Assemble the dashboard to the rear carriage posts with five (5) M12 X 80 mm bolts and one (1) M12 X 100 mm bolt (with pulley and spacer) as illustrated on the next page. Use an M12 flat washer under every bolt head and lock nut. Do *not* fully tighten these bolts at this time.

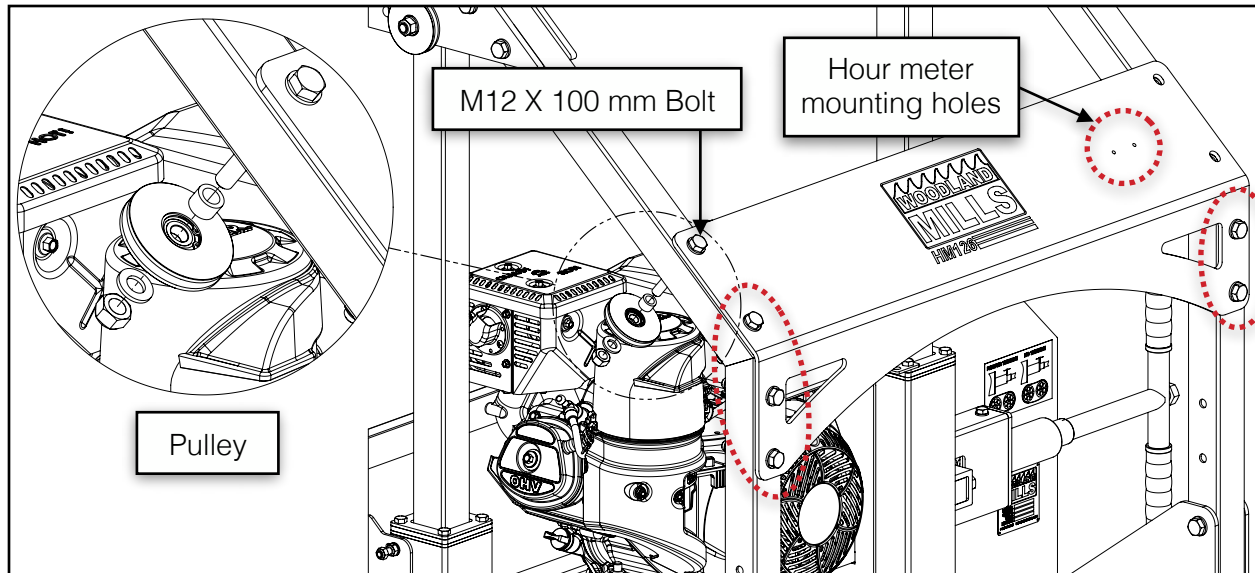

Assemble the hour meter to the right-side of the dashboard through the two (2) small holes. Use two (2) M4 X 30 mm pan head screws, four (4) flat washers (2 per screw), and two (2) lock nuts. Once the entire sawmill has been assembled, snip the wire loop at the top of the meter with either a razor or sharp knife. This will activate the meter to start measuring the vibration of the machine, recording the hours of use on the engine.










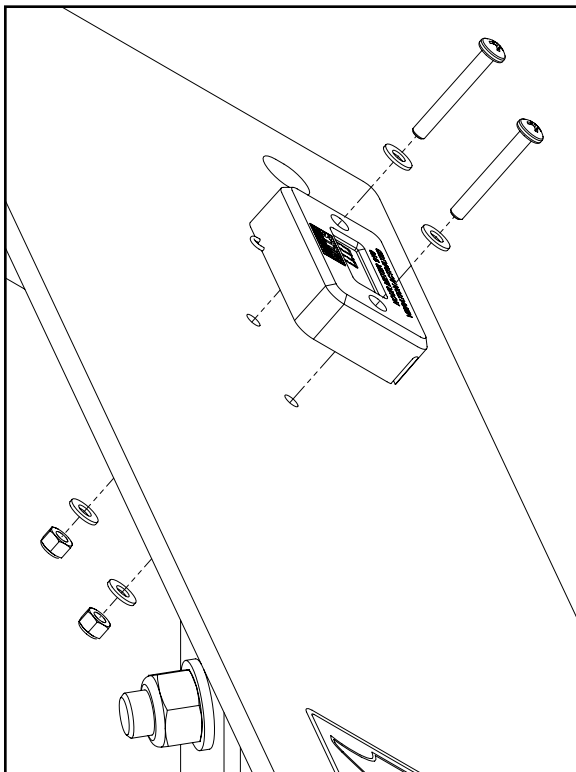


Cut wire loop on hour meter after sawmill is assembled



LIFT MECHANISM

        
 
With the hardware listed below, assemble the lift mechanism to the carriage.

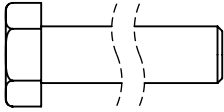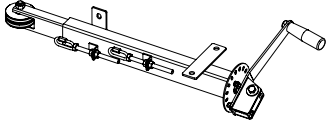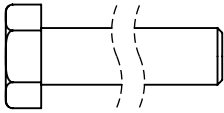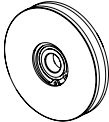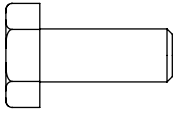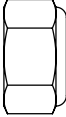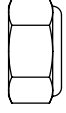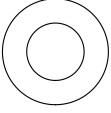1x	M12 X 120 mm Hex Bolt		1x	Lift Mechanism Sub-Assembly	
1x	M12 X 80 mm Hex Bolt		2x	Pulley	
1x	M10 X 25 mm Hex Bolt		1x	Spacer [12 mm Lg]	
2x	M12 Lock Nut		1x	Spacer [5 mm Lg]	
1x	M10 Lock Nut				
4x	M12 Flat Washer				

Attach the lift mechanism assembly to the underside of the right-rear carriage post as shown on the next page.

Use one (1) M12 X 120 mm bolt (including the pulleys and 2 spacers—5 mm spacer *between* pulleys) and one (1) M12 X 80 mm bolt. Use an M12 flat washer under each bolt head and lock nut. Fasten the centre tab to the inside of the dashboard using an M10 X 25 mm bolt and nut.



Do *not* fully tighten these bolts at this time.

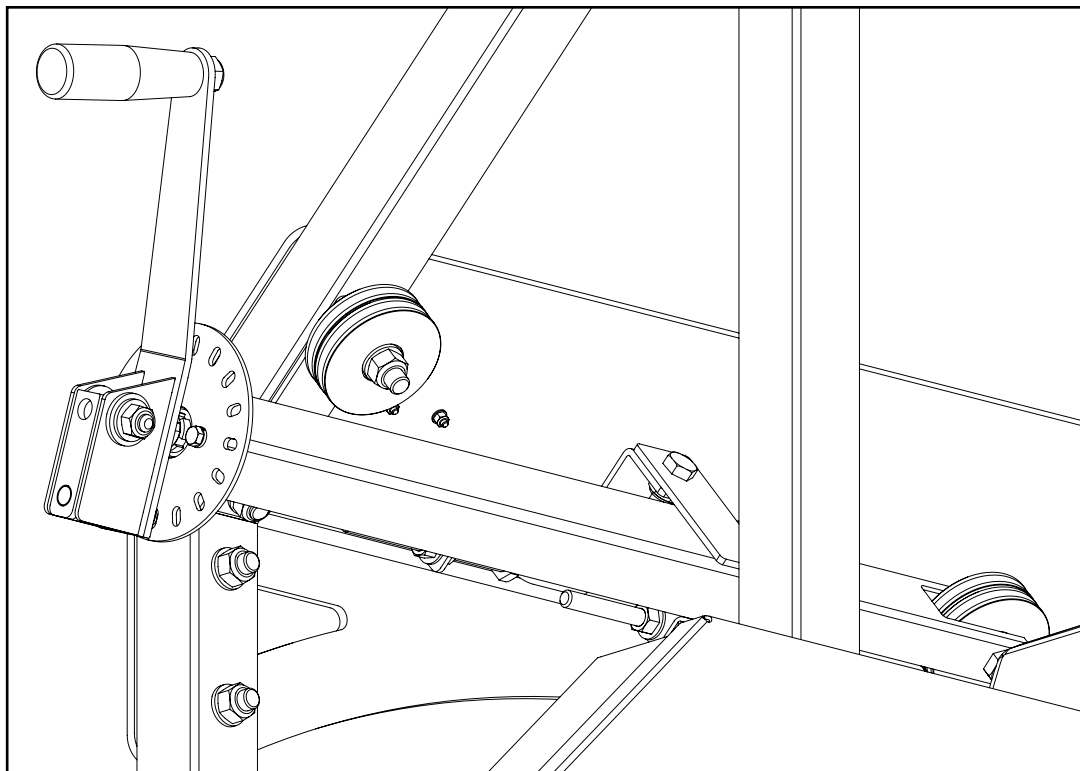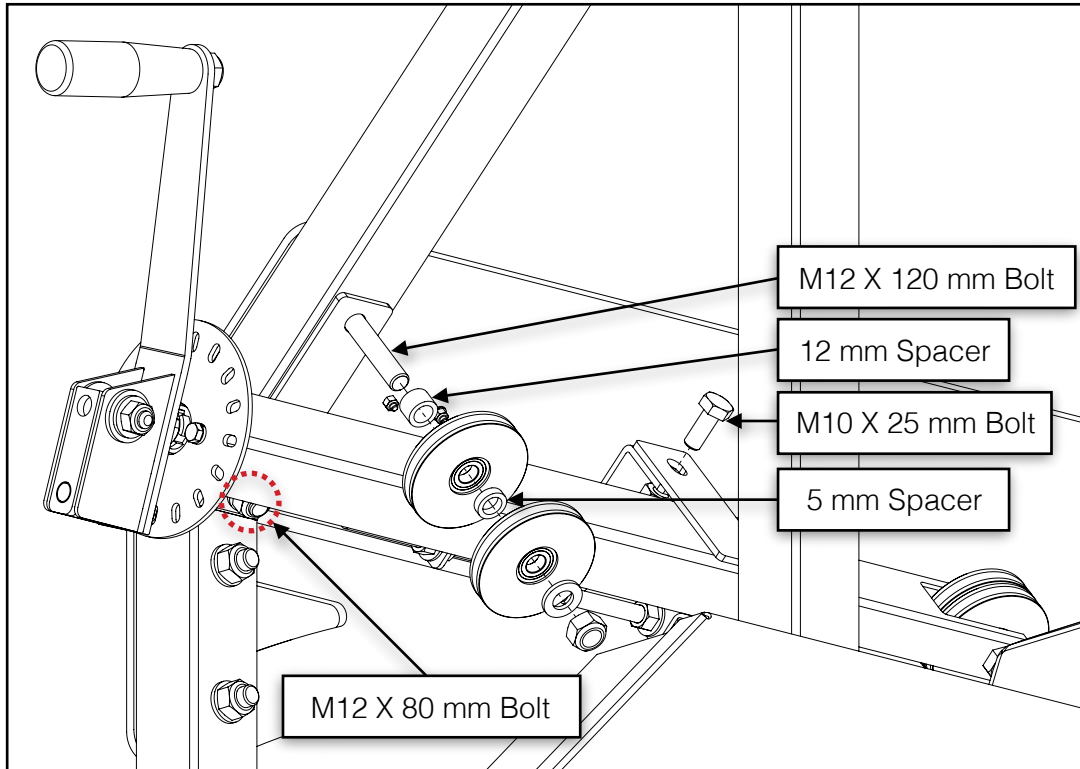




LIFT CABLE ROUTING

  Route the lift cables listed below.

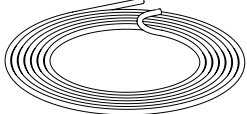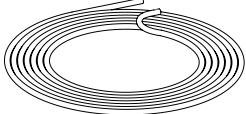
1x	Lift Cable A [Right Side]		1x	Lift Cable B [Left Side]	
----	------------------------------	---	----	-----------------------------	---

The wire rope lift cables come coiled and both are assembled at one end to the back beam post sleeves. The lengths are specific to each side so do not swap them.


Route lift cable A (right side) as shown below. [Dashboard removed from views for clarity.]

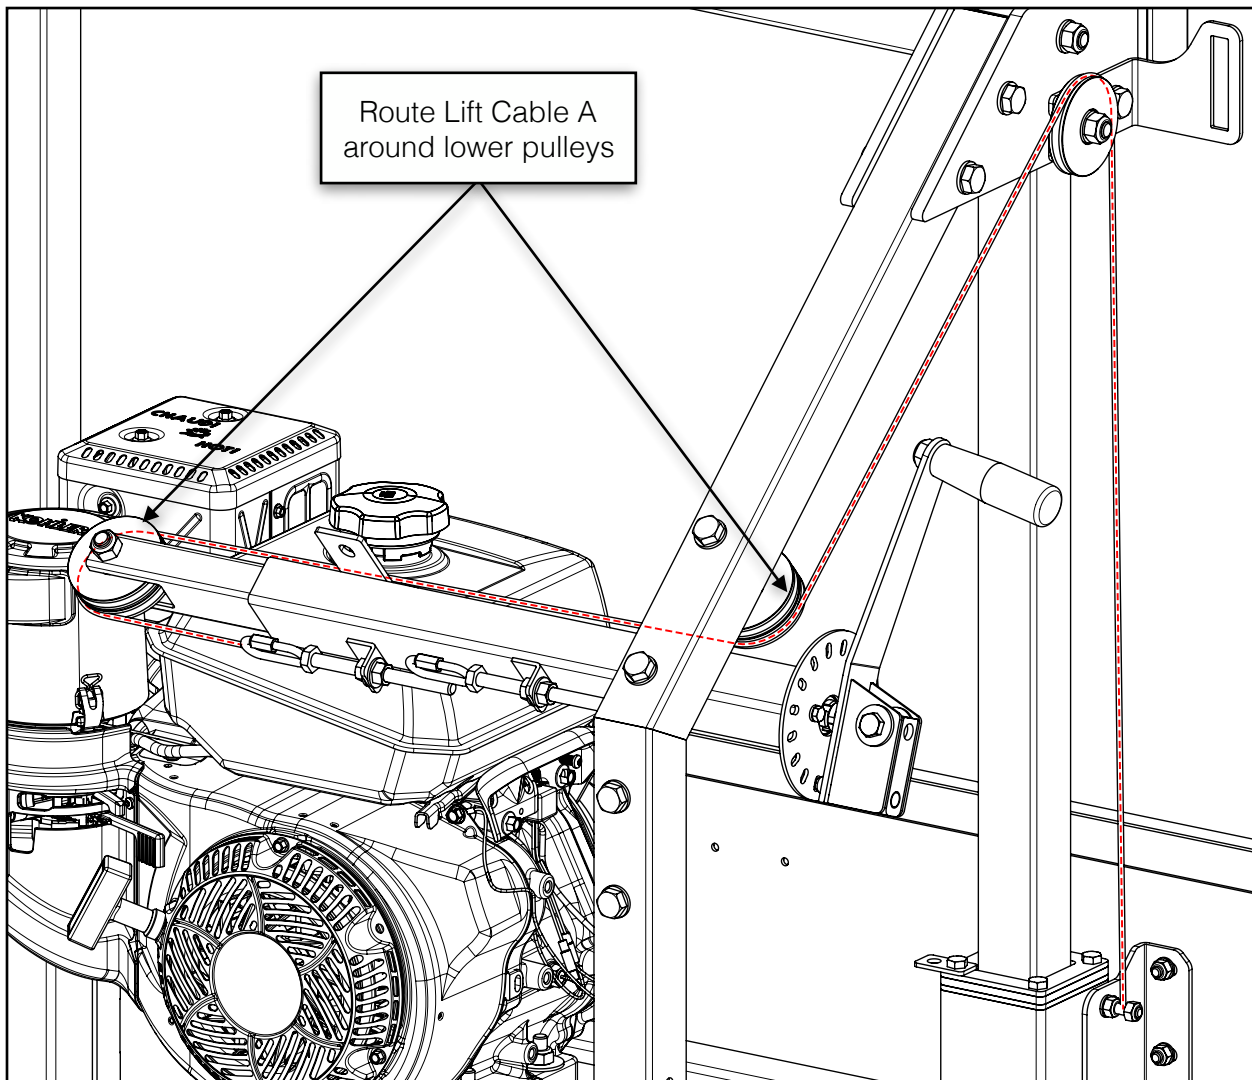

Route lift cable B (left side) as shown below. [Dashboard and lift cable A removed from view for clarity.]

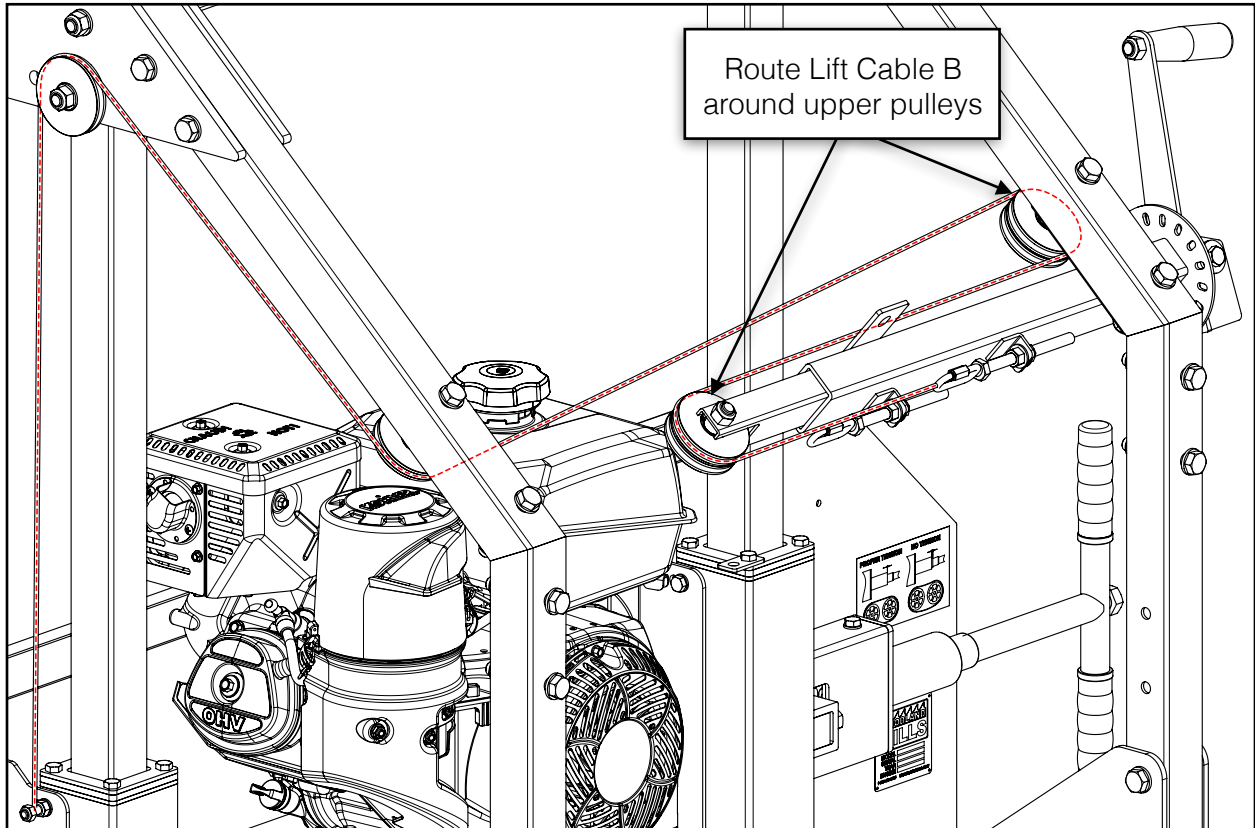

 
 
 

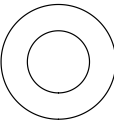 

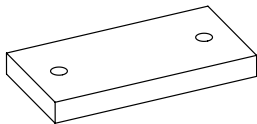
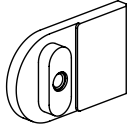
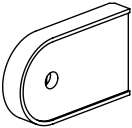
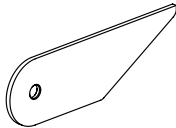
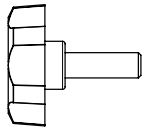
Be sure to securely tighten the oval chain link with a wrench after the cable loop ends have been attached.

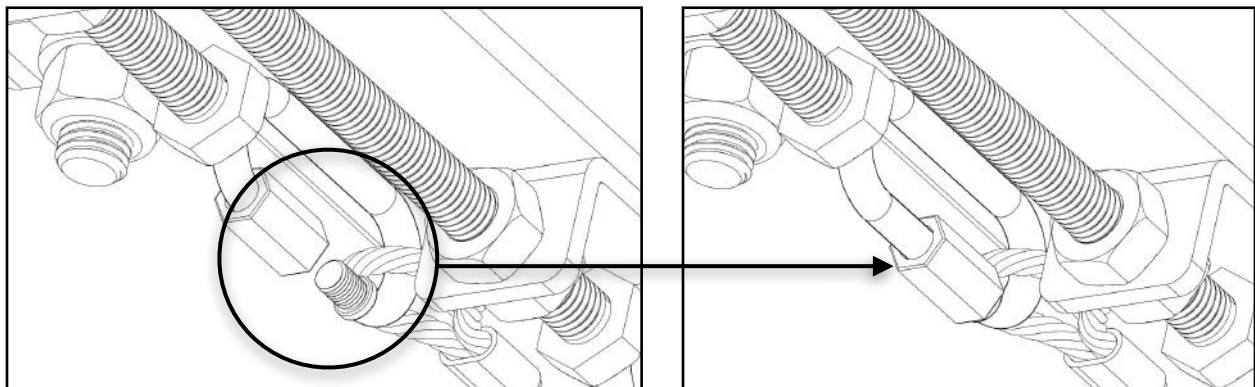




LOG SCALE

With the hardware listed below, assemble the log scale components.

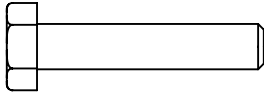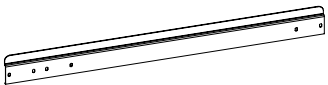2x	M6 X 22 mm Hex Bolt		1x	Log Scale Bracket	
2x	M6 Lock Nut		1x	Magnetic Scale [White]	
2x	M6 Flat Washer		1x	Magnetic Scale [Yellow]	
			1x	Log Scale Bracket Spacer Plate	
			1x	Log Scale Guide	
			1x	Lock Scale Locking Plate	
			1x	Log Scale Indicator Arrow	
			1x	M8 X 25 mm Knob	




Bolt the log scale bracket and spacer plate to the band wheel housing with two (2) M6 X 22 mm bolts, flat washers, and lock nuts as shown below.

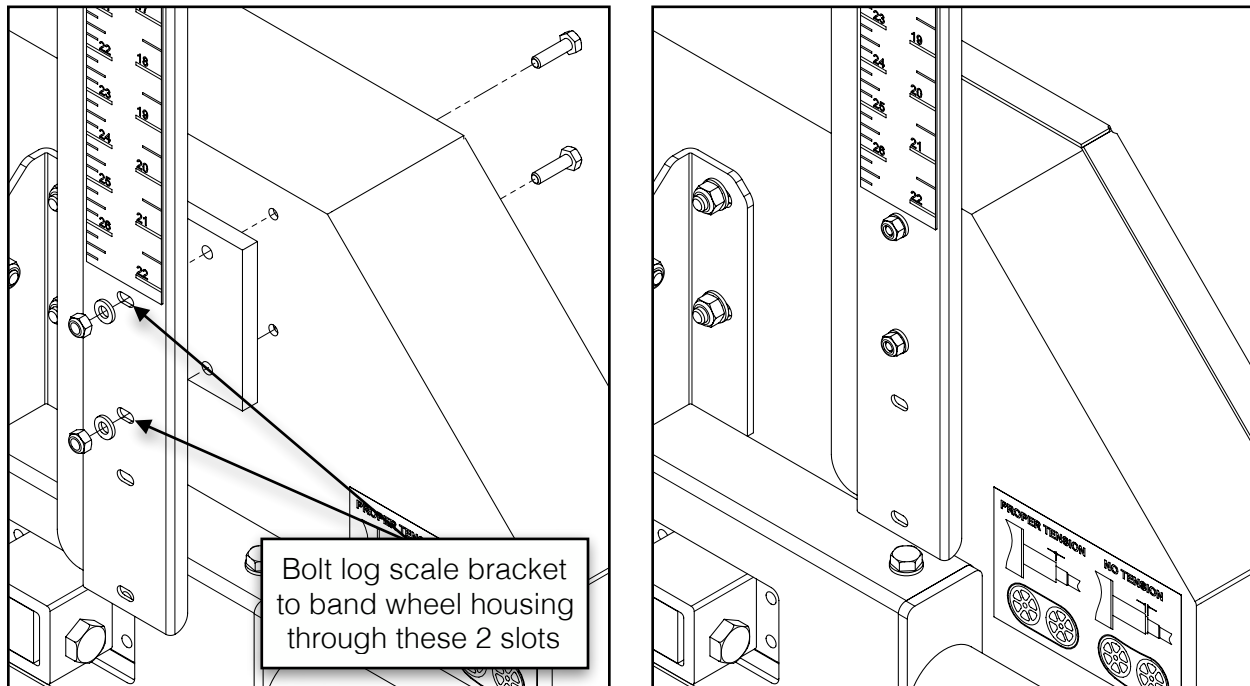

Note: the sawmill comes with two (2) different magnetic scales: one yellow, one white. Each with two different graduations down the left and right sides.



Yellow Scale

The left side is an inch scale, with the large graduations spaced at 1 in. The right side is "four quarter" (4/4) which mills the lumber $\frac{1}{8}$ in oversize to allow for finish planing on each side after drying.

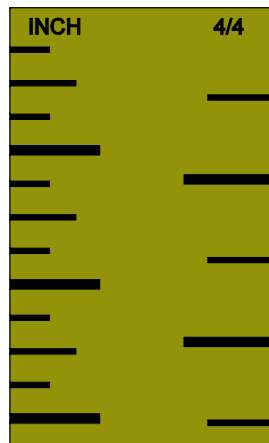

White Scale


The left side is an inch scale, with the large graduations spaced at 1 in + blade kerf. The right side is also an inch scale, except the large graduations are spaced at 2 in + blade kerf.

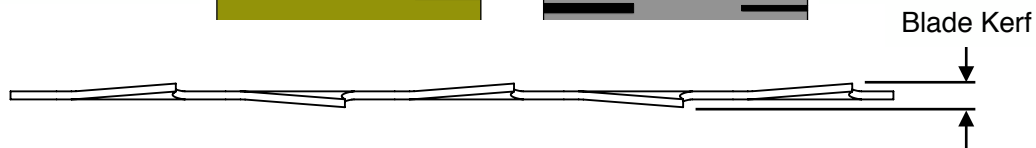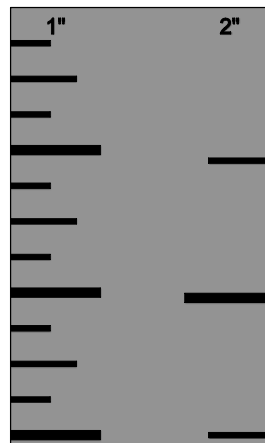


The graduations on the white magnetic scale make allowances for the blade kerf. On the yellow magnetic scale the kerf is not accounted for in the measurements.



Assemble the guide, locking plate, and indicator arrow to the log scale indicator bracket using the M8 threaded knob. Adjust the position of the indicator bracket forwards or backwards if the guide and locking plate bind on the log scale bracket as the sawhead is raised and lowered.

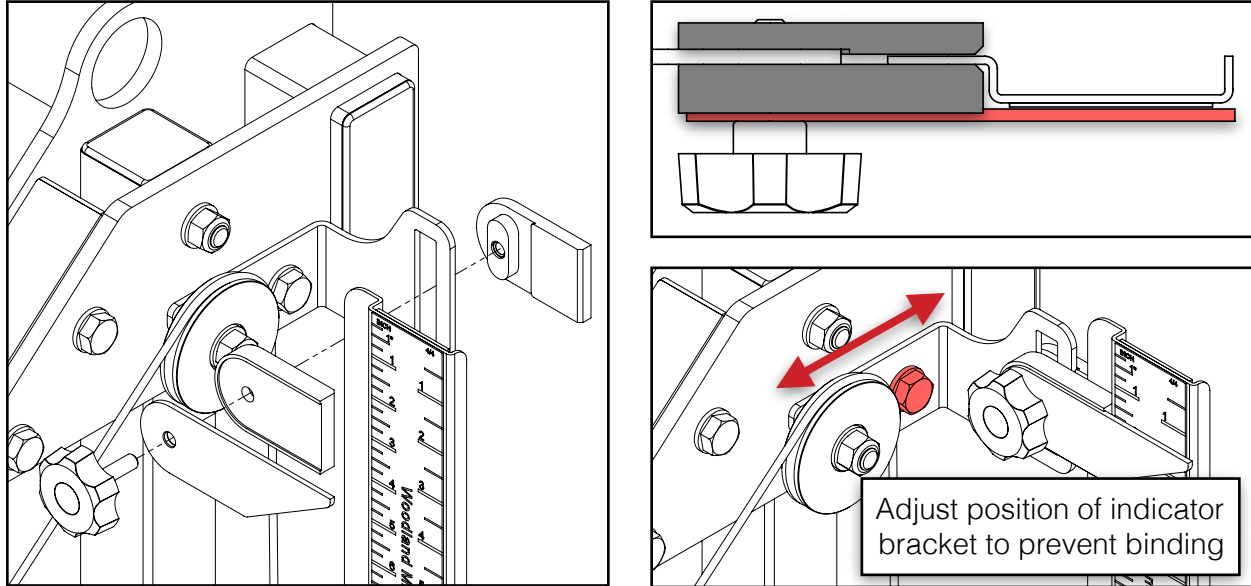





Store the other magnetic scale on the front side of the log scale bracket when not in use.

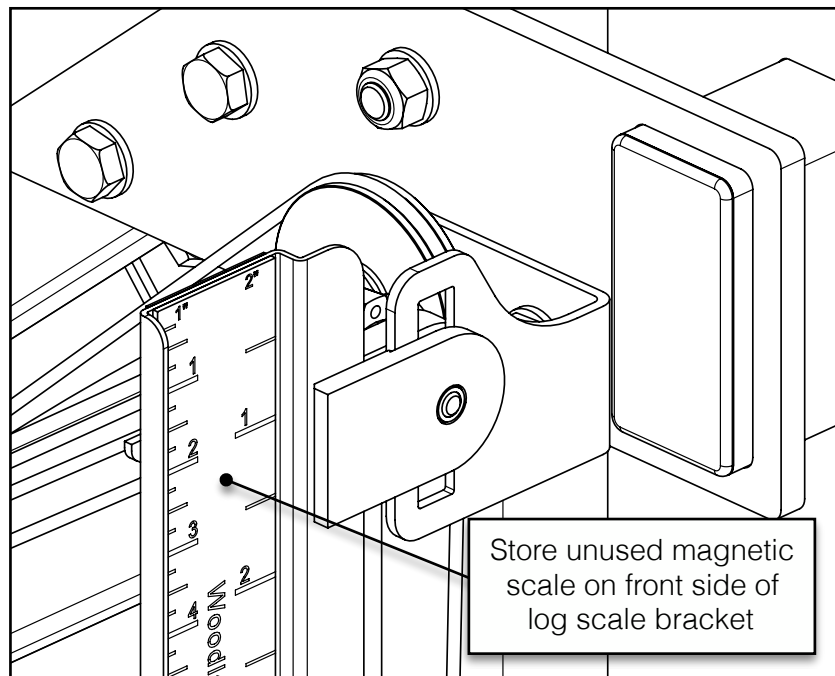




PUSH HANDLE

   
With the hardware listed below, assemble the push handle to the right rear carriage leg.

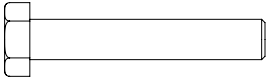2x	M10 X 70 mm Flanged Hex Bolt		2x	M10 Flat Washer	
2x	M10 Lock Nut		1x	Push Handle	

The push handle is installed in an upward position when the sawmill is ground-mounted (**below-left**). Or it can be rotated 180° if the sawmill is high above the ground on a sawmill trailer or on a purpose-built stand (**below-right**).

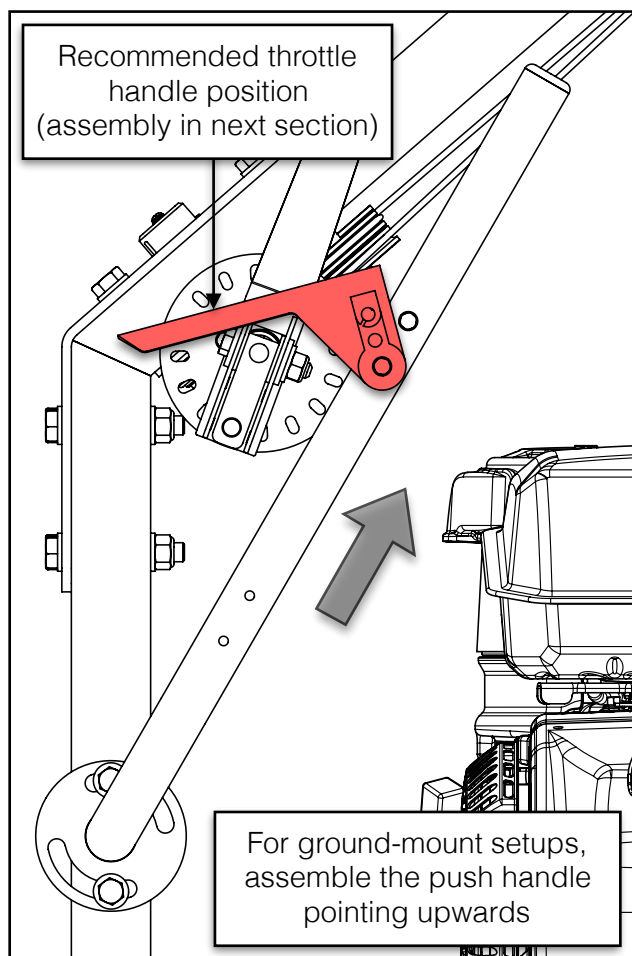


Ground-Mount Push Handle and Throttle Handle Recommended Position

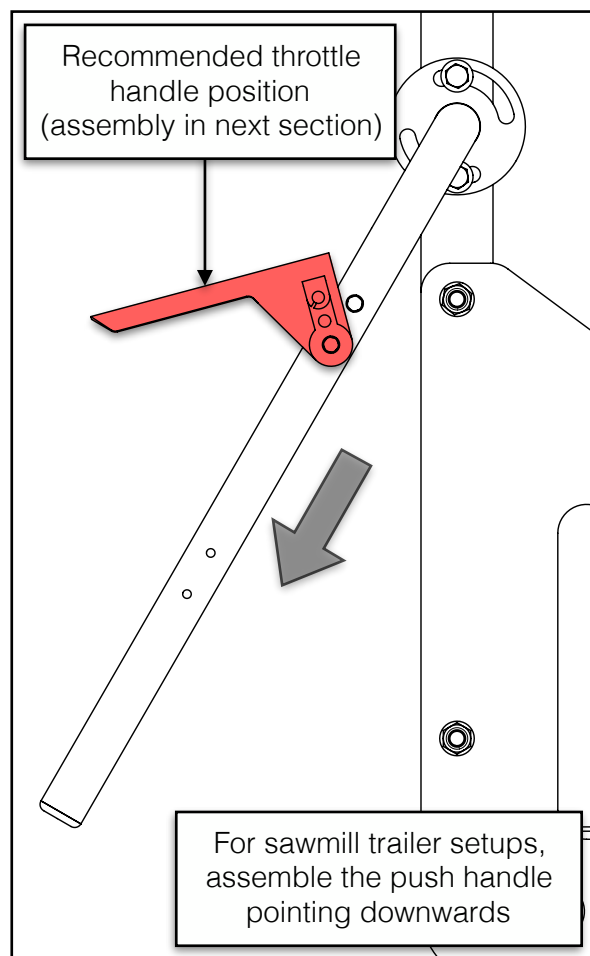

Sawmill Trailer Push Handle and Throttle Handle Recommended Position

When a desired push handle orientation has been decided upon, attach the push handle to the side of the post using two (2) M12 X 70 mm bolts, flat washers, and lock nuts as shown below. Fully tighten these bolts.


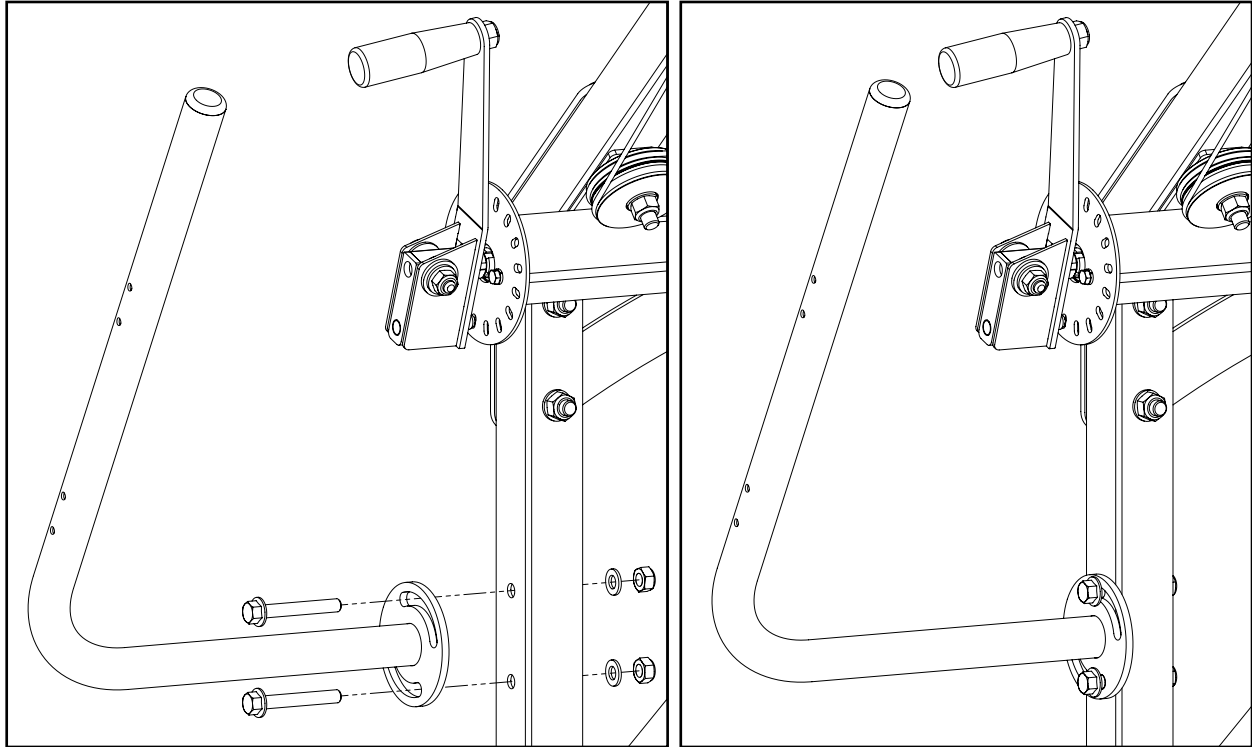



The push handle can be adjusted/rotated forwards or backwards to suit the ergonomics of the operator in either ground-mount or sawmill trailer configurations.




THROTTLE HANDLE AND CABLE

 Use the hardware listed below to assemble the throttle handle to the push handle and route the throttle cable to the engine.

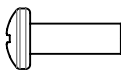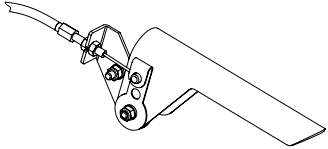1x	M4 X 12 mm Phillips Pan Head Screw		1x	Throttle Handle Assembly	
1x	Throttle Cable Barrel Clamp				

The throttle handle comes loosely pre-assembled. The hardware needs to be unthreaded from the throttle handle prior to assembly. There are two (2) M6 hex bolts, two (2) lock nuts, and six (6) flat washers.


Assemble the throttle handle to the uppermost pair of holes in the push handle.

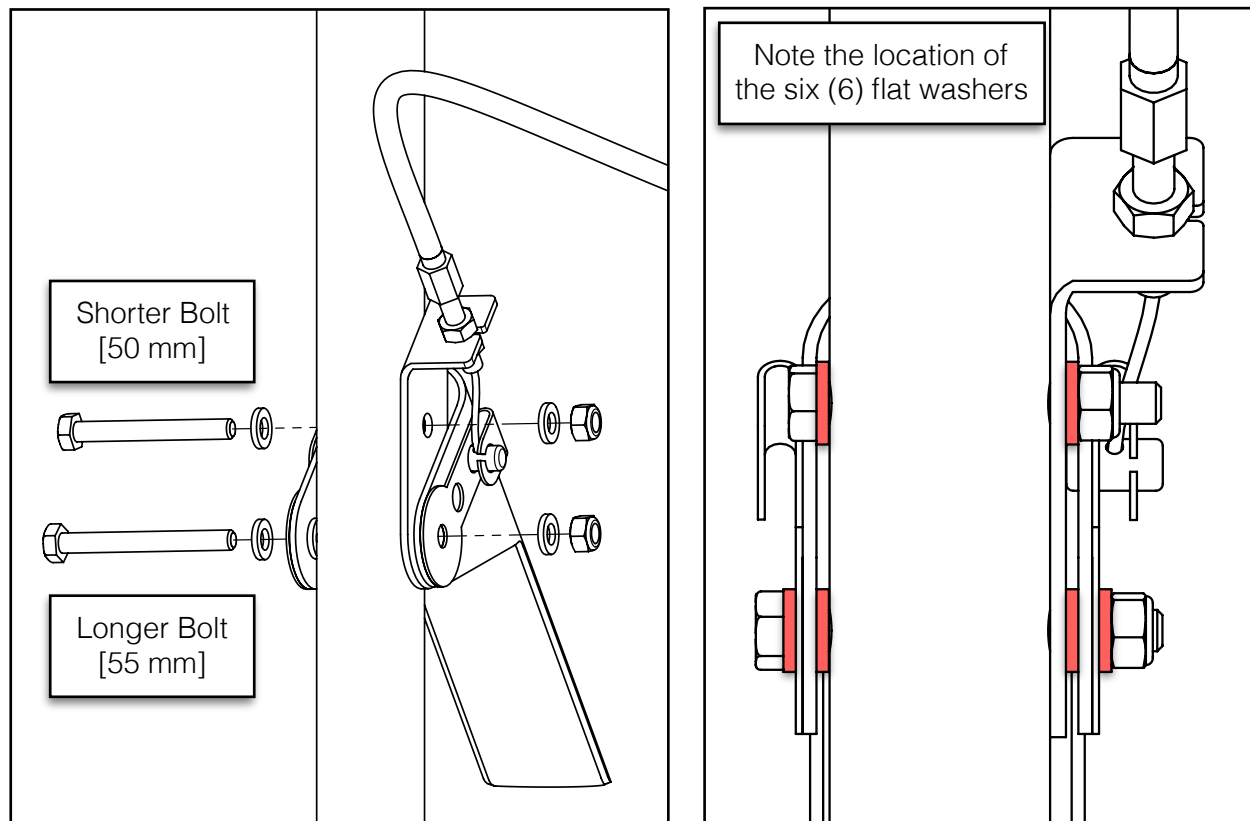




With the throttle lever in the idle position (fully open), route the cable between the log scale bracket and the front-right carriage post. Pass the cable through the thimble in the auto-lube bracket and pull the unsheathed portion of the cable through the hole in the actuator tab, then to the engine.

Next, route the unsheathed end of the cable through the hole in the barrel clamp, pull it tight while ensuring the throttle handle is still fully open, and then tighten the M4 Phillips pan head screw to secure it in place. This will take the slack out of the cable.

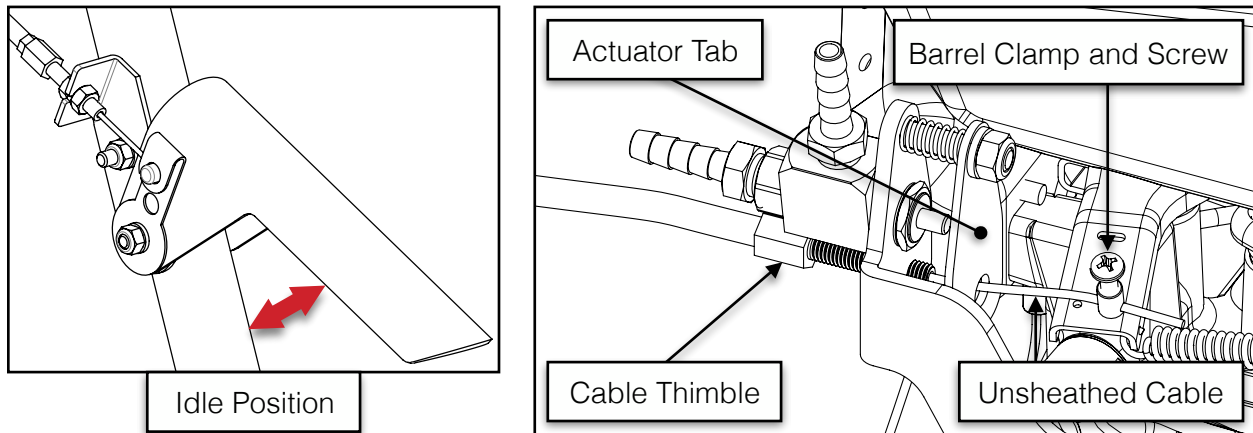




The assembled throttle handle and routed cable should now match the image below.

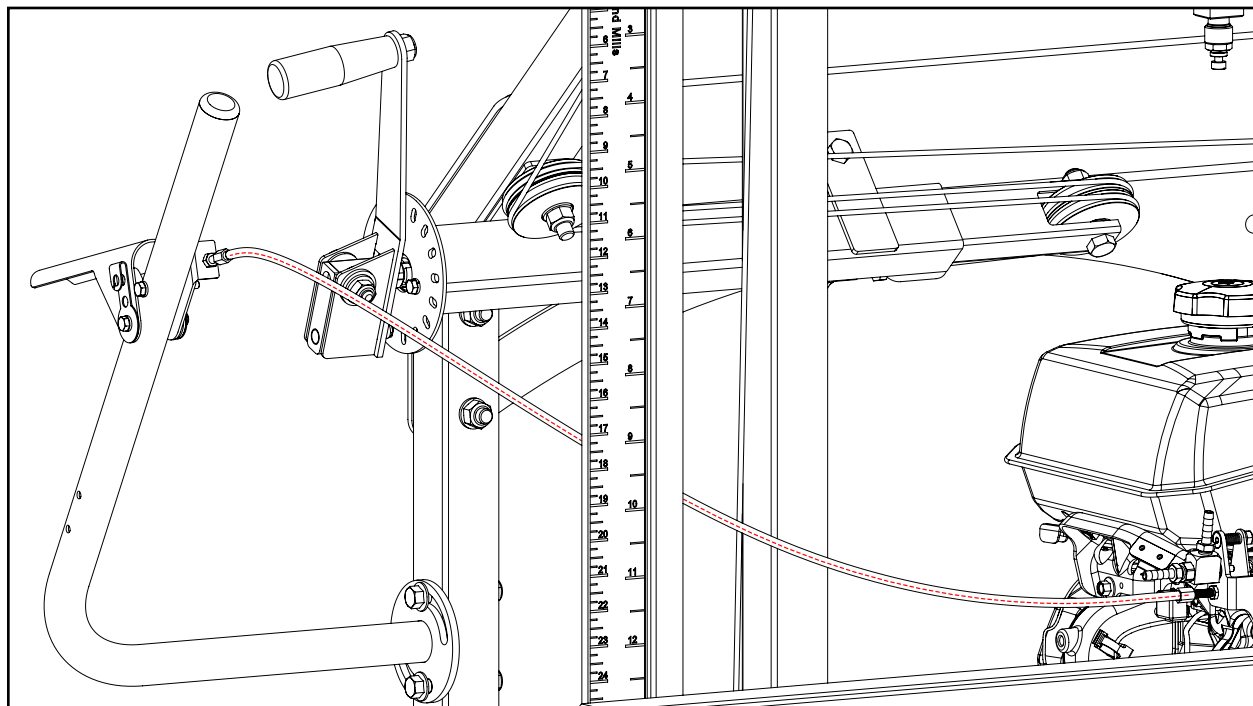






BAND WHEEL DOOR LATCHES

  Using the hardware listed below, assemble the two (2) bottom band wheel door latches.

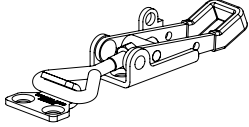8x	M4 X 10 mm Phillips Flat Head Screw		2x	Latch	
4x	M4 Lock Nut				



Use two (2) M4 X 10 mm flat head screws per latch. Assemble the latches to the pre-installed spacers on the bottom of the band wheel housing. On each band wheel door, install the hook-shaped catch using two (2) M4 X 10 mm flat head screws with lock nuts.

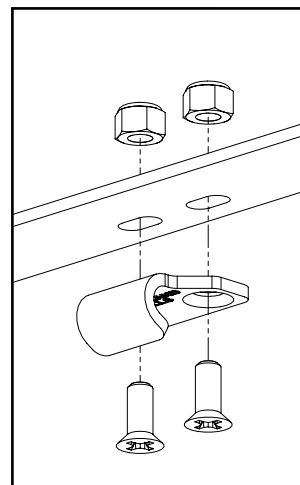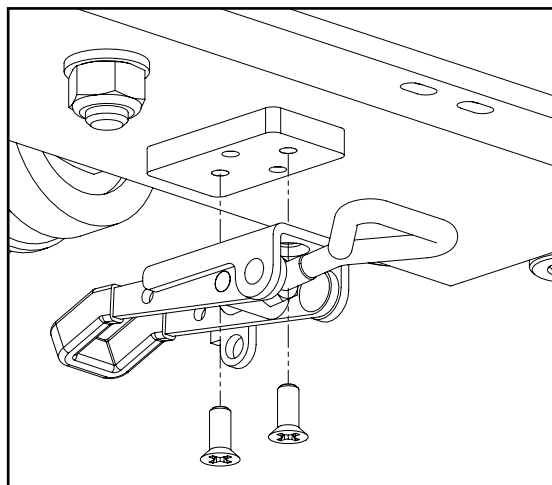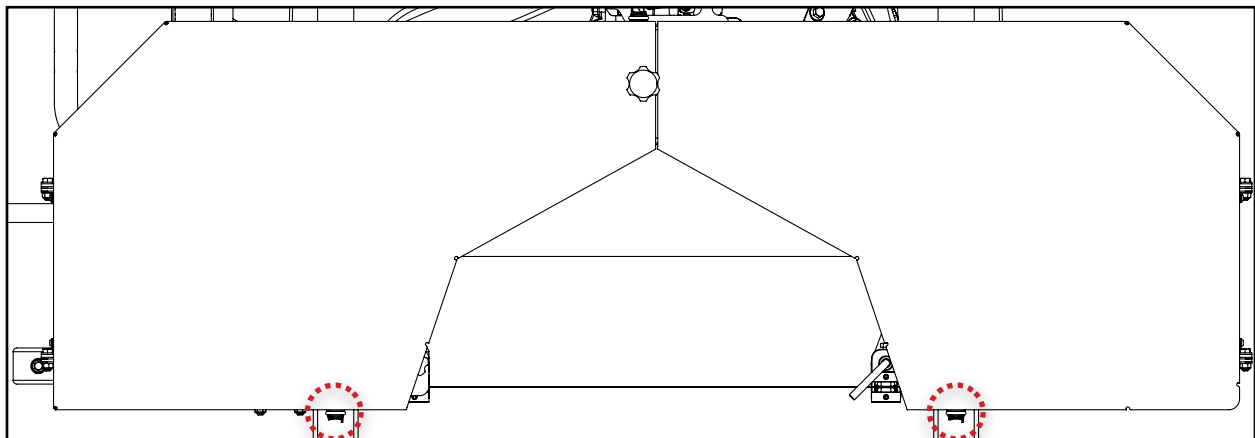





LUBRICATION TUBING

Use the tubing listed in the table below to complete the routing for the lubrication system.

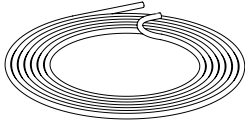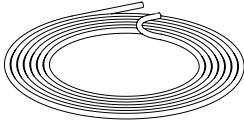1x	Tubing: Tank-to-Valve [Short]		1x	Tubing: Valve-to-Guide Block [Long]	
----	-------------------------------	---	----	-------------------------------------	---

Route the shorter *tank-to-valve* tubing from the blue ring fitting on the tank to the vertical barbed fitting on the auto-lube valve.


Route the longer *valve-to-guide block* tubing from the horizontal barbed fitting on the auto-lube valve, down through the bracket on the post sleeve, then to either the barbed fitting (14 hp) or the copper drip nozzle (9.5 hp) on the guide block holder shaft.

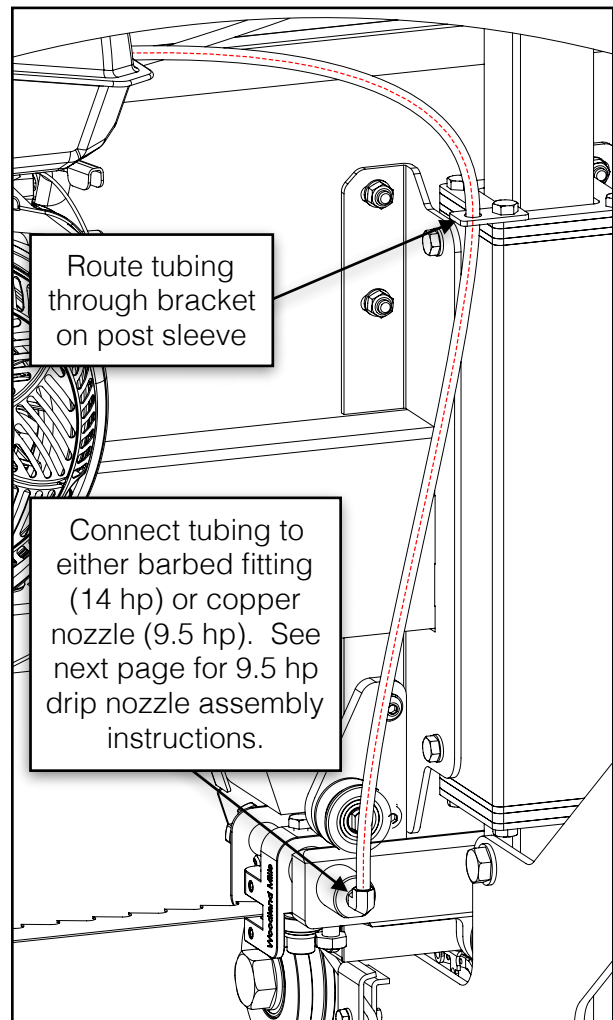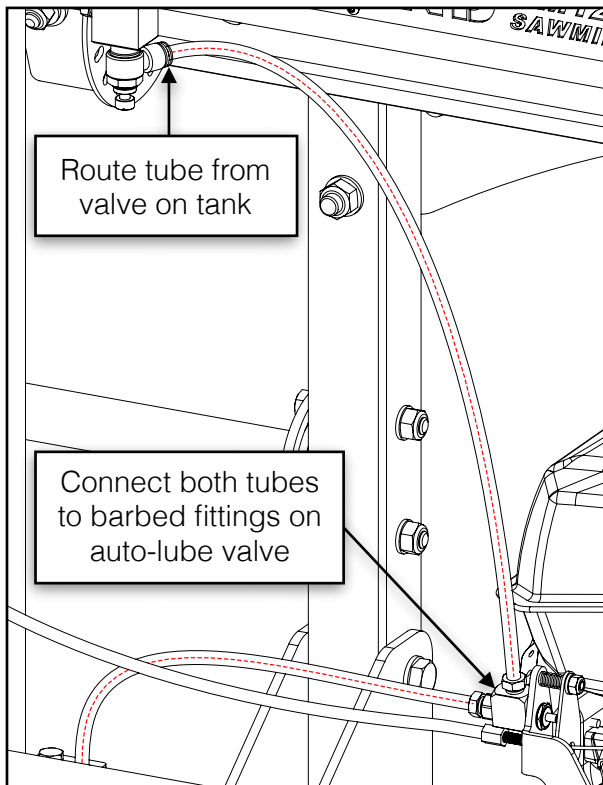





**** For 9.5 horsepower models only. However, if the optional adjustable blade guide kit was purchased for the 9.5 hp sawmill, ignore these steps. ****

The copper drip nozzle comes assembled to the shorter *valve-to-guide-block* tubing. Remove the tubing from the copper drip nozzle and assemble it into the *follower-side* guide block holder as shown below. Other sawmill components have been removed for clarity.

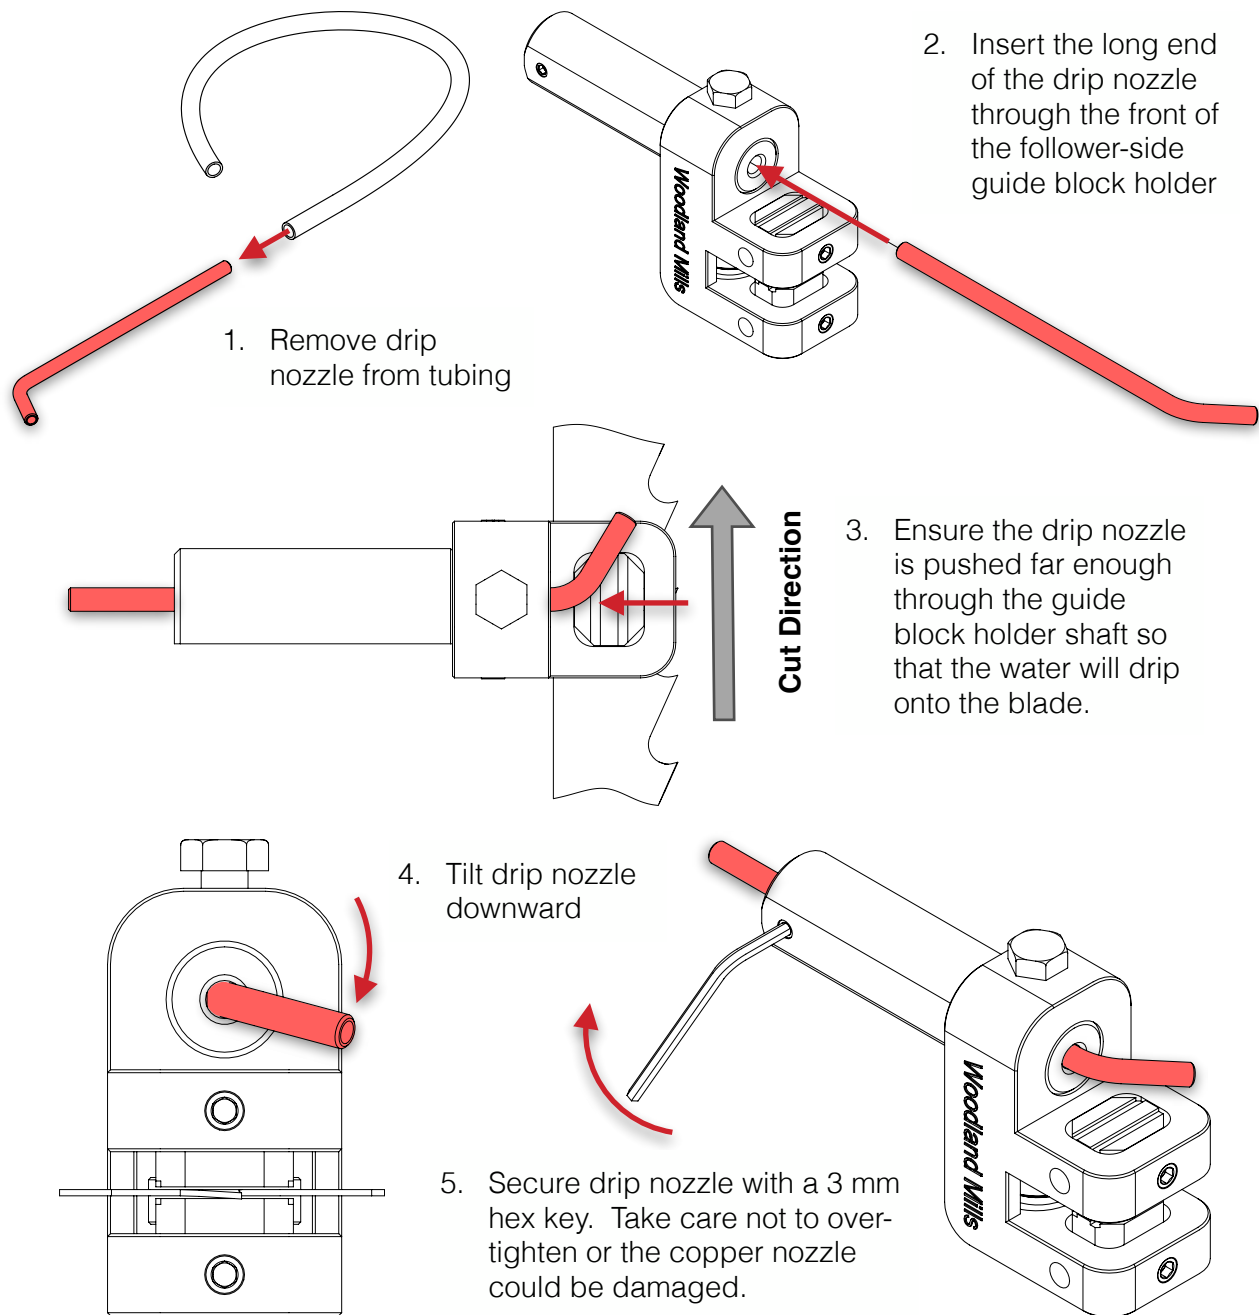

TIGHTEN CARRIAGE WHEEL BOLTS

Tighten the four (4) M20 X 120 mm bolts that fasten the carriage wheels to the carriage side plates.

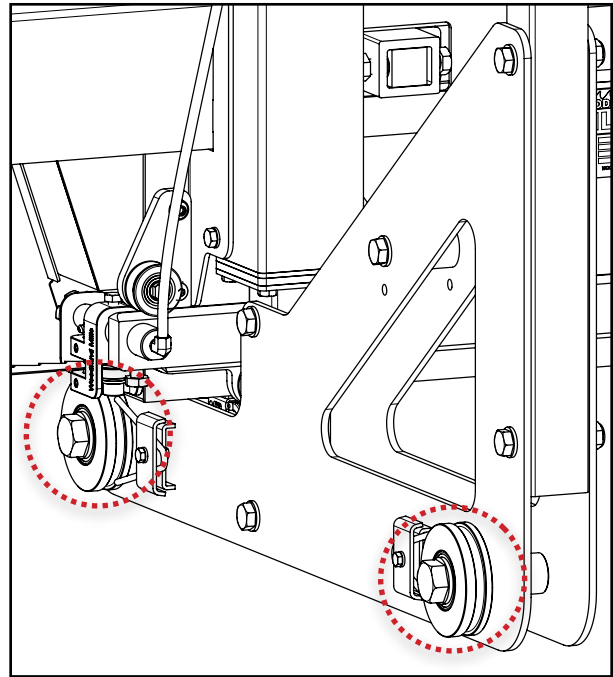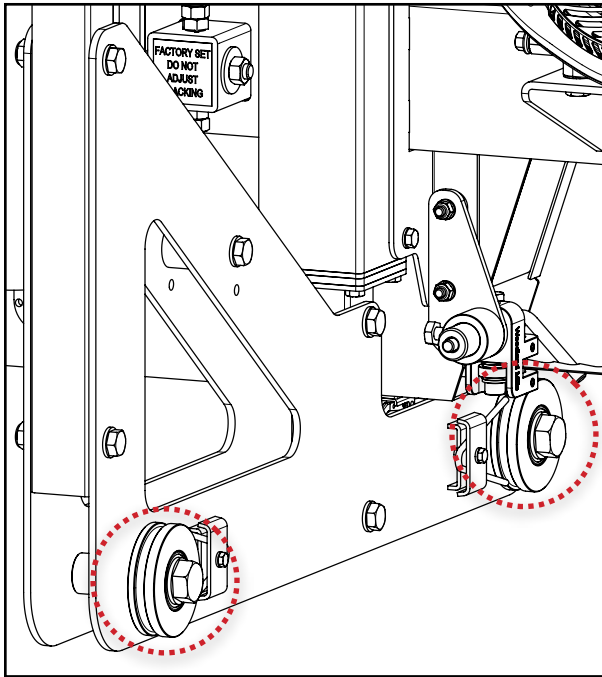


6. PLACING THE HEAD ON THE TRACK

At this point, most of the sawmill head bolts should only be hand tight. They will be fully tightened when the head is on the track and has settled in to a true and square state. There are two methods in which the sawmill head can be lifted onto the track assembly:

METHOD 1





If a tractor or forklift is available, the head can be lifted onto the track with a lifting strap or chain with a minimum rating of 1000 lb. [450 kg]. Attach the lifting strap/chain to the lifting hooks, raise the head up, and rest it on the track so that the grooves in the carriage wheels fit around the track rails. Two people are recommended for this procedure.

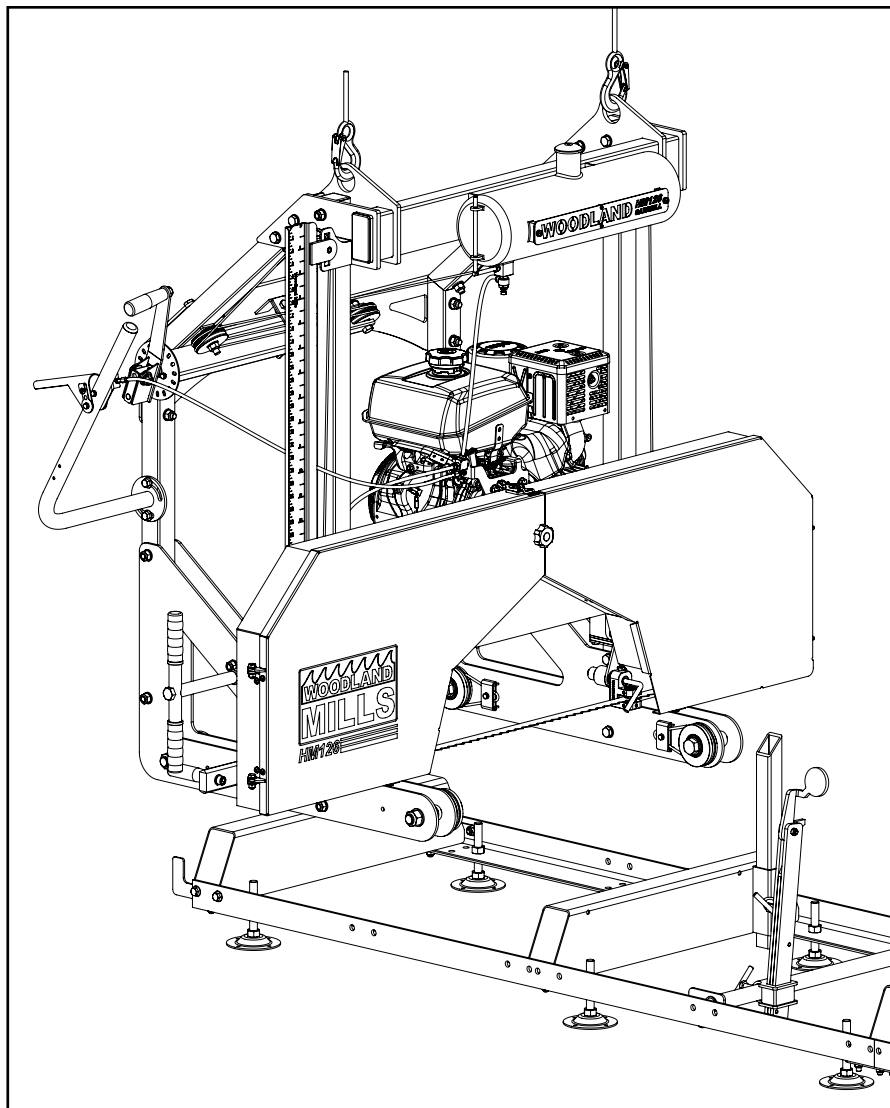

METHOD 2

At least two people are required for this step. Start by removing the two (2) carriage stops from one end of the track. The head can be walked over to the track until positioned behind it (**Figure 1**). Once in this position, tilt the head backwards so that the front two wheels are off the ground. Walk the head forward while the grooves in the two front carriage wheels ride along the track rails (**Figure 2**). Next, using at least two people, lift up the back end of the sawmill head and walk it forward until both rear carriage wheels are seated on the track (**Figure 3**).

Finally, reattach the two (2) carriage stops to the inner faces of the track rails (**Figure 4**).

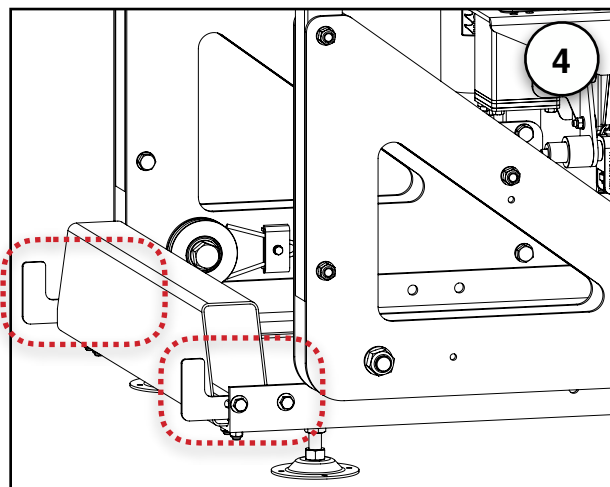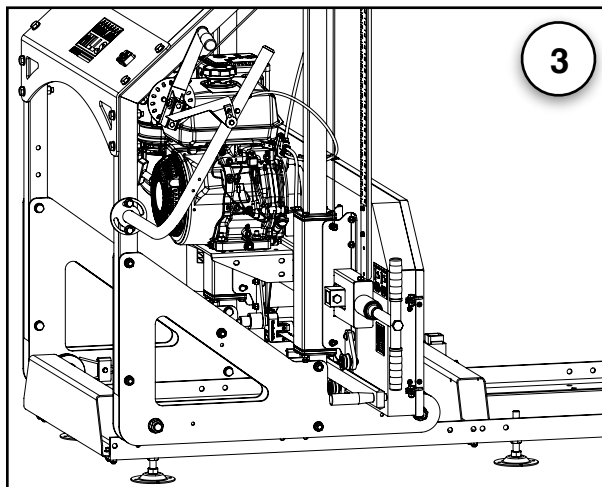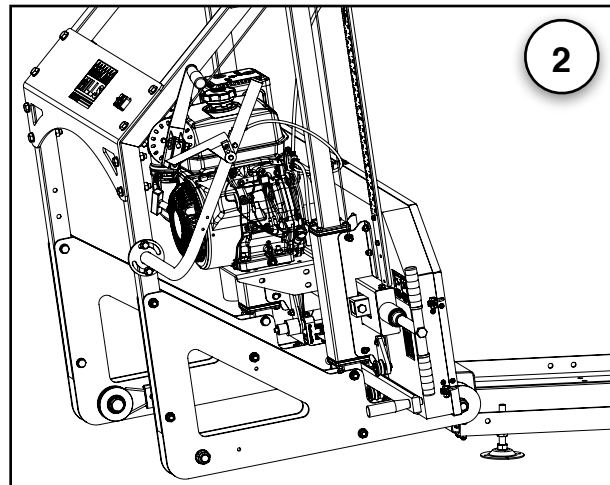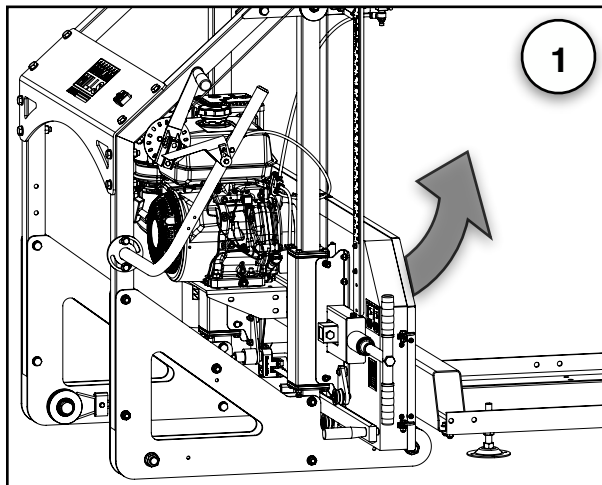


With the sawmill head assembly now resting on the track, grab hold of the one side of the cross beam and perform a shake-down of the head. Shaking the head will help settle the components into their proper position that may have become misaligned either due to tolerances during the assembly process or when the saw head was set on the track.

Afterwards, tighten all of the saw head bolts, post and cross beam hardware.



ROLLING THE SAWMILL HEAD ASSEMBLY



Roll the sawmill head assembly along the full length of the track to ensure it moves freely. If it binds or is difficult to push it is likely the track is not square, straight, and/or level. Make the necessary adjustments to the track and roll the head assembly again. Repeat the track adjustments until the head rolls freely.

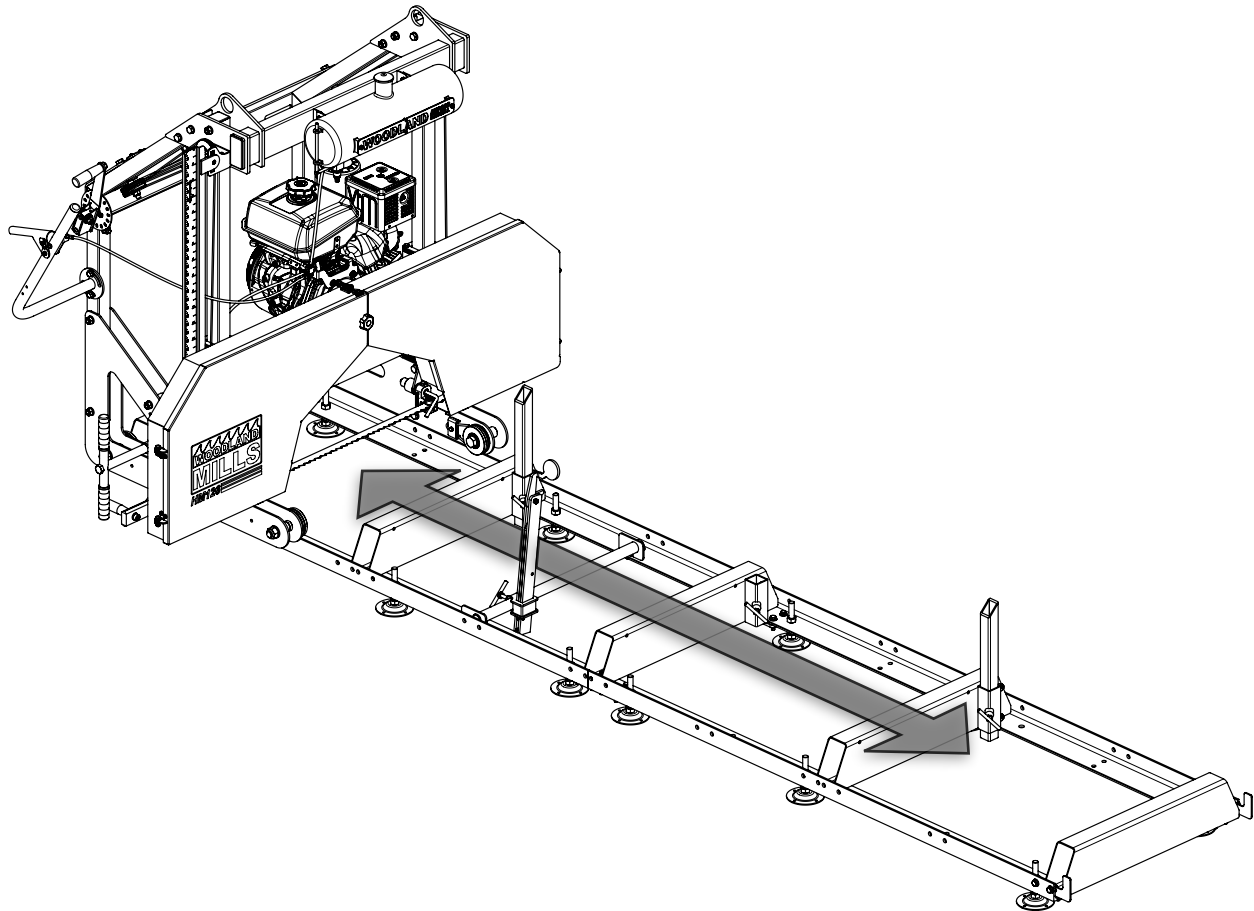




RAISING & LOWERING THE SAWHEAD

The lift mechanism is equipped with a self-locking, spring-loaded crank arm that prevents the head from lowering during cuts. When winding the head up or down, the operator pushes the handle towards the mill as the crank arm is turned. When the desired cut depth is reached, releasing the handle will lock the arm into one of the slots in the indexing plate.

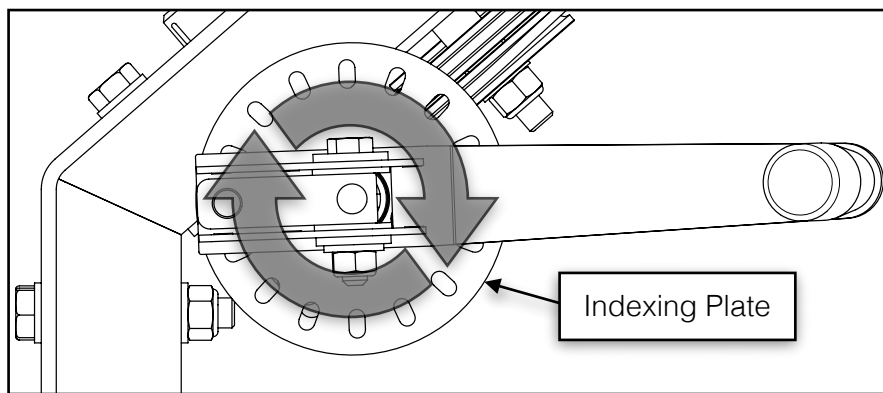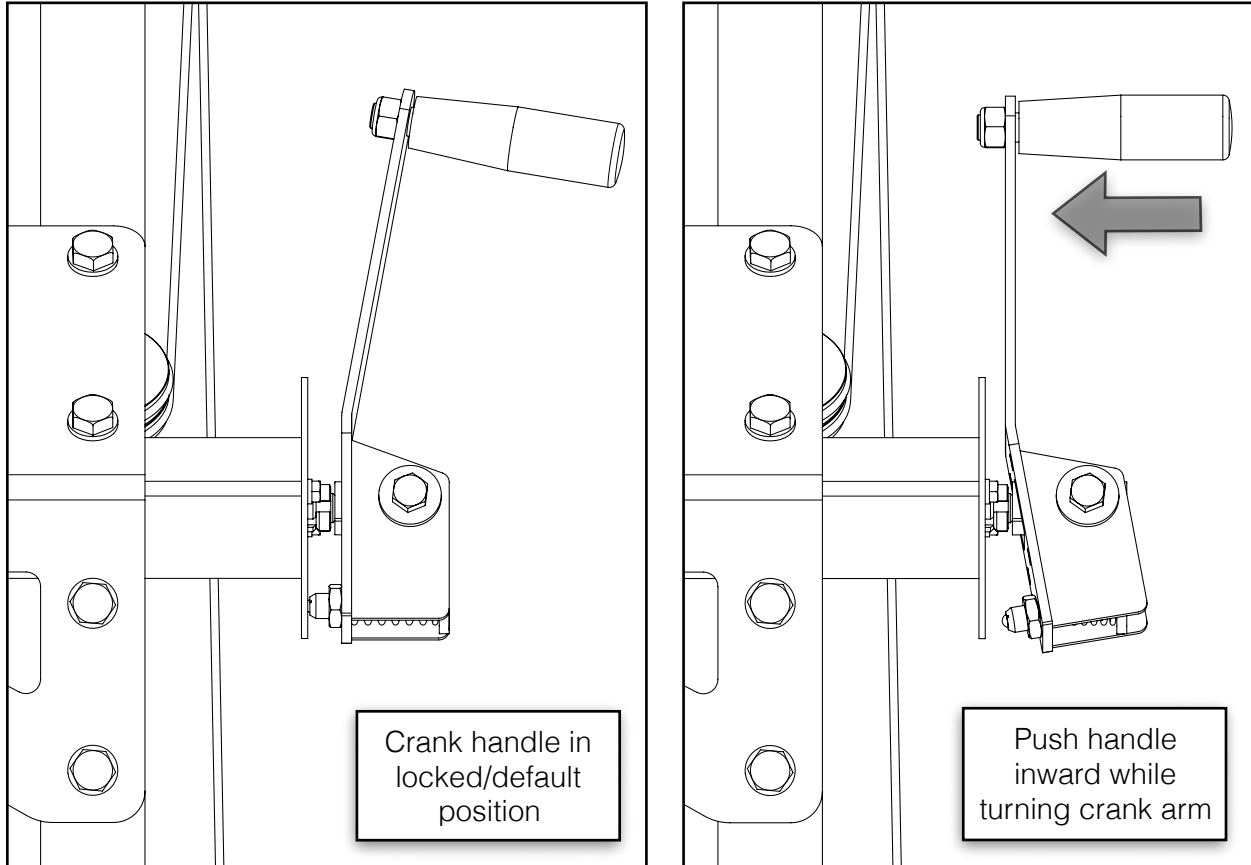


LEVELLING THE SAWMILL HEAD ASSEMBLY

Using a tape measure, measure the distance from the blade to the top of the log bunk on both the left and right side. The distance should be equal. If the measurements are not equal, adjust the lift cable ends under the lift mechanism sub-assembly to either raise or lower one side.

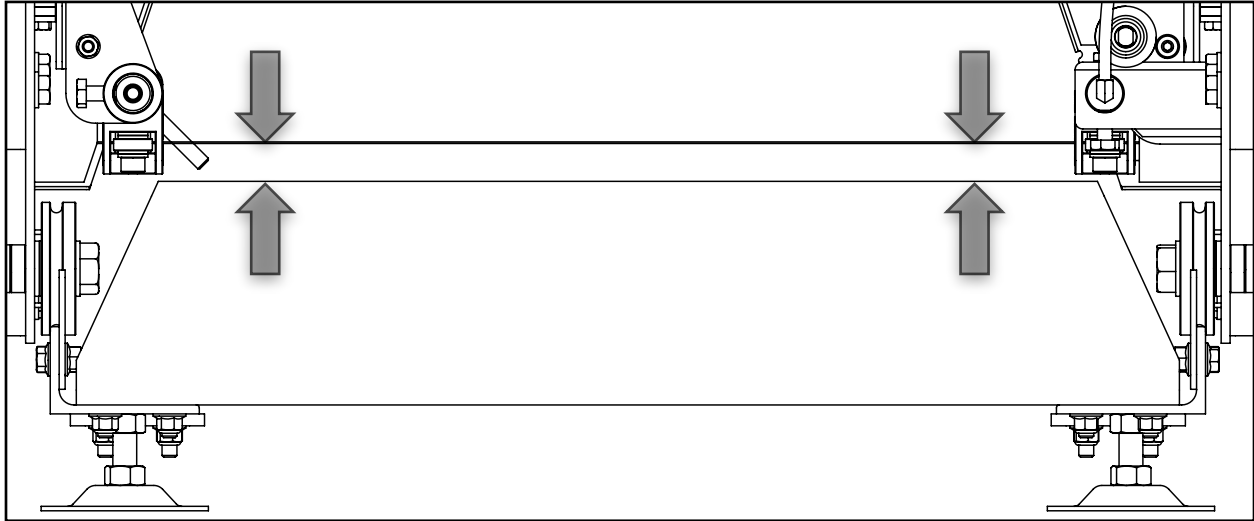


Using a wrench, turn the nut clockwise to raise one side of the sawmill head assembly, or counter-clockwise to lower it. Double-check the blade height as discussed in the previous step. Once the measurements are equal on both sides, tighten the corresponding jam nut to clamp it securely against tab.

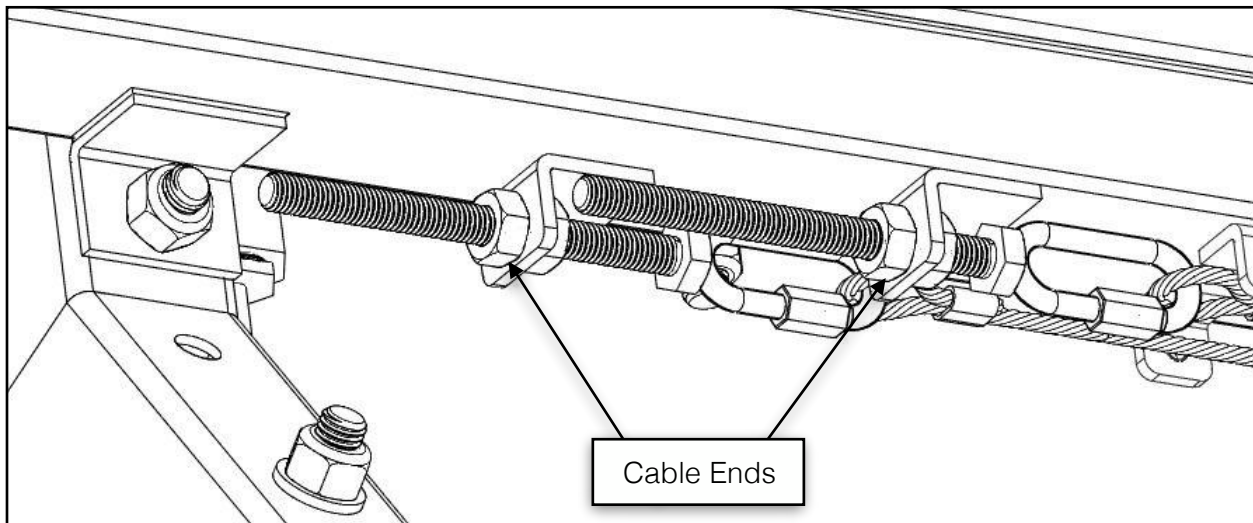




GREASING THREADS

Add waterproof grease to the threads of the blade tension T-handle and to the mating bearing face prior to use.

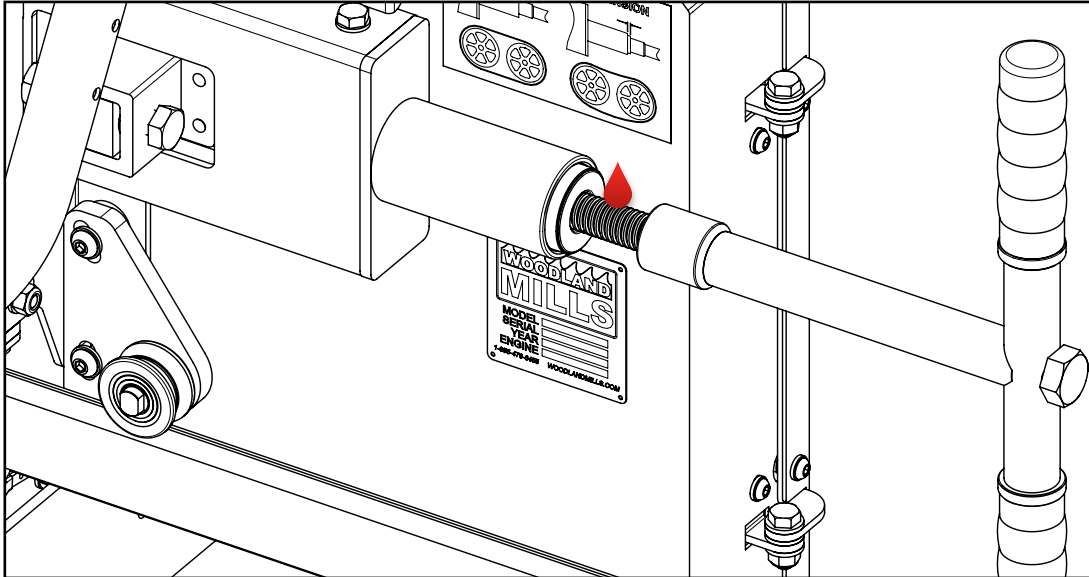


****Note: It is very important to take the tension off the blade by turning the T-handle in the counter-clockwise direction when the sawmill is not in use. Failure to do so will result in flat spots on the rubber belts. These flat spots will cause the mill to vibrate excessively during subsequent uses.****

Add grease to all T-bolt threads on the sawmill track: three (3) on the bunks and one (1) on the log clamp assembly.

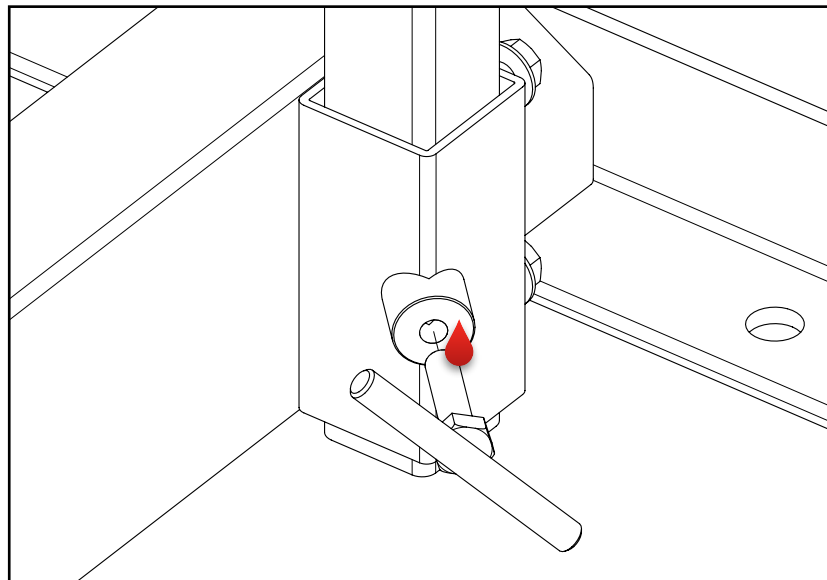

ENGINE OIL


Refer to the engine manual before using your sawmill. Please note that the engine does not contain any gasoline or engine oil when it is shipped. Furthermore, the engine is equipped with an oil alert system, meaning that if the crankcase oil level is low or empty, the power is cut to the spark plug and it will not start.

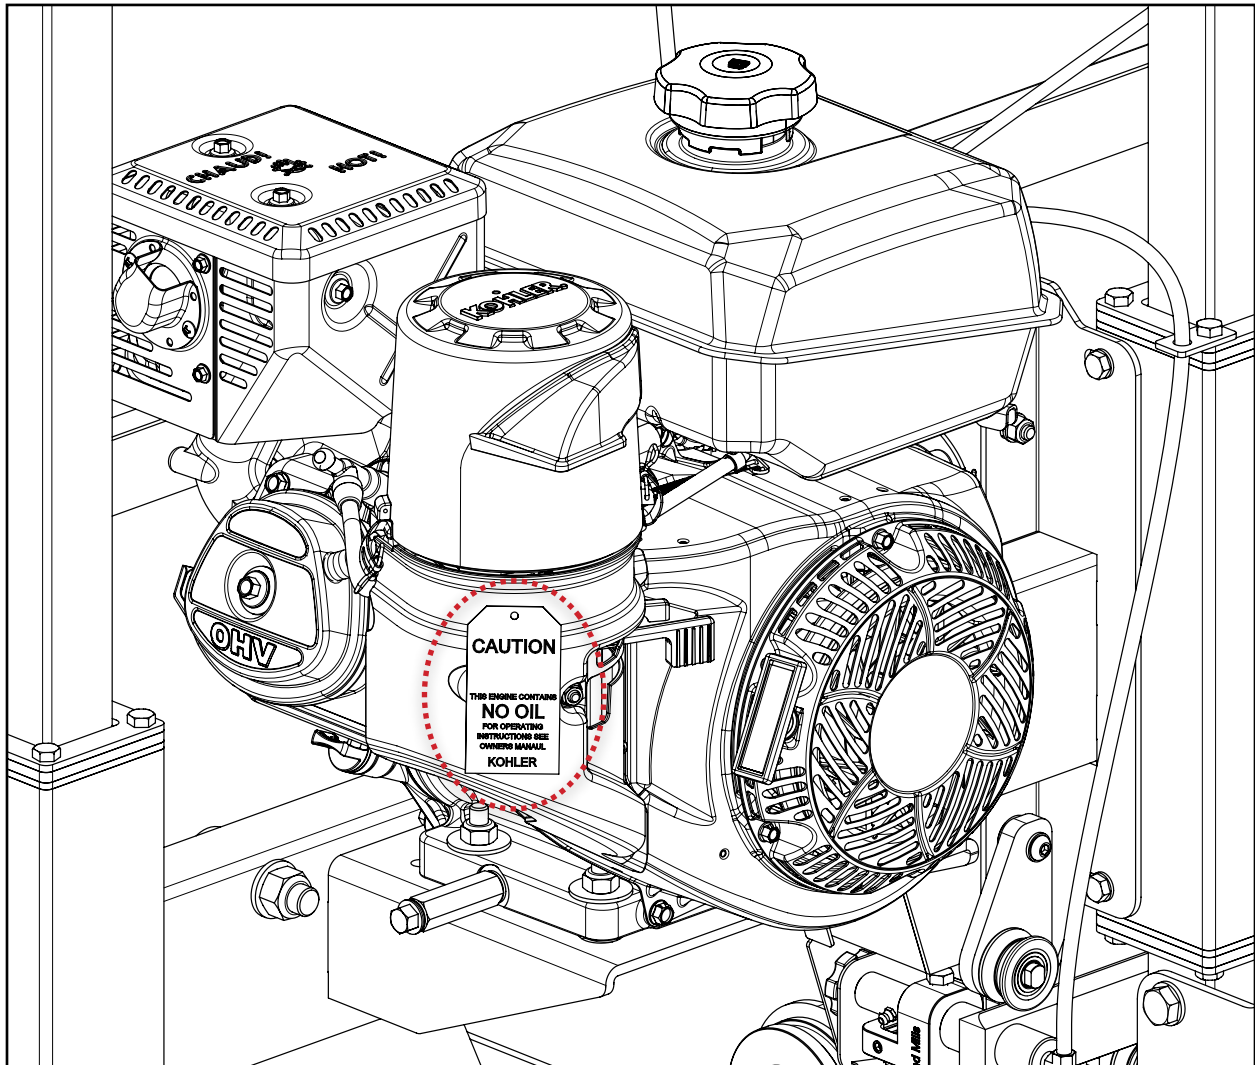

When changing the engine oil, follow the instructions on the next page.



The engine comes with a brass oil drain extension to make oil changes easier. When removing the drain plug, use a wrench to hold the brass extension stationary while a second wrench loosens the plug. Failure to follow this procedure could damage the threads in the aluminum engine block and void the warranty.

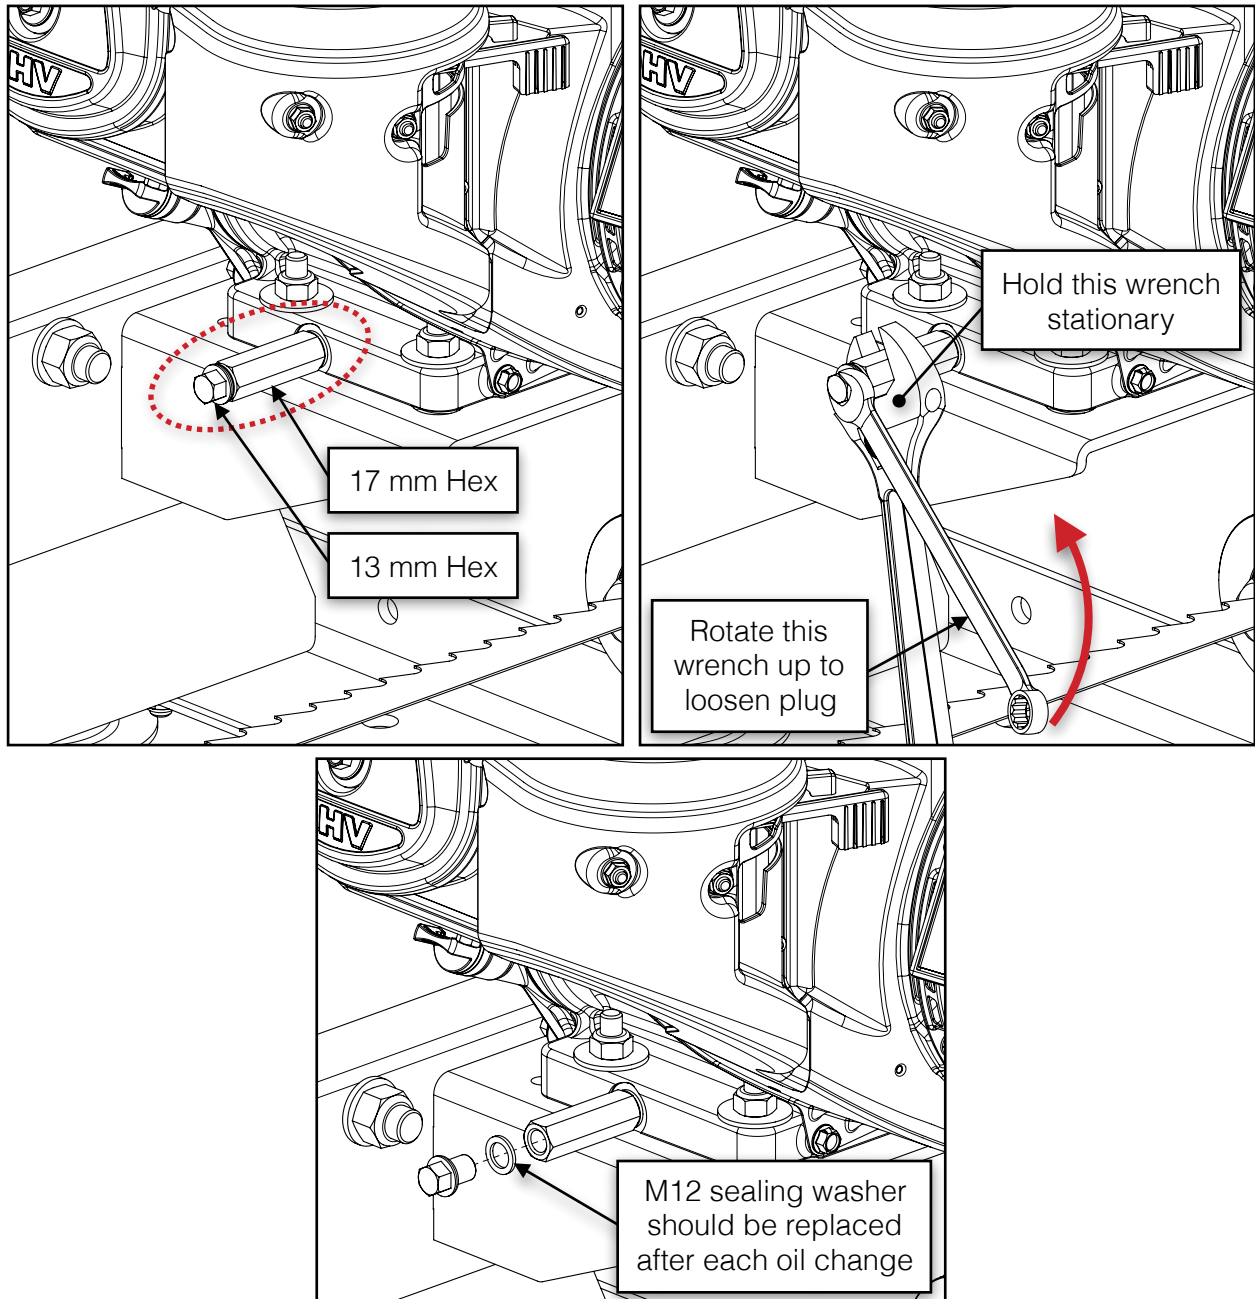


Repeat the process in reverse to re-install the drain plug. Remember to hold the brass extension stationary with a second wrench when tightening the plug.



DIRECTION OF CUT

Always cut in the direction shown below. The log clamp is located to the right side of the log with the log supports on the left. Failure to cut in this direction can cause the log to come loose and possibly cause damage or injury.

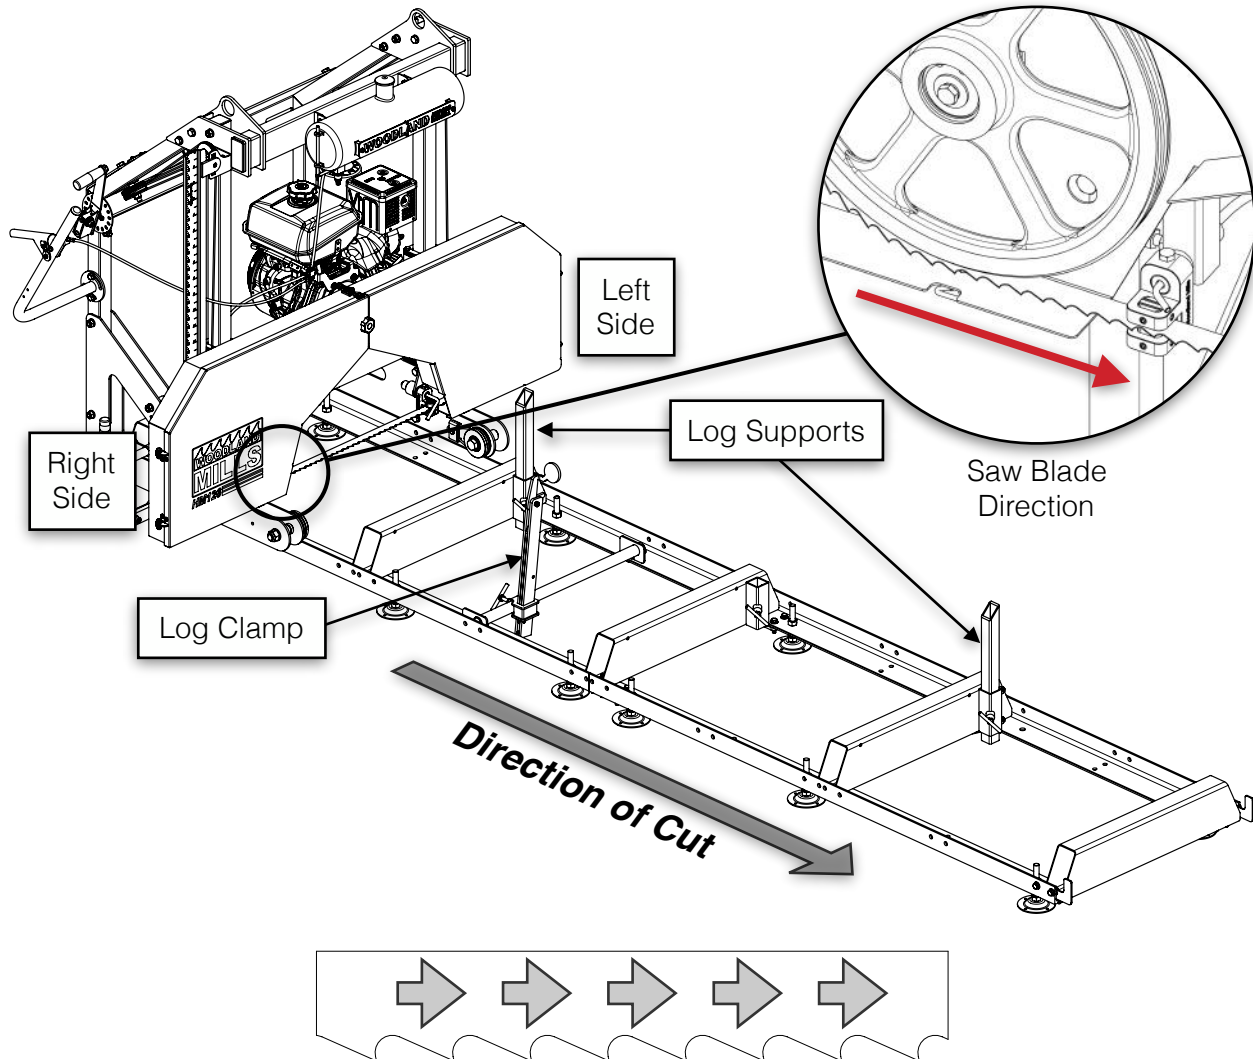

Saw Blade Teeth Orientation

Always ensure the saw blade teeth are orientated such that they are cutting *into* the wood and not being dragged backwards across it. Some blade manufacturers ship their saw blades inside out (backwards) due to manufacturing processes and they must be flipped prior to installation.

****Please follow the instructions in the SAWMILL SET-UP PROCEDURES section. Failure to do so may result in poor sawing performance, damage or injury.****

SAWMILL SET-UP PROCEDURES


DRIVE BELT TENSION



Make sure the blade is under proper tension when setting the drive belt tension. This ensures the belt is fully seated into the pulley grooves when the deflection is checked. See section, *BLADE TENSION*, for more information.





To check the drive belt tension, push against it firmly and measure the deflection. There should be no more than $\frac{1}{4}$ in [6 mm] of movement. If the belt deflection exceeds this amount it will need to be tightened as described below.

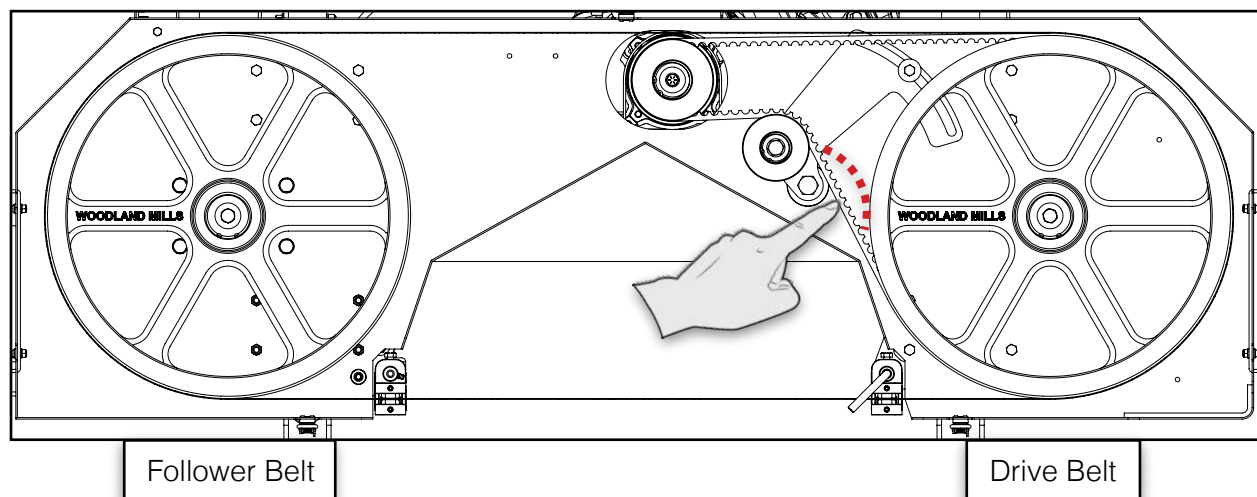


****Never attempt to adjust the belt tension with the engine running. As a safety precaution, remove the spark plug cap.****

Start by loosening the M16 hex bolt (1A) and lock nut (1B) that secure the belt tensioner mechanism to the sawhead. Then loosen the M8 bolt (2A) in the curved slot—its nut (2B) is secured in place by an anti-rotation device and does not require a second wrench or socket.

****Only loosen the bolts approx. one turn—do not remove them.****

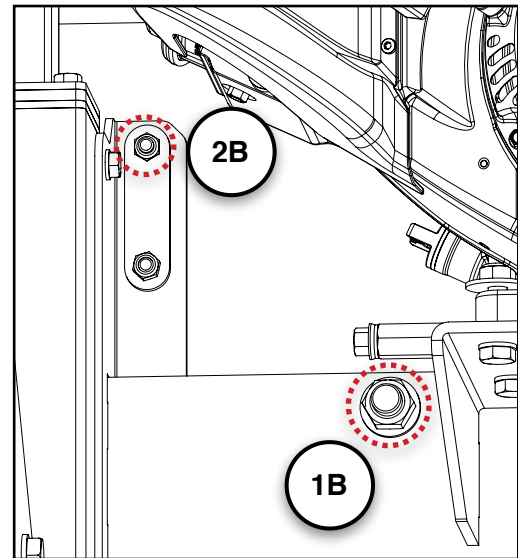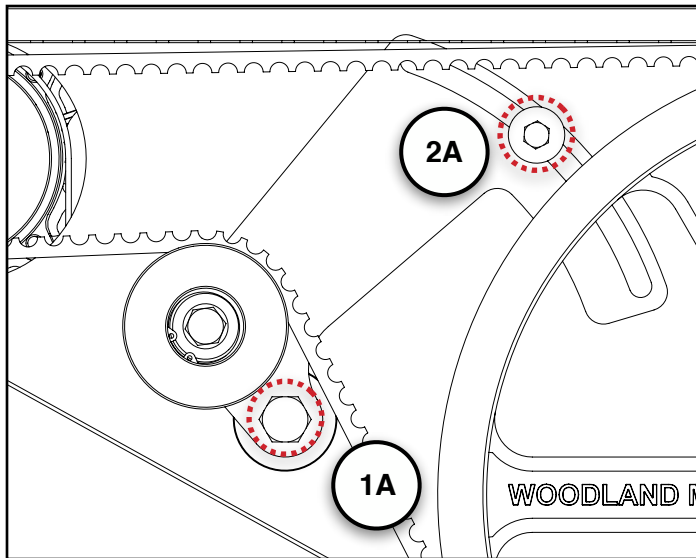


Once both bolts are loose, firmly push the belt tensioner towards the band wheel until the belt is tight (#1), then tighten the upper bolt in the curved slot in a clockwise direction using a 13 mm socket (#2). Re-check the belt tension to ensure a maximum of ¼ in [6 mm] deflection and then tighten the M16 bolt and lock nut when the deflection is correct (#3).

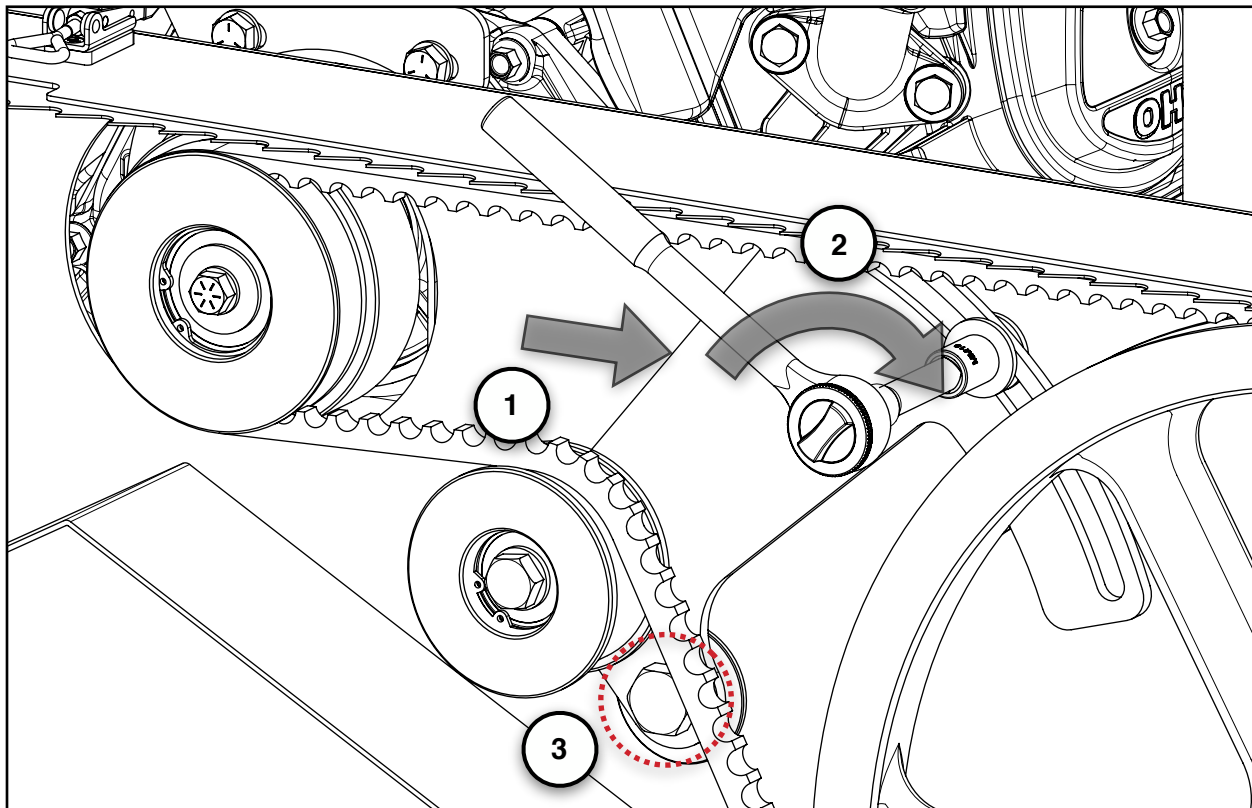




BLADE TENSION

Proper blade tension is achieved when the thrust bearing is flush with the outer face of the spring washer holder after turning the T-handle clockwise.

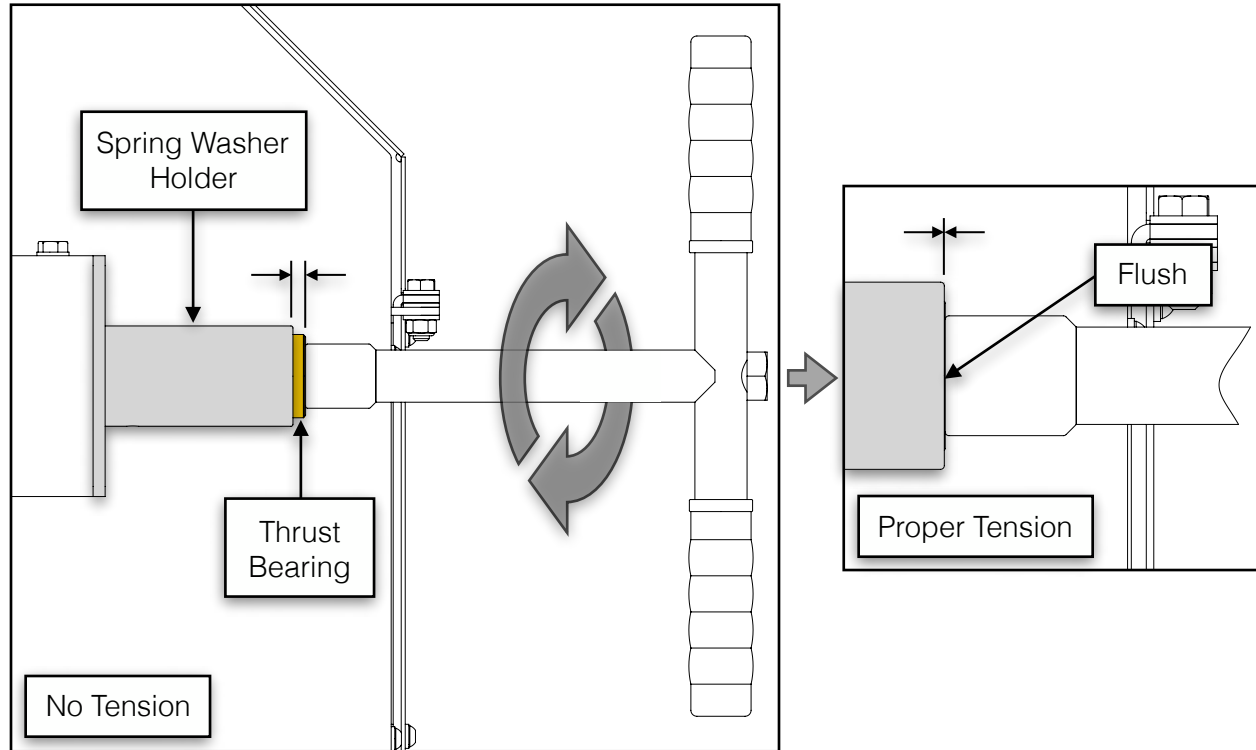


If the spring washer holder is removed for maintenance (e.g. greasing or replacement), ensure the twenty-four (24) Belleville washers inside are oriented and re-installed as shown in the graphic below. There are five (5) groups of four (4)—each made up of two (2) opposing nested pairs—with a separate nested pair at each end.

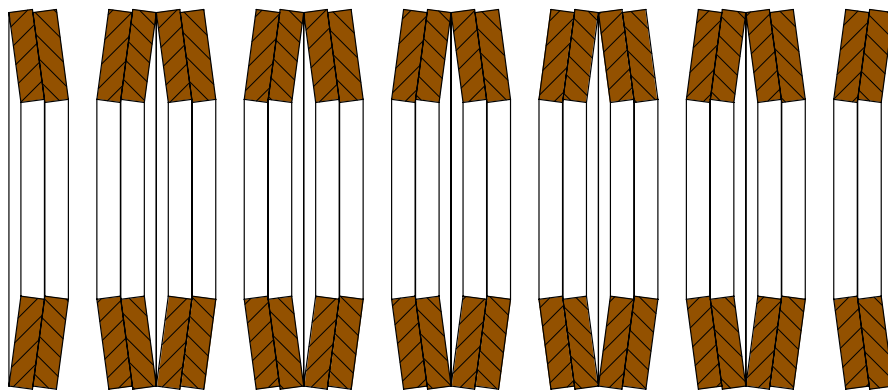




BLADE TRACKING

Never attempt to adjust the blade tracking with the engine running. As a safety precaution, remove the spark plug cap. Gloves and safety glasses should be worn when working with the blade as it is extremely sharp.

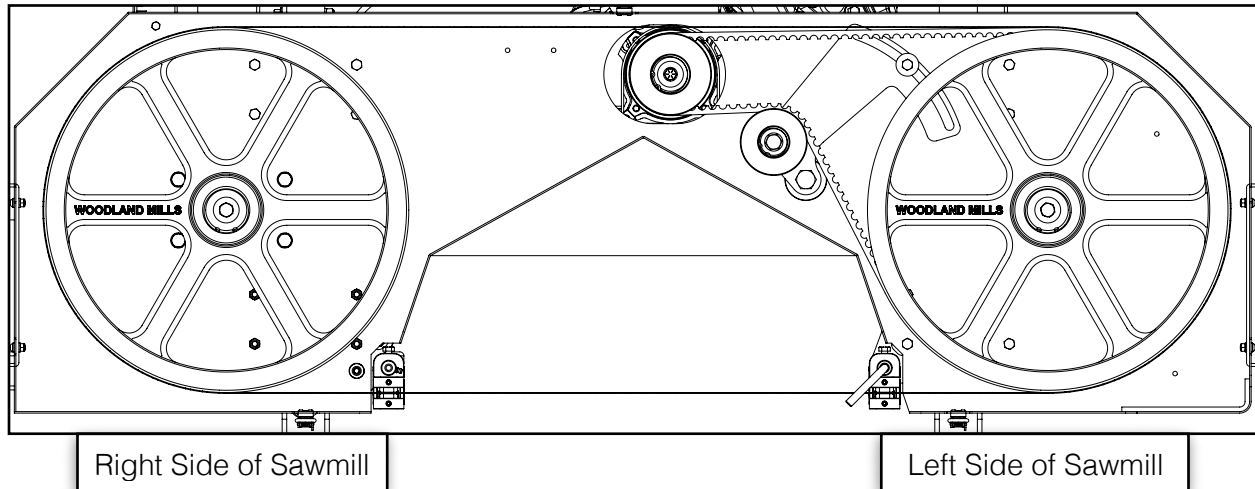


The blade should run with the same tooth-to-front band wheel face distance on both the drive and follower sides: $\sim\frac{3}{8}$ in [9 mm] ideally. The back of the blade will be just proud [$\sim.04$ in / 1 mm] of the rear face of the band wheel at this distance and can be a quicker check than using a tape measure or scale. If an adjustment on either side is required, the steps on the following pages detail the procedure.

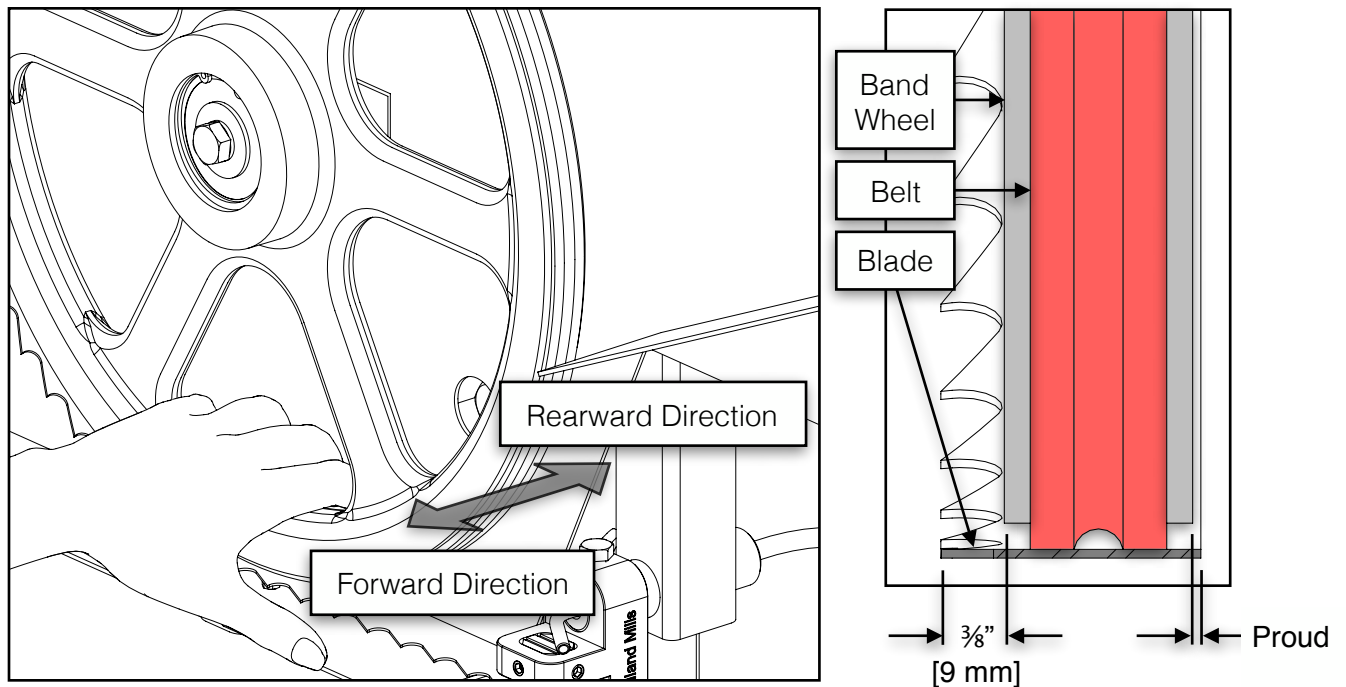


REDUCING THE BLADE TENSION

Loosen the blade guide holder assembly bolt using a socket/wrench. The shaft should now be free to slide rearward and out of the way. Perform this step on both blade guide assemblies. This ensures the guide bearings will not influence the tracking of the blade whilst being adjusted.

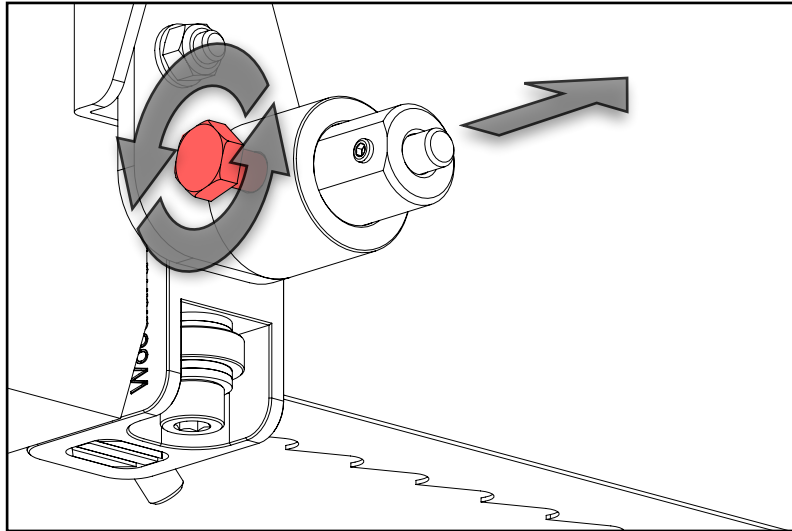


Take some tension off the blade by turning the tension handle in the counter-clockwise direction one full turn from its fully-tensioned position.

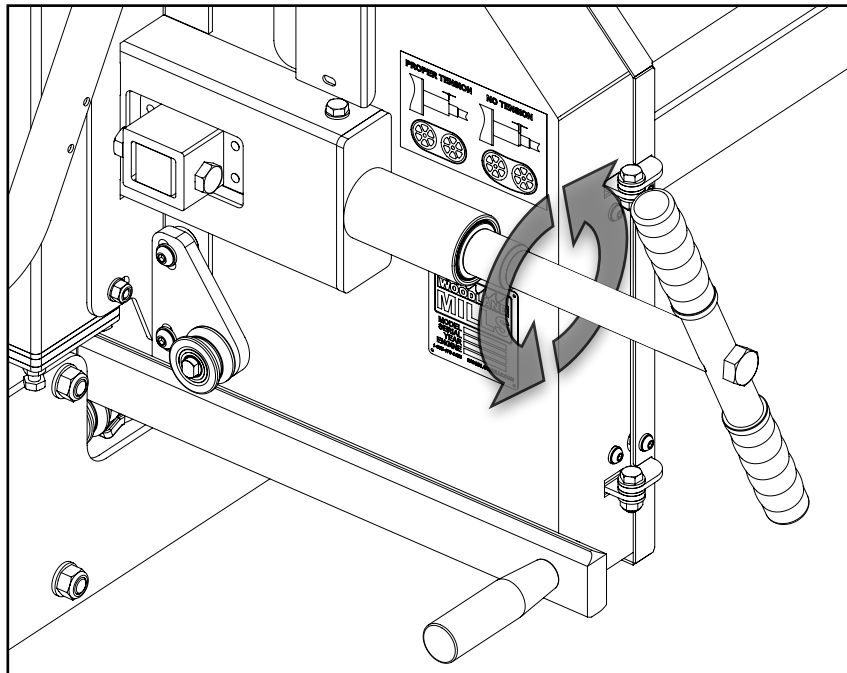


ADJUSTING THE FOLLOWER SIDE TRACKING

The follower side band wheel shaft is connected to the RapidChange™ blade system. Once the tracking is set, it maintains these settings even without a blade on the sawmill, allowing for quick and simple blade/belt changes. The two (2) bolts at the rear of the follower shaft are used to adjust the pitch angle of the band wheel to track the blade.

To move the blade **forward**—or **out**—on the band wheel, start with the right-hand bolt by turning it *counter-clockwise* (#1) so that it moves **out** from the sawmill. Turn it ½ turn then snug the left-hand bolt by turning it *clockwise* (#2) to fix the follower band wheel shaft in plate.

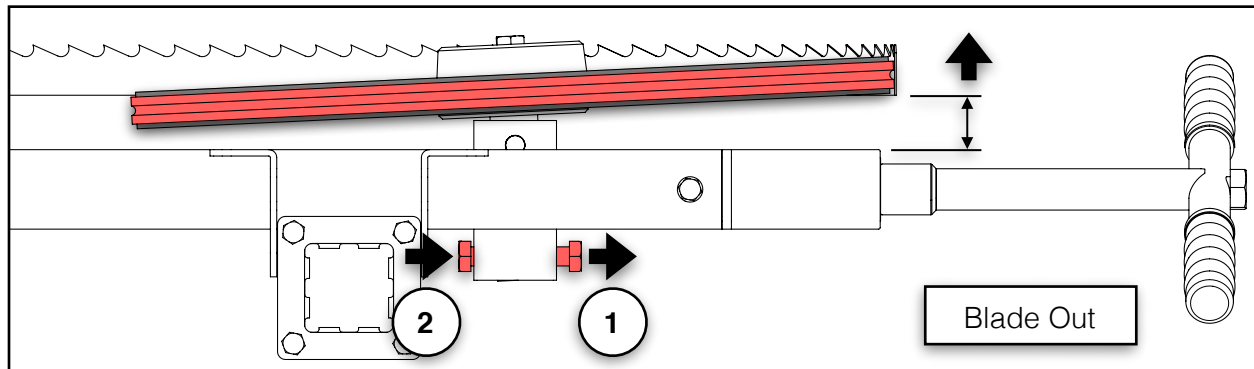


Alternatively, to move the blade **rearward**—or **in**—on the band wheel, start with the left-hand bolt by turning it *counter-clockwise* (#2) so that it moves **in** towards the sawmill. Turn it ½ turn then snug the right-hand bolt by turning it *clockwise* (#1) to fix the follower band wheel shaft in plate.

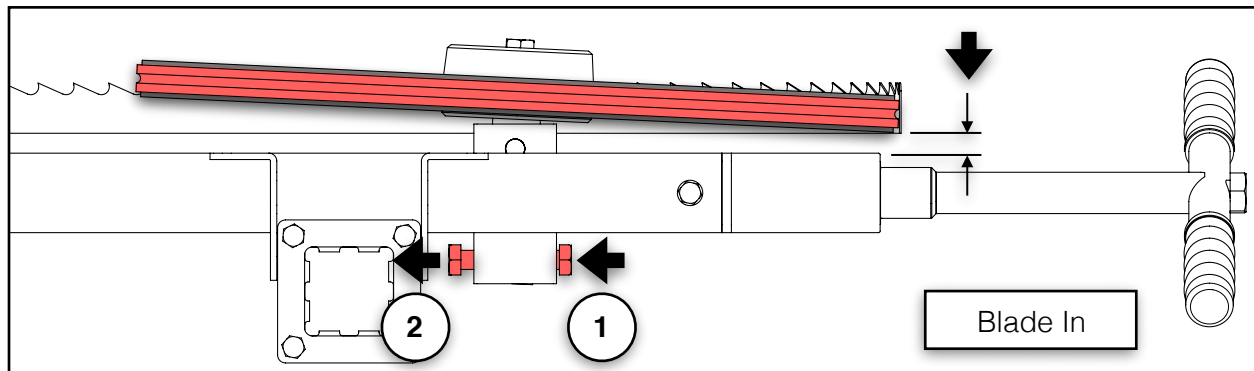

A simple phrase to help remember which way to adjust the tracking bolts is: **IN is IN, and OUT is OUT**. When the bolts move in towards the sawmill, the blade moves *in*. When the bolts move out away from the sawmill, the blade moves *out*.

****Note that the band wheel angle shown in these graphics has been exaggerated and some components have been removed for clarity.****

Turn the T-handle *clockwise* until proper blade tension is achieved. While wearing gloves, spin the band wheel by hand and observe how the blade tracking has changed. Measure the distance again and repeat the above step to further compensate if required. The ideal measurement is $\frac{3}{8}$ in [9 mm] or check that the back of the blade is just proud of the back of the band wheel.

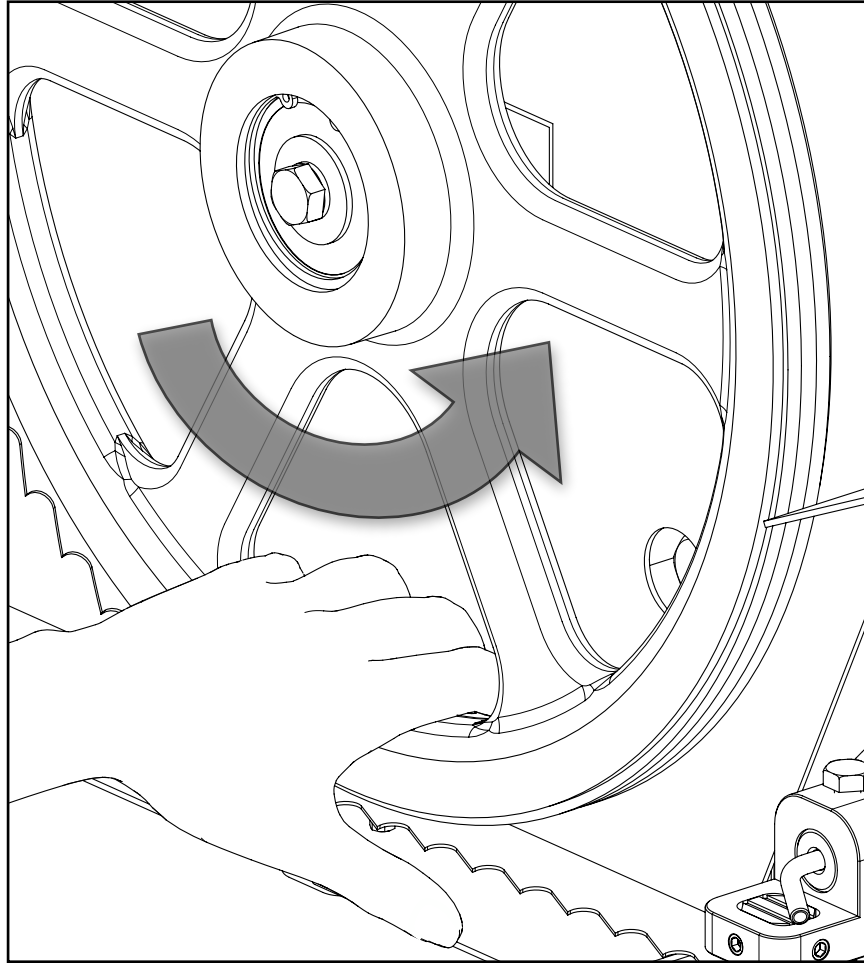


Finally, move the guide block holders forward to the blade. See section, **BLADE GUIDE ADJUSTMENT** on the next page for more information.



After the blade tracking is set properly, it should require no further adjusting, even after blade changes. The RapidChange™ blade system maintains the band wheel pitch angle whether or not a blade is on the sawmill.

BLADE GUIDE ADJUSTMENT

Never attempt to adjust the guide blocks or the guide bearing with the engine running. As a safety precaution, remove the spark plug cap. It is also advised to confirm that the blade is tracking properly before performing the steps below. Blade tracking is covered in the **BLADE TRACKING** section. Using a 4 mm hex key, loosen the blade guide blocks on both the left and right sides. They should be free to slide up and down.


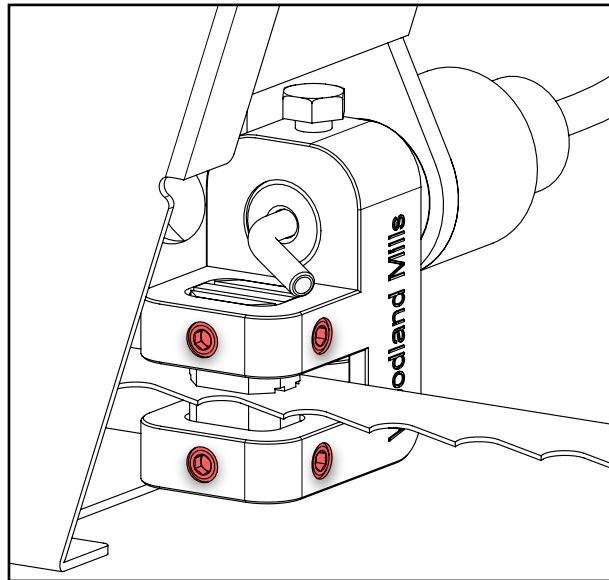


Loosen the blade guide assembly bolts on both guide block holders so that the round shaft is free to slide back and forth. Position it so that there is a thick paper-sized gap (.040 in or 1 mm) between the bearing and the back of blade. Re-tighten the bolt against the flat on the shaft to secure the assembly into position.

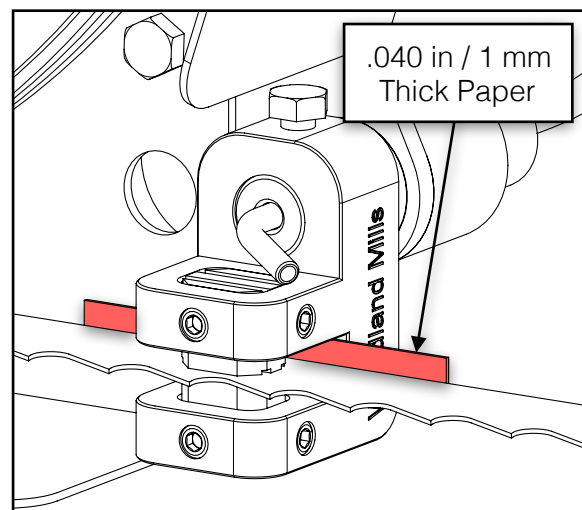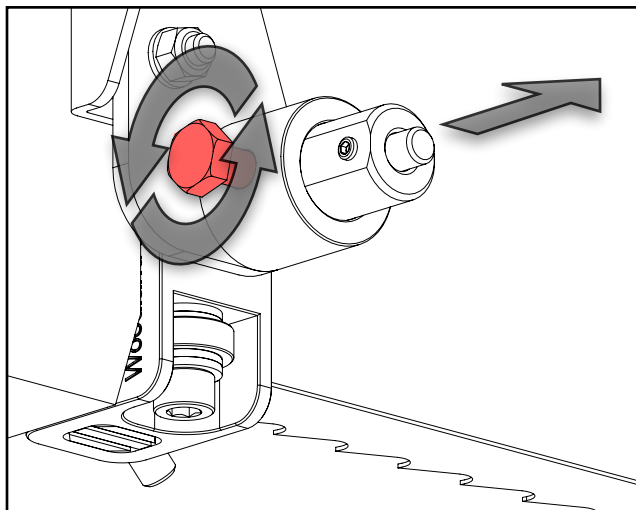



Using a feeler gauge or thick piece of paper (.020 in / 0.5 mm), place it between the blade and both guide blocks and then tighten the set screws.

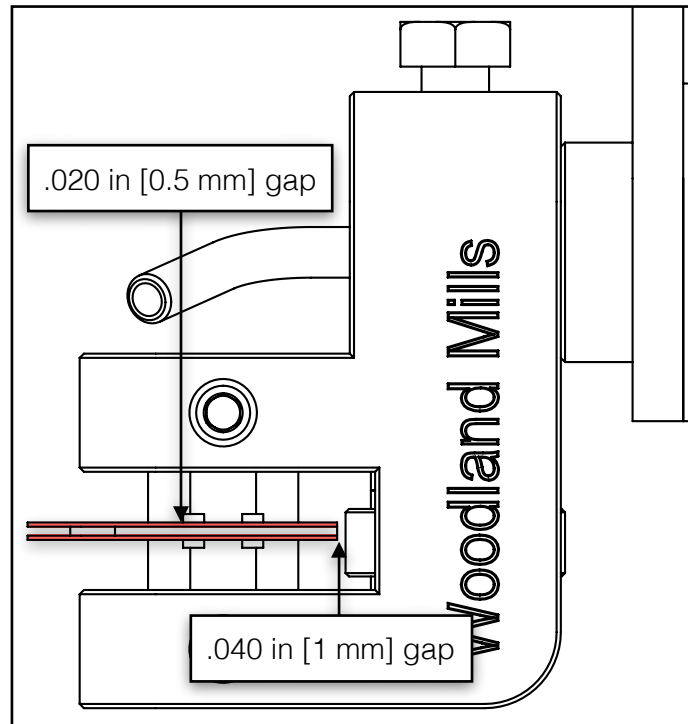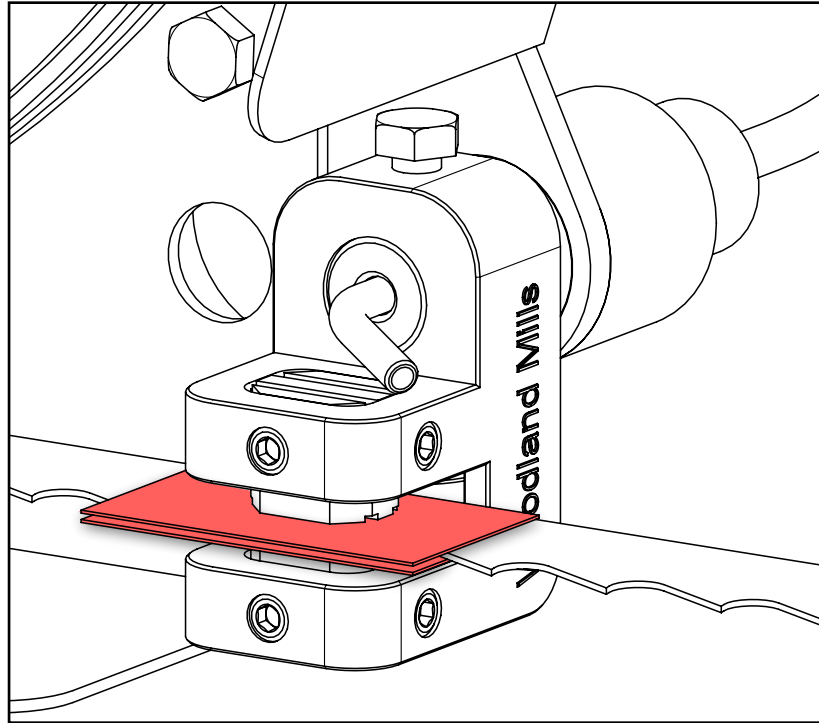

SAWMILL MAINTENANCE


CHANGING THE BLADE

Never attempt to change the blade with the engine running. As a safety precaution, remove the spark plug cap. Gloves and safety glasses must be worn when changing the blade.

Follow these steps to remove an old/worn blade from the sawmill:

1. Turn the belt tension handle counter-clockwise to release the tension from the blade until it is loose.
2. Open the band wheel housing doors.
3. Remove the yellow blade guard [14 hp sawmills models only].
4. Rotate the blade stopper up on the drive-side guide block holder.

The blade is now sufficiently loose and can be easily pulled straight out the front.

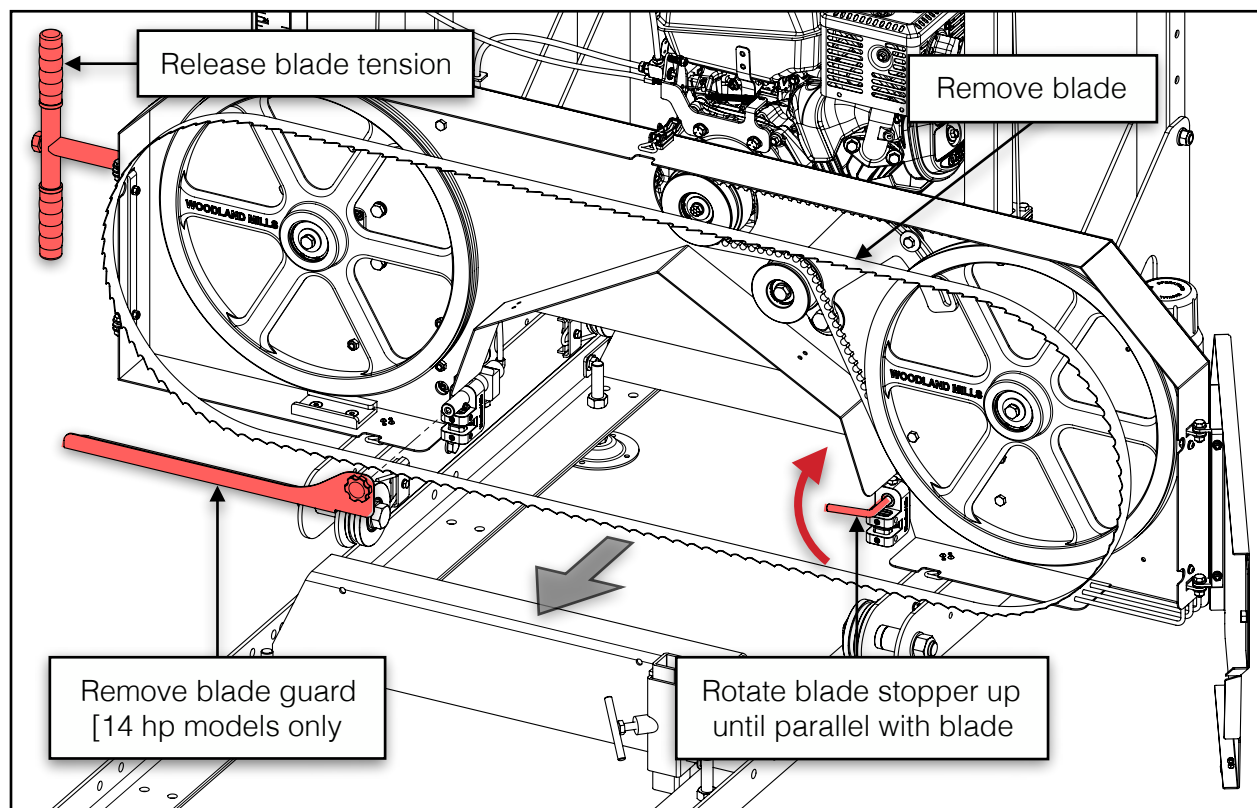


Install a new blade following the reverse order of steps and then set the proper blade tension. The tracking should not have to be adjusted after changing blades. See section, ***ADJUSTING THE FOLLOWER SIDE TRACKING***, for more information.




REPLACING BELTS

Never attempt to replace the belts with the engine running. As a safety precaution, remove the spark plug cap. Gloves and safety glasses must be worn when replacing the belts. There are two V-belts on the sawmill: a BX80 cogged belt on the drive side and a Woodland Mills polyurethane belt on the follower side.


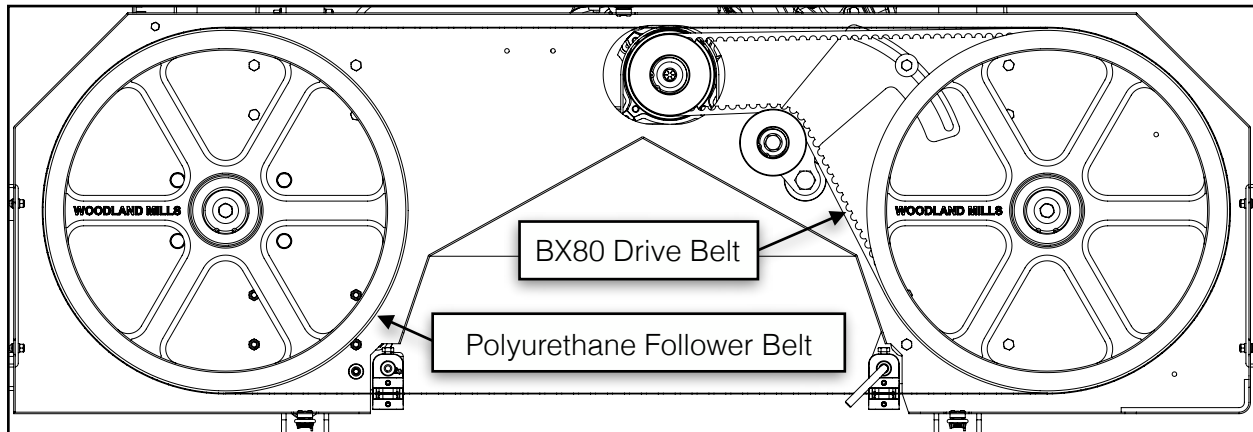


First, remove the blade following the procedure outlined in section, ***CHANGING THE BLADE***.

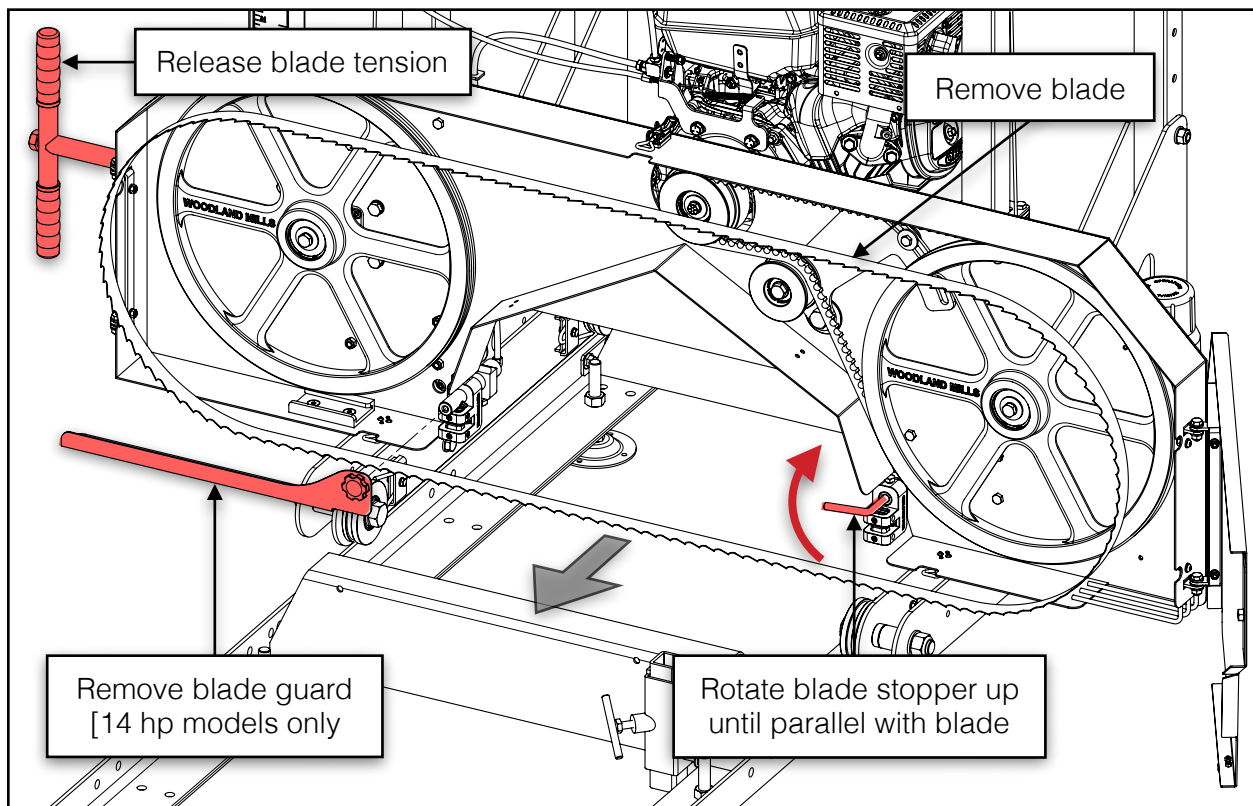



Next, remove the tension from the drive belt by loosening the M8 hex bolt (#1) and the M16 hex bolt (#2) by approximately one (1) turn—do not remove the bolts.

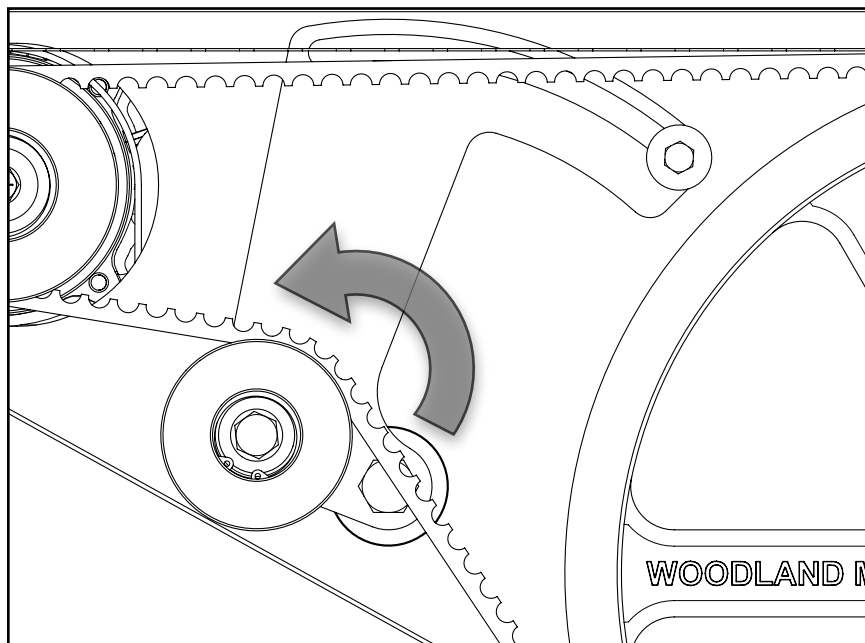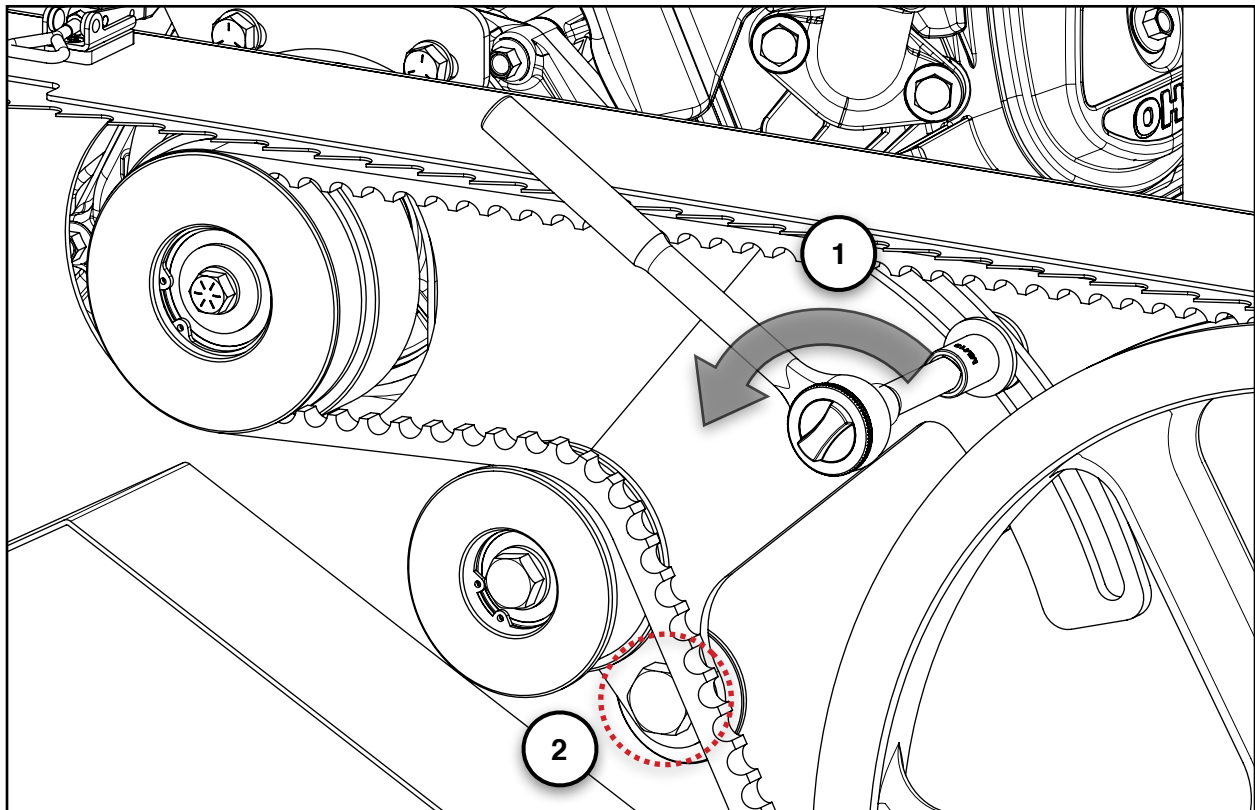


Once both bolts are loose, the belt tensioner will rotate counter-clockwise until the idler pulley comes to rest on the band wheel housing. The belt can now easily be removed by hand and a new belt installed.

Tension the belt following the same procedure as outlined in section, **DRIVE BELT TENSION.**



The follower belt is changed by prying it off and installing a new one with the aid of slotted screw drivers.

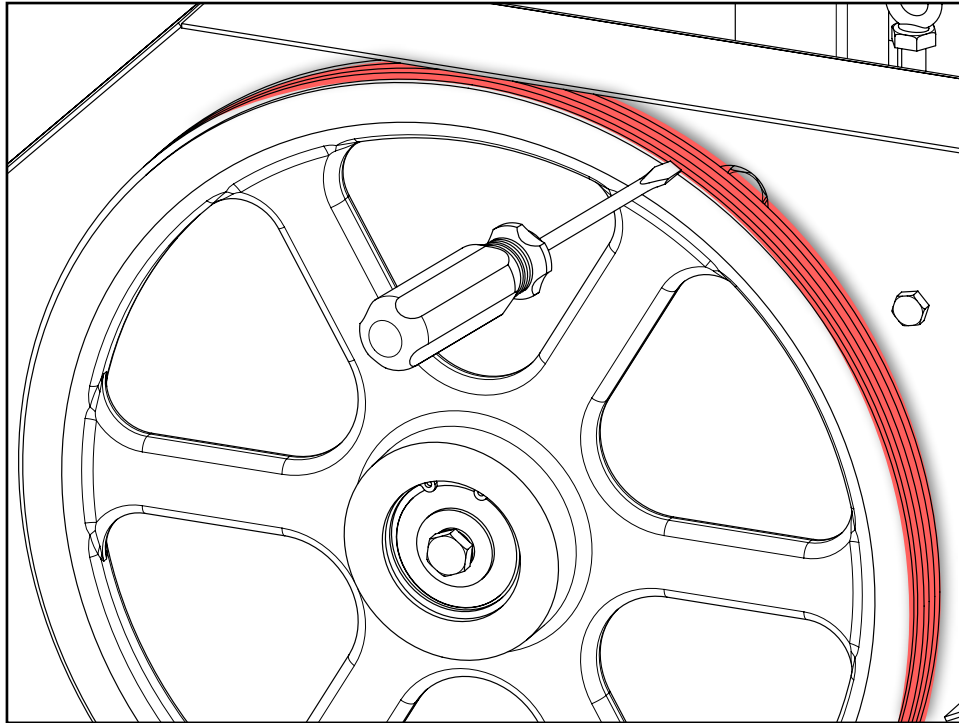

The blade can now be re-installed, band wheel housing doors closed, and proper blade tension set.

****Note that blade tracking should not have changed after replacing the belts. The RapidChange™ blade system maintains the band wheel pitch angle while the blade is removed. Refer to section, *BLADE TRACKING*, for more information.****



TROUBLESHOOTING

Problem/Issue	Possible Causes	Resolution Options
Producing wavy cuts	<ol style="list-style-type: none"> Inadequate blade tension. Improper blade guide set up. Improper blade tracking. Sap build up on blade. Dull blade. Pushing mill too quickly. 	<ol style="list-style-type: none"> Tighten blade. Refer to page 58. Gap between guide blocks and blade are incorrect. Refer to page 63. Adjust blade tracking. Refer to page 59. Install new blade. Refer to page 65. Always use blade lubricant. Install new blade. Refer to page 65. Slow feed rate down and push head slower through log.
Last board is tapered or narrow in middle	<ol style="list-style-type: none"> Tracks are not level. 	<ol style="list-style-type: none"> Tracks need to be checked with level and adjusted to be square. They also need to be set up on firm, sturdy base so deflection does not occur from logs or sawmill head.
Blade dulls quickly	<ol style="list-style-type: none"> Logs are not clean. Foreign objects in log. 	<ol style="list-style-type: none"> Logs may contain dirt/sand causing blades to wear prematurely. Tree may contain nails, staples, old fencing etc.
Blade comes off band wheels	<ol style="list-style-type: none"> Inadequate blade tension. Improper blade guide set up. Improper blade tracking. Belts are worn. Dull blade. Pushing mill too quickly. 	<ol style="list-style-type: none"> Tighten blade. Refer to page 58. Gap between guide blocks and blade are incorrect. Refer to page 63. Adjust blade tracking. Refer to page 59. Install new belts. Refer to page 66. Install new blade. Refer to page 65. Slow feed rate down and push head slower through log.
Blades are breaking	<ol style="list-style-type: none"> Too many blade sharpenings. Inadequate blade tension. Improper blade guide set up. Improper blade tracking. Pushing mill too quickly. 	<ol style="list-style-type: none"> Replace blade. Refer to page 65. Binding between guide blocks when blade is too loose. Tighten blade. Refer to page 58. Gap between guide blocks and blade are incorrect. Refer to page 63. Adjust blade tracking. Refer to page 59. Slow feed rate down and push head slower through log.
Blade is slowing down or stopping when milling	<ol style="list-style-type: none"> Inadequate blade tension. Improper drive belt tension. Pushing mill too quickly. 	<ol style="list-style-type: none"> Tighten blade. Refer to page 58. Belts are worn or too loose. Replace. Refer to page 66. Slow feed rate down and push head slower through log.
Mill is not cutting or cutting very slowly	<ol style="list-style-type: none"> Dull blade. Blade is on backwards. 	<ol style="list-style-type: none"> Install new blade. Refer to page 65. Remove blade and flip it inside out. The teeth should be facing in the direction of the log supports.
Mill is vibrating excessively	<ol style="list-style-type: none"> Log is not clamped securely. Belts are deformed. Band wheel bearing issue. Pushing mill too quickly. Loose bolts. 	<ol style="list-style-type: none"> Ensure log is clamped firmly resting on log bunks and against log supports. Belts may have flats in them from leaving blade tension tight when not in use. Replace them. Refer to page 66. Inspect and replace the band wheel bearings if worn. Slow feed rate down when milling. Check all bolts to ensure they are tight.



PARTS LIST

Highlighted rows are items specific to HM126-14 (14 Horsepower) sawmill.

Item	Quantity		Part No.	Description
	14 hp	9.5 hp		
1	4	4	0001073	TRACK RAIL
2	2	2	0001075	LOG BUNK, END
3	2	2	0001080	LOG BUNK, MID
4	1	1	0001084	LOG BUNK, CENTER
5	2	2	0001072	REINFORCEMENT PLATE
6	4	4	0001055	CARRIAGE STOP
7	12	12	0001070	LEVELLING FOOT
8	1	1	0001062	LOG CLAMP SHAFT AND BRACKET WELDMENT
9	1	1	0001069	LOG CLAMP SHAFT BRACKET
10	1	1	0001061	LOG CLAMP RECEIVER
11	1	1	0001211	LOG CLAMP
12	2	2	0001056	LOG SUPPORT, LONG
13	2	2	0001465	LOG SUPPORT, SHORT
14	4	4	0001059	T-BOLT, M10 X 1.5, 40 mm LG
15	1	1	0001949	BACK BEAM
16	2	2	0001127	POST SLEEVE
17	4	4	0001125	POST SLEEVE NYLON BUSHING
18	4	4	0001126	POST SLEEVE LOCKING PLATE
19	1	1	0001020	WATER TUBE BRACKET, FLAT
20	1	1	0002052	RAPIDCHANGE MOUNTING PLATE
21	1	1	0002053	RAPIDCHANGE TENSION BLOCK
22	1	1	0002054	RAPIDCHANGE SHAFT SLEEVE
23	1	1	0002241	RAPIDCHANGE TENSION BAR, TORQUE GAUGE, TR18X3 THD
24	1	1	0002056	RAPIDCHANGE BACK PLATE
25	2	2	0002350	HEX BOLT, M12 X 1.25, 20 mm LG, 2.5 mm CHAMFER
26	1	1	0003116	SPRING WASHER HOLDER
27	6	6	0002637	SPRING WASHER HOLDER SPACER
28	1	1	0001029	TENSION HANDLE
29	2	2	0001030	HANDLE GRIP, GROOVED, 26 mm ID, 108 mm LG
30	6	4	0002023	SPACER, ADJUSTABLE BLADE GUIDE
31	1	-	0003529	ADJUSTABLE BLADE GUIDE ROLLER CARRIAGE, 41 mm X 120 [∞] ROLLERS
32	2	-	0003525	TRACK ROLLER SHAFT W/ HEAD, CONCENTRIC, M12 X 1.75 THD
33	1	-	0003527	TRACK ROLLER SHAFT W/ HEAD, ECCENTRIC, M10 X 1.5 THD
34	3	-	0002657	TRACK ROLLER, V-GROOVE, 120 [∞] , 41 mm DIA X 20 mm WD
35	3	-	0003528	TRACK ROLLER SHAFT SPACER, 15 ID X 23 OD X 5 mm THK
36	1	-	0002660	BLADE GUIDE ADJUSTMENT ARM, 120 [∞] TRACK ROLLERS
37	1	-	0002673	PLASTIC HANDLE, TAPERED, 29 mm DIA, 112 mm LG, M12 X 1.75 THD HOLE
38	1	-	0002666	BLADE GUARD GUIDE
39	1	-	0002665	BLADE GUARD, ADJUSTABLE BLADE GUIDE
40	2	1	0002661	BALL-NOSE SPRING PLUNGER, HEX DRIVE, NON-LOCKING, M12 X 1.75, 26 mm LG
41	1	-	0002667	KNOB, MULTI-LOBE, 38 mm OD, M8 X 1.25, 12 mm LG
42	-	1	0002020	BLADE GUIDE HOLDER BRACKET, RIGHT



Item	Quantity		Part No.	Description
	14 hp	9.5 hp		
43	1	1	0002022	BLADE GUIDE HOLDER BRACKET, LEFT
44	2	2	0001093	GUIDE BLOCK HOLDER
45	1	1	0001096	GUIDE BLOCK HOLDER SHAFT A
46	-	1	0001091	GUIDE BLOCK HOLDER SHAFT B
47	1	-	0002663	GUIDE BLOCK HOLDER SHAFT B, GUARD MOUNT
48	4	4	0001090	GUIDE BLOCK
49	-	1	0001092	DRIP NOZZLE
50	1	-	0002664	GREASE FITTING, STRAIGHT, 14 mm LG, M6 TPR THD, MODIFIED
51	1	1	0002759	SAW BLADE STOPPER
52	1	1	0001951	BAND WHEEL HOUSING
53	1	1	0001952	BAND WHEEL DOOR, LEFT
54	1	1	0001953	BAND WHEEL DOOR, RIGHT
55	2	2	0001954	BAND WHEEL HOUSING INNER HINGE BRACKET
56	2	2	0001955	BAND WHEEL HOUSING OUTER HINGE BRACKET
57	3	3	0003161	LATCH SPACER
58	3	3	0002248	ADJUSTABLE DRAW LATCH
59	1	1	0001659	KNOB, MULTI-LOBE, 48 mm OD, M8 X 1.25, 17 mm LG
60	1	1	0001104	DRIVE SHAFT
61	1	1	0001993	FOLLOWER SHAFT
62	2	2	0001105	BAND WHEEL, 19 in
63	1	1	0001107	V-BELT, FOLLOWER, B1448Li, 19 in DIA
64	1	1	0002017	BELT TENSIONER SHAFT SPACER
65	1	1	0002643	BELT TENSIONER ADAPTER PLATE W/ LEVELLING WASHER HOUSING
66	1	1	0002644	BELT TENSIONER IDLER SHAFT, LEVELLING WASHERS
67	1	1	0002645	BELT TENSIONER PULLEY, SINGLE BEARING, SPHERICAL ALIGNMENT
68	1	1	0002646	KEY, 8 X 8 mm, 37 mm LG
69	1	1	0002019	NUT LOCKING PLATE
70	1	1	0001655	MANUAL TUBE
71	1	1	0001217	CLUTCH SPACER
72	1	1	0001137	PARALLEL KEY, 1/4 X 1/4 X 1 in LG
73	-	1	0001823	CLUTCH ASSEMBLY, 1 in [25.4 mm] BORE, 87 mm DIA PULLEY
74	1	-	0001824	CLUTCH ASSEMBLY, 1 in [25.4 mm] BORE, 108 mm DIA PULLEY
75	1	1	0001814	CLUTCH HOUSING GUARD W/ SIDE FLANGES
76	1	1	0002079	OIL DRAIN EXTENSION, 56 mm LG, M12 X 1.5 THD
77	1	1	0001136	EXHAUST REDIRECT
78	-	1	0001983	VALVE MOUNT BRACKET, 9.5 HP
79	1	-	0001986	VALVE MOUNT BRACKET, 14 HP
80	-	1	0001984	VALVE ACTUATION TAB, 9.5 HP
81	1	-	0001987	VALVE ACTUATION TAB, 14 HP
82	1	1	0001985	CABLE THIMBLE, 10 mm HEX, M6 X 1 THD
83	1	1	0001123	SAW BLADE, 7/8 in PITCH, 165 TEETH, 1-1/4 WD X 144 LG X .042 in THK
84	2	2	0001135	FRONT POST
85	2	2	0002067	BACK POST
86	2	2	0001660	PLASTIC END CAP, RECT, 50 X 50 mm
87	4	4	0001143	CARRIAGE SIDE PLATE
88	4	4	0001966	SPACER, 32 mm OD, 20.5 mm ID, 40 mm LG
89	4	4	0001967	SPACER, 32 mm OD, 20.5 mm ID, 10 mm LG



Item	Quantity		Part No.	Description
	14 hp	9.5 hp		
90	2	2	0001102	SPACER, 33.5 OD X 13 ID X 50 mm LG
91	4	4	0001037	CARRIAGE WHEEL
92	4	4	0001019	WHEEL SWEEP BRACKET
93	4	4	0001017	WHEEL SWEEP HOLDER
94	4	4	0001018	WHEEL SWEEPER
95	1	1	0001139	CROSS BEAM
96	2	2	0001661	PLASTIC END CAP, RECT, 100 X 50 mm
97	1	1	0002096	LOG SCALE MOUNTING BRACKET
98	1	1	0002097	LOG SCALE GUIDE
99	1	1	0002098	LOG SCALE GUIDE LOCKING PLATE
100	1	1	0002099	LOG SCALE INDICATOR ARROW
101	1	1	0002764	KNOB, MULTI-LOBE, 48 mm OD, M8 X 1.25, 25 mm LG
102	1	1	0002040	LOG SCALE BRACKET
103	1	1	0001038	LOG SCALE BRACKET SPACER PLATE
104	1	1	0003233	MAGNETIC SCALE, 27 in, YELLOW
105	1	1	0003235	MAGNETIC SCALE, 27 in, WHITE
106	1	1	0002034	LUBRICANT TANK, 10 L [2.6 gal], MANOMETER/BADGE MOUNT
107	1	1	0001132	TANK CAP
108	1	1	0002037	HM126 NAMEPLATE
109	1	1	0002038	NAMEPLATE BACKING
110	1	1	0002809	MANOMETER PIPE, LUBRICATION TANK
111	1	1	0002691	LUBRICATION TUBING, TANK-TO-ELBOW, 2-3/16 in [55 mm] LG
112	1	1	0002692	LUBRICANT TUBING, TANK-TO-VALVE, 8 mm OD, 22-1/4 in [565 mm] LG
113	1	1	0002693	LUBRICANT TUBING, VALVE-TO-BLADE, 8 mm OD, 32-1/2 in [825 mm] LG
114	1	1	0002066	DASHBOARD
115	1	1	0002671	HOUR METER
116	1	1	0001120	LIFT MECHANISM HOUSING
117	1	1	0001048	BRASS NUT, LIFT MECHANISM, TR20X4 THD
118	1	1	0001134	CRANK HANDLE SHAFT, TR20X4 THD
119	1	1	0001121	LIFT MECHANISM EXTENSION ARM
120	6	6	0002812	SPACER, 12 ID X 18 OD X 12 mm LG
121	2	2	0002813	SPACER, 12 ID X 18 OD X 5 mm LG
122	7	7	0001099	CABLE PULLEY
123	2	2	0001100	CABLE HOOK
124	1	1	0002520	CRANK HANDLE INDEXING PLATE
125	1	1	0002632	CRANK HANDLE ARM LUG
126	2	2	0002675	SPACER, 12.5 ID X 30 OD X 3.3 mm LG
127	1	1	0002633	CRANK ARM
128	1	1	0002651	HANDLE, TAPERED, REVOLVING GRIP, 31 DIA X 102 mm LG, M12 x 1.75, 20 mm LG
129	1	1	0001144	WIRE ROPE LIFT CABLE, LEFT, 4 mm DIA, 120 in [3048 mm] LG
130	1	1	0001145	WIRE ROPE LIFT CABLE, RIGHT, 4 mm DIA, 77 in [1956 mm] LG
131	1	1	0002068	PUSH HANDLE, ADJUSTABLE
132	1	1	0001662	PLASTIC END CAP, CIRCULAR, 32 mm OD
133	1	1	0001021	THROTTLE HANDLE
134	1	1	0001024	THROTTLE CABLE BRACKET
135	1	1	0001112	THROTTLE CABLE BARREL END CLAMP
136	1	1	0001117	THROTTLE CABLE



Item	Quantity		Part No.	Description
	14 hp	9.5 hp		
137	1	1	0001839	SERIAL NUMBER LABEL
138	2	2	0002766	CAUTION LABEL, DO NOT OPERATE WITHOUT GUARDS
139	1	1	0002769	DANGER/WARNING COLLAGE LABEL
140	1	1	0002770	DANGER LABEL, MOVING PARTS CUT/CRUSH
141	1	1	0002771	DANGER LABEL, BANDSAW BLADE WILL CUT
142	1	1	0001829	BLADE TRACKING WARNING LABEL
143	1	1	0003245	BLADE TENSION LABEL
144	1	1	BX80	V-BELT, COGGED, BX80
145	-	1	CH395-3149	ENGINE, KOHLER COMMAND PRO HORIZONTAL, 9.5 hp
146	1	-	CH440-3149	ENGINE, KOHLER COMMAND PRO HORIZONTAL, 14 hp
147	4	4	5204-2RS	BALL BEARING, ANG-CONT, SLD, 5204-2RS, 20 mm BORE, 47 mm OD, 20.6 mm WIDE
148	2	2	6000-2RS	BALL BEARING, SEALED, 6000-2RS, 10 mm BORE, 26 mm OD, 8 mm WIDE
149	7	7	6001-2RS	BALL BEARING, SEALED, 6001-2RS, 12 mm BORE, 28 mm OD, 8 mm WIDE
150	1	1	6203-2RS	BALL BEARING, SEALED, 6203-2RS, 17 mm BORE, 40 mm OD, 12 mm WIDE
151	4	4	6305-2RS	BALL BEARING, SEALED, 6305-2RS, 25 mm BORE, 62 mm OD, 17 mm WIDE
152	2	2	51102	THRUST BEARING, SGL DIR, 51102, 15-16 mm BORE, 28 mm OD, 9 mm WIDE
153	1	1	51204	THRUST BEARING, SGL DIR, 51204, 20 mm BORE, 41.5 mm OD, 15 mm WIDE W/ HSG
154	1	1	0003452	STEM VALVE, 1/8 in NPT FEMALE, 1/8 in STEM TRAVEL
155	1	1	SLS-03-08	FLOW CONTROL VALVE, RA, 3/8 NPT, 8 mm QUICK-CONNECT TUBE
156	3	3	HDW	FITTING, STRAIGHT, BARBED, 1/8 in NPT, 1/4 in HOSE
157	1	-	HDW	FITTING, ELBOW, 90°, BARBED, 1/8 in NPT, 1/4 in HOSE
158	1	1	HDW	FITTING, ELBOW, 90°, BARBED, 6 mm ID TUBE, WHITE
159	1	1	HDW	COMPRESSION SPRING, GROUND ENDS, 0.72 OD, 0.096 in DIA WIRE, 1.75 in LG
160	1	1	HDW	COMPRESSION SPRING, GROUND ENDS, 8.5 OD, 0.9 DIA WIRE, 27 mm LG
161	1	1	HDW	EXTENSION SPRING, 8.5 mm OD, 1.5 mm WIRE, 60 mm LG
162	1	1	HDW	SPRING PIN, SLOTTED, 5 mm DIA, 20 mm LG
163	2	2	HDW	HEX BOLT, M6 X 1, 20 mm LG
164	2	2	HDW	HEX BOLT, M6 X 1, 22 mm LG
165	4	4	HDW	HEX BOLT, M6 X 1, 35 mm LG
166	1	1	HDW	HEX BOLT, M6 X 1, 50 mm LG
167	1	1	HDW	HEX BOLT, M6 X 1, 55 mm LG, 18 mm LG THD
168	2	2	HDW	HEX BOLT, M8 X 1.25, 12 mm LG
169	4	4	HDW	HEX BOLT, M8 X 1.25, 16 mm LG
170	24	26	HDW	HEX BOLT, M8 X 1.25, 20 mm LG
171	4	4	HDW	HEX BOLT, M8 X 1.25, 25 mm LG
172	1	1	HDW	HEX BOLT, M8 X 1.25, 30 mm LG
173	4	6	HDW	HEX BOLT, M8 X 1.25, 35 mm LG
174	2	2	HDW	HEX BOLT, M8 X 1.25, 110 mm LG, 22 mm LG THD
175	2	2	HDW	HEX BOLT, M8 X 1.25, 130 mm LG
176	2	2	HDW	HEX BOLT, M10 X 1.5, 20 mm LG
177	3	3	HDW	HEX BOLT, M10 X 1.5, 25 mm LG
178	-	4	HDW	HEX BOLT, M10 X 1.5, 45 mm LG
179	8	4	HDW	HEX BOLT, M10 X 1.5, 50 mm LG
180	1	1	HDW	HEX BOLT, M12 X 1.75, 20 mm LG
181	1	1	HDW	HEX BOLT, M12 X 1.75, 35 mm LG
182	2	2	HDW	HEX BOLT, M12 X 1.75, 45 mm LG
183	1	1	HDW	HEX BOLT, M12 X 1.75, 65 mm LG, 30 mm LG THD




Item	Quantity		Part No.	Description
	14 hp	9.5 hp		
184	16	16	HDW	HEX BOLT, M12 X 1.75, 80 mm LG, 30 mm LG THD
185	6	6	HDW	HEX BOLT, M12 X 1.75, 90 mm LG, 30 mm LG THD
186	2	2	HDW	HEX BOLT, M12 X 1.75, 100 mm LG, 30 mm LG THD
187	2	2	HDW	HEX BOLT, M12 X 1.75, 110 mm LG
188	1	1	HDW	HEX BOLT, M12 X 1.75, 120 mm LG, 30 mm LG THD
189	1	1	HDW	HEX BOLT, M16 X 2, 90 mm LG, 38 mm LG THD
190	4	4	HDW	HEX BOLT, M20 X 2.5, 120 mm LG, 46 mm LG THD
191	2	2	HDW	HEX BOLT, 3/8-16, 3/4 in LG
192	1	-	HDW	HEX BOLT, 3/8-24, 1-1/4 in LG
193	-	1	HDW	HEX BOLT, 7/16-20, 1-1/4 in LG
194	32	32	HDW	HEX BOLT, FLANGED, M10 X 1.5, 25 mm LG
195	16	16	HDW	HEX BOLT, FLANGED, M10 X 1.5, 35 mm LG
196	2	2	HDW	HEX BOLT, FLANGED, M10 X 1.5, 70 mm LG, 26 mm LG THD
197	6	6	HDW	BUTTON HEAD SCREW, M4 X 0.7, 6 mm LG
198	2	2	HDW	BUTTON HEAD SCREW, M4 X 0.7, 10 mm LG
199	8	8	HDW	BUTTON HEAD SCREW, M6 X 1, 16 mm LG
200	4	-	HDW	BUTTON HEAD SCREW, M8 X 1.25, 35 mm LG
201	4	4	HDW	SHCS, M8 X 1.25, 20 mm LG
202	2	2	HDW	SHCS, M10 X 1.5, 25 mm LG
203	1	-	HDW	SHCS, M12 X 1.75, 40 mm LG, 36 mm LG THD
204	1	1	HDW	SHLDR SCREW, HEX HEAD, 11 X 35 mm LG SHLDR, M10 X 1.5 X 18 mm LG THD
205	1	1	HDW	SCREW, PPH, M4 X 0.7, 12 mm LG
206	2	2	HDW	SCREW, PPH, M4 X 0.7, 30 mm LG
207	2	2	HDW	SCREW, PPH, M6 X 1, 14 mm LG
208	12	12	HDW	SCREW, PFH, M4 X 0.7, 10 mm LG
209	1	1	HDW	SCREW, HFH, M6 X 1, 30 mm LG, 18 mm THD
210	2	-	HDW	SCREW, HFH, M8 X 1.25, 20 mm LG
211	1	1	HDW	SCREW, HFH, M10 X 1.5, 20 mm LG
212	2	2	HDW	SELF-TAPPING SCREW, PPH, #10, 5/8 in LG
213	1	2	HDW	SET SCREW, FLAT TIP, M6 X 1, 8 mm LG
214	8	8	HDW	SET SCREW, FLAT TIP, M8 X 1.25, 8 mm LG, SST
215	4	4	HDW	FLAT WASHER, M4
216	35	35	HDW	FLAT WASHER, M6
217	26	23	HDW	FLAT WASHER, M8
218	12	12	HDW	FLAT WASHER, M8, NYLON
219	16	16	HDW	FLAT WASHER, M10
220	56	56	HDW	FLAT WASHER, M12
221	1	1	HDW	FLAT WASHER, M16
222	16	16	HDW	FLAT WASHER, M20
223	2	2	HDW	FENDER WASHER, M8, 30 mm OD
224	4	4	HDW	FENDER WASHER, M10, 30 mm OD
225	3	2	HDW	FENDER WASHER, M10, 34 mm OD
226	4	4	HDW	FENDER WASHER, M12, 31 mm OD
227	-	1	HDW	FENDER WASHER, M12, 37 mm OD
228	4	4	HDW	SPLIT LOCK WASHER, M6
229	9	8	HDW	SPLIT LOCK WASHER, M10
230	1	1	HDW	SPLIT LOCK WASHER, M12



Item	Quantity		Part No.	Description
	14 hp	9.5 hp		
231	24	24	HDW	BELLEVILLE WASHER, 20.4 ID, 40 OD, 2.5 THK, 3.45 mm HGT
232	2	2	HDW	LEVELLING WASHER, FEMALE, M16
233	2	2	HDW	LEVELLING WASHER, MALE, M16
234	2	2	HDW	SEALING WASHER, M12
235	2	2	HDW	HEX NUT, M8 X 1.25
236	4	4	HDW	HEX NUT, M12 X 1.75
237	1	1	HDW	HEX NUT, THIN, M6 X 1, 3.2 mm THK
238	4	1	HDW	HEX NUT, THIN, M12 X 1.75, 6 mm THK
239	4	4	HDW	HEX NUT, FLANGED, M10 X 1.5
240	10	10	HDW	LOCK NUT, M4 X 0.7
241	17	17	HDW	LOCK NUT, M6 X 1
242	32	30	HDW	LOCK NUT, M8 X 1.25
243	7	6	HDW	LOCK NUT, M10 X 1.5
244	29	29	HDW	LOCK NUT, M12 X 1.75
245	1	1	HDW	LOCK NUT, M16 X 2
246	4	4	HDW	LOCK NUT, M20 X 2.5
247	46	46	HDW	LOCK NUT, FLANGED, M10 X 1.5
248	2	2	HDW	SLOTTED NUT, ROUND, M14 X 1.5
249	7	7	HDW	RETAINING RING, INTERNAL, 28 mm BORE (29.4 mm GROOVE)
250	1	1	HDW	RETAINING RING, INTERNAL, 40 mm BORE (42.5 mm GROOVE)
251	2	2	HDW	RETAINING RING, INTERNAL, 62 mm BORE (65 mm GROOVE)




SAWHEAD—9.5 hp

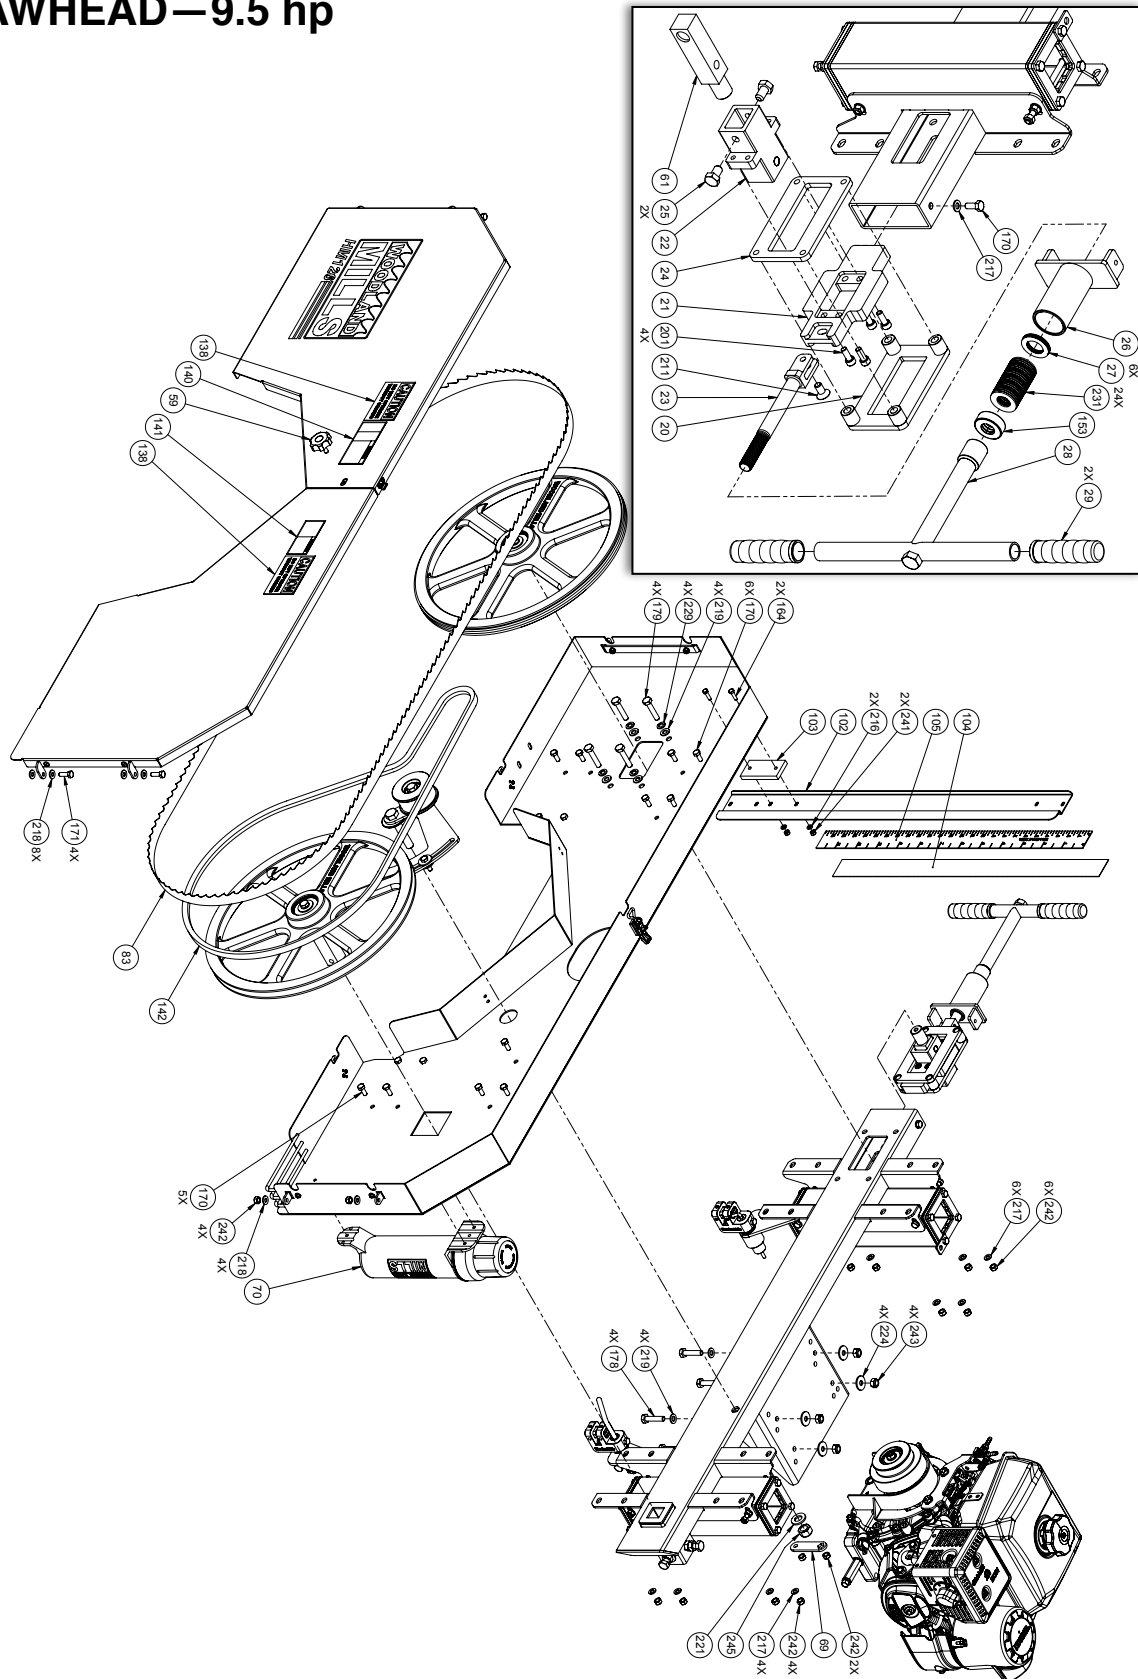




BACK BEAM—9.5 hp

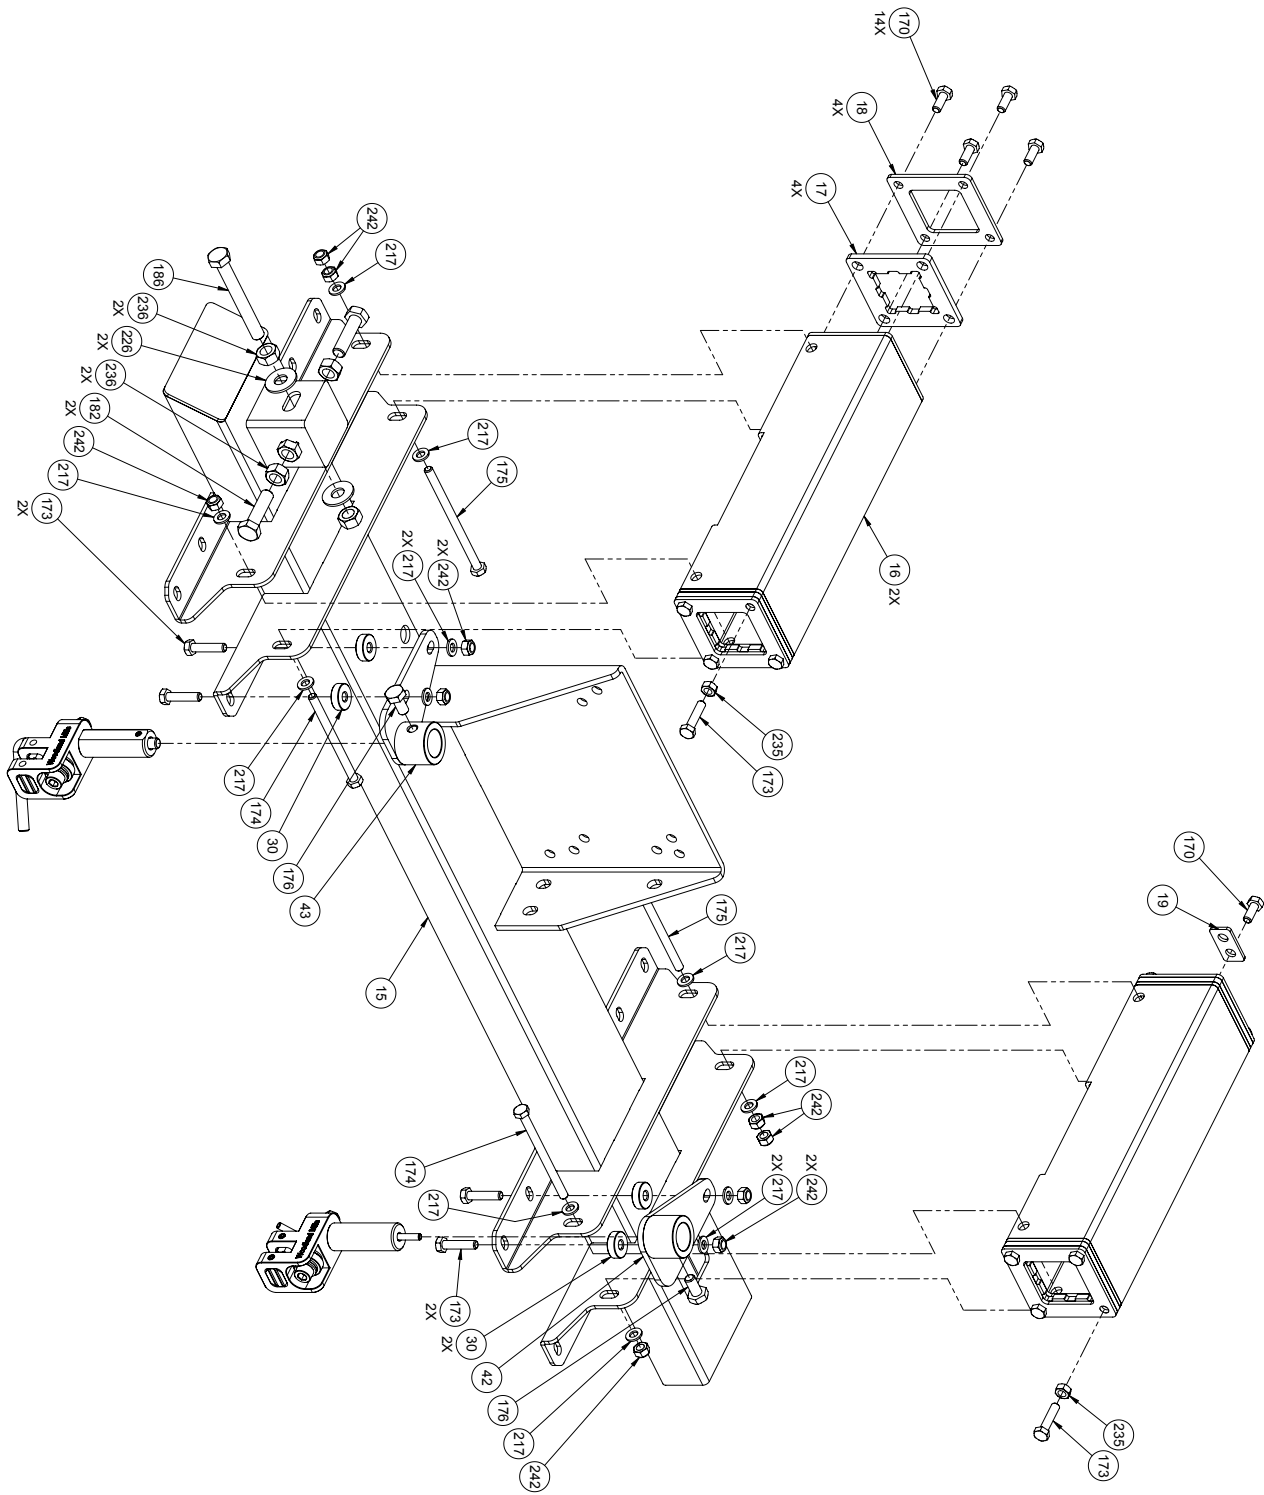




BAND WHEEL HOUSING

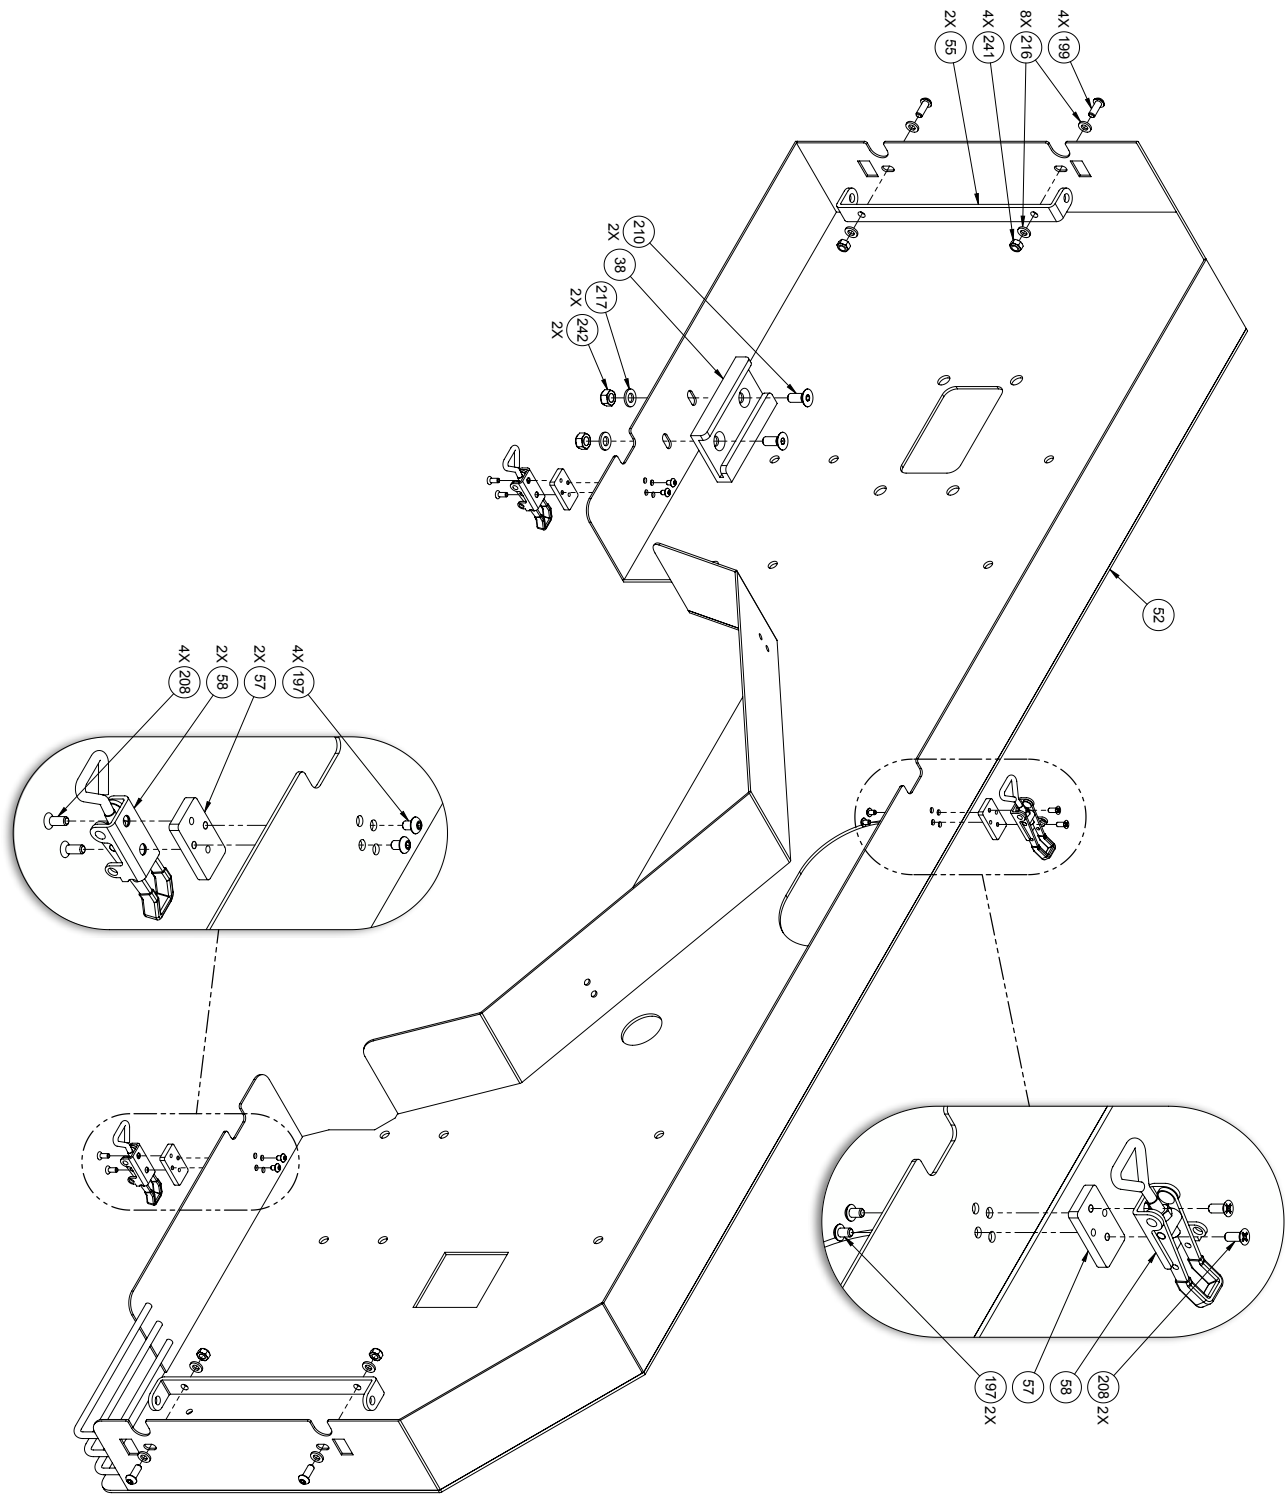




BAND WHEEL HOUSING DOORS

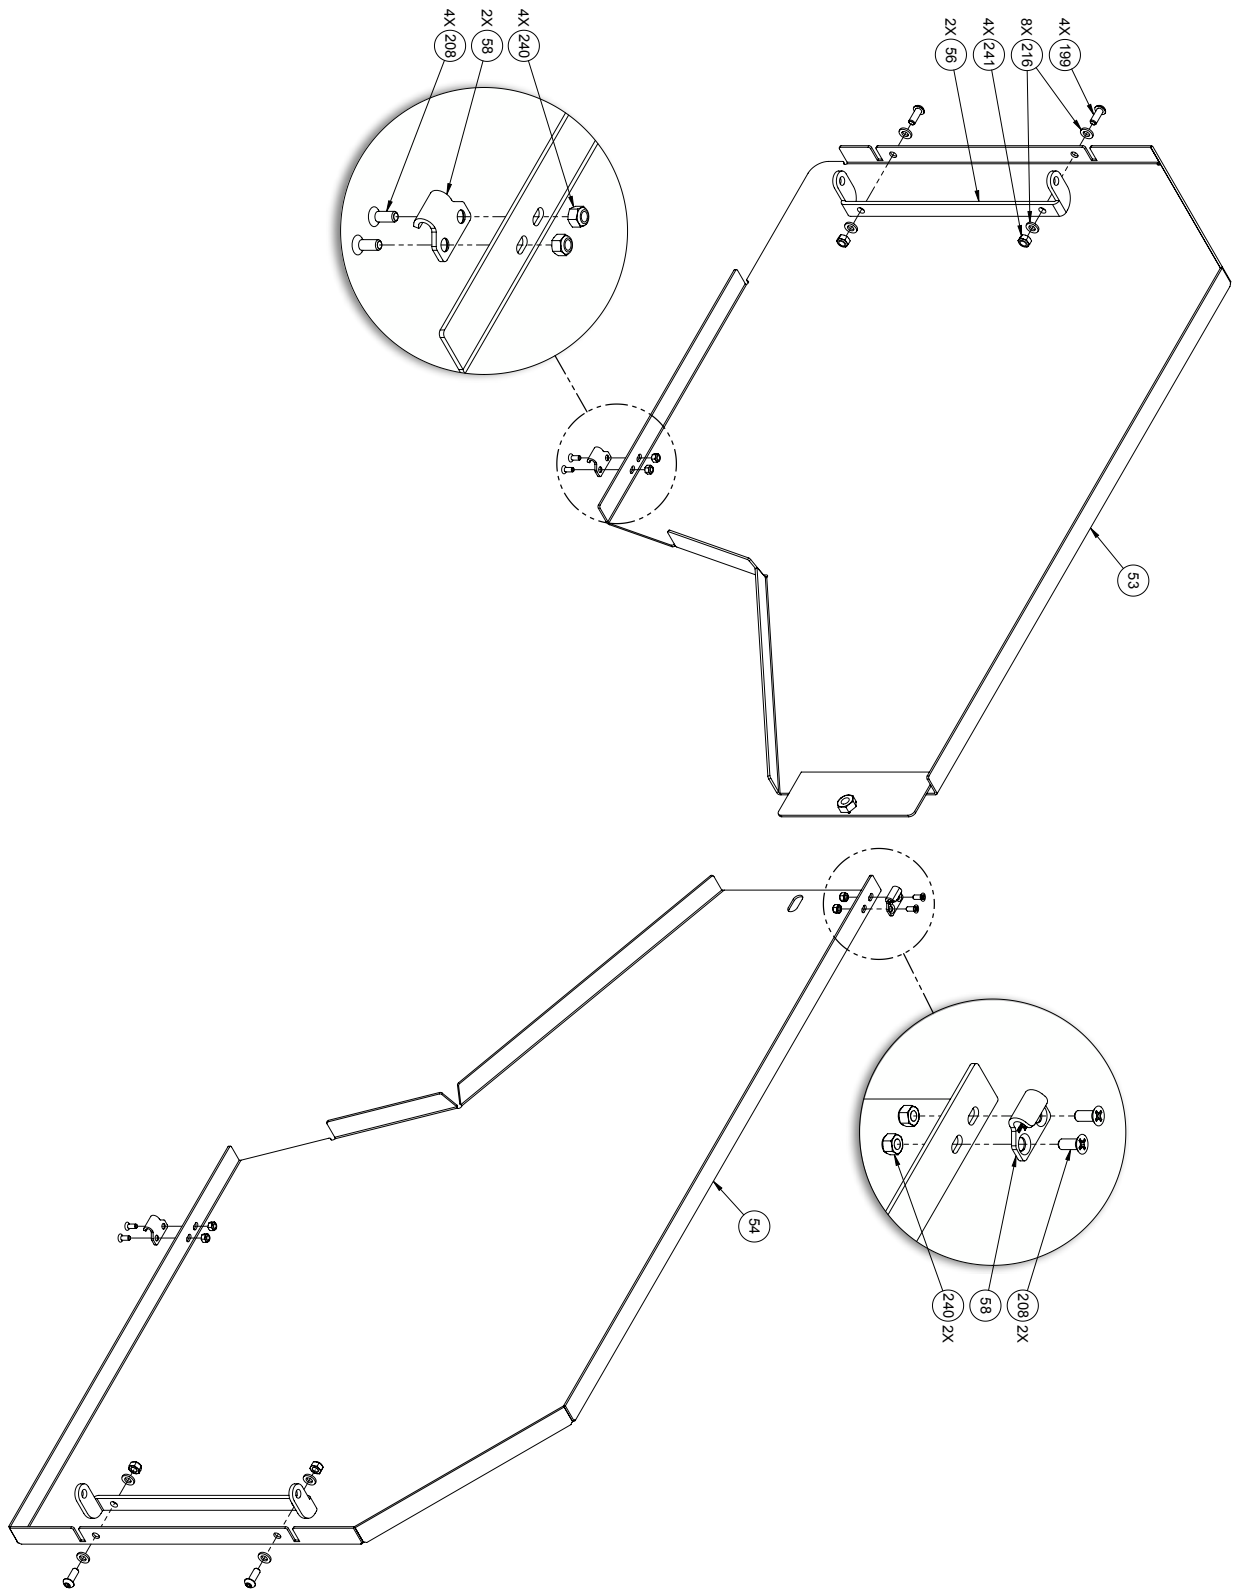




BAND WHEELS AND BELT TENSIONER

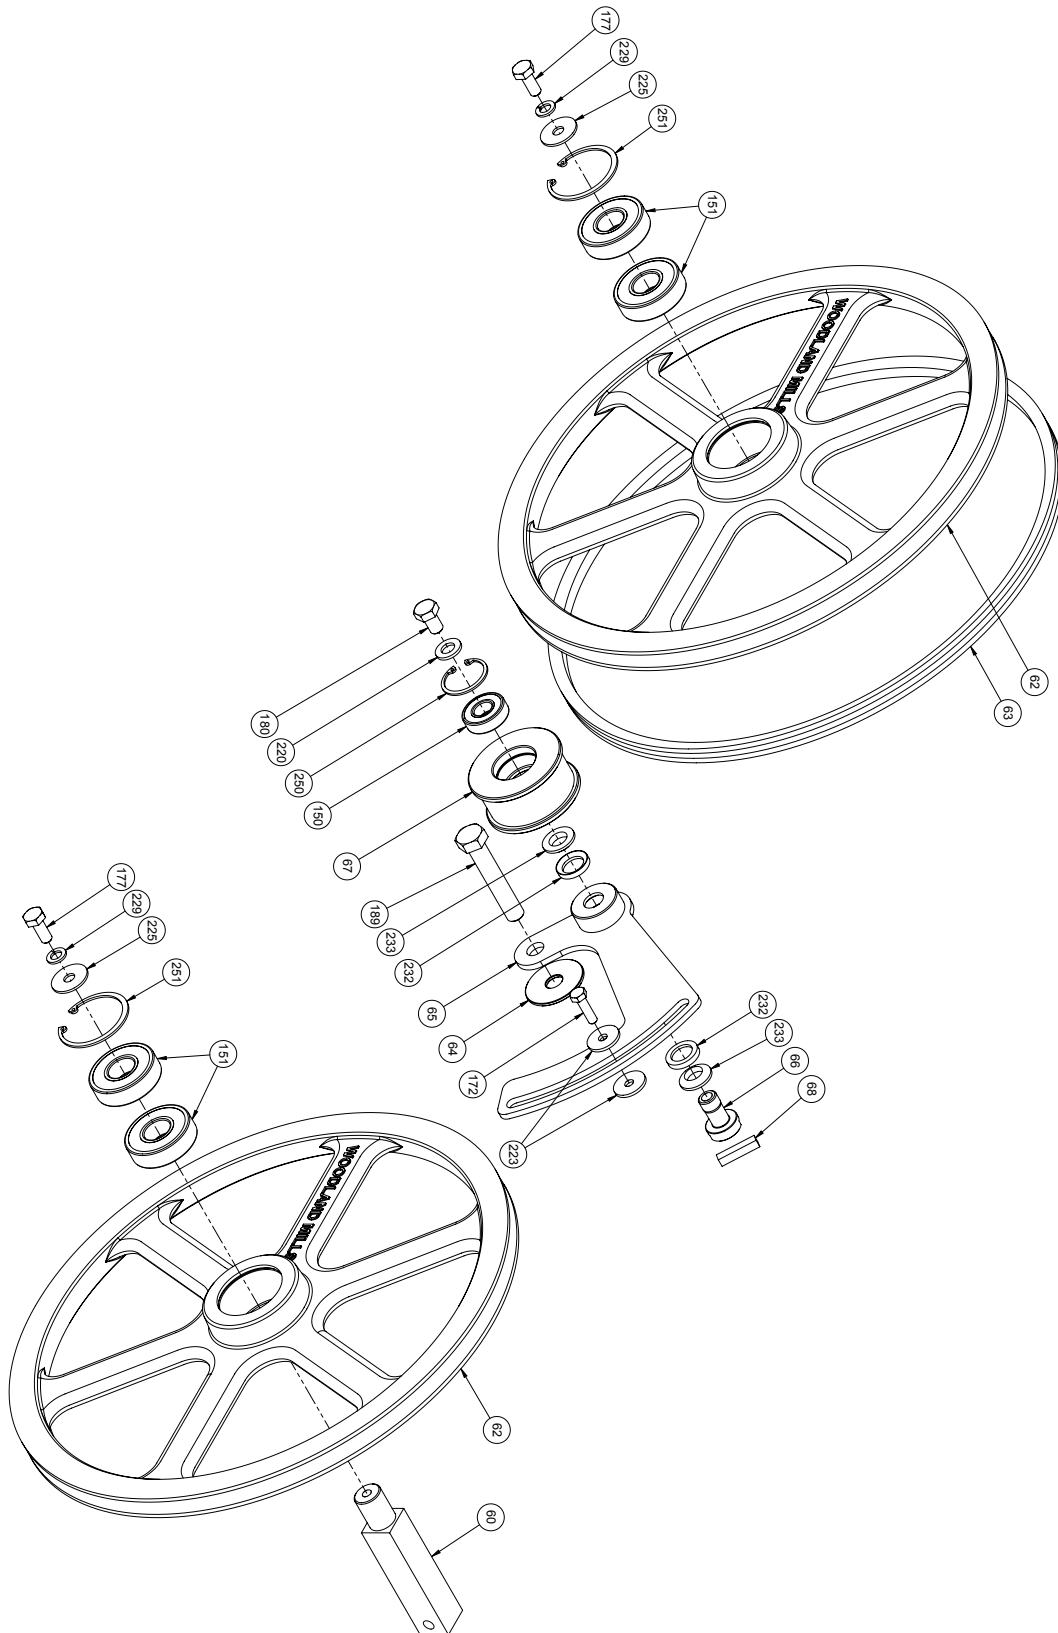




ENGINE COMPONENTS—14 hp

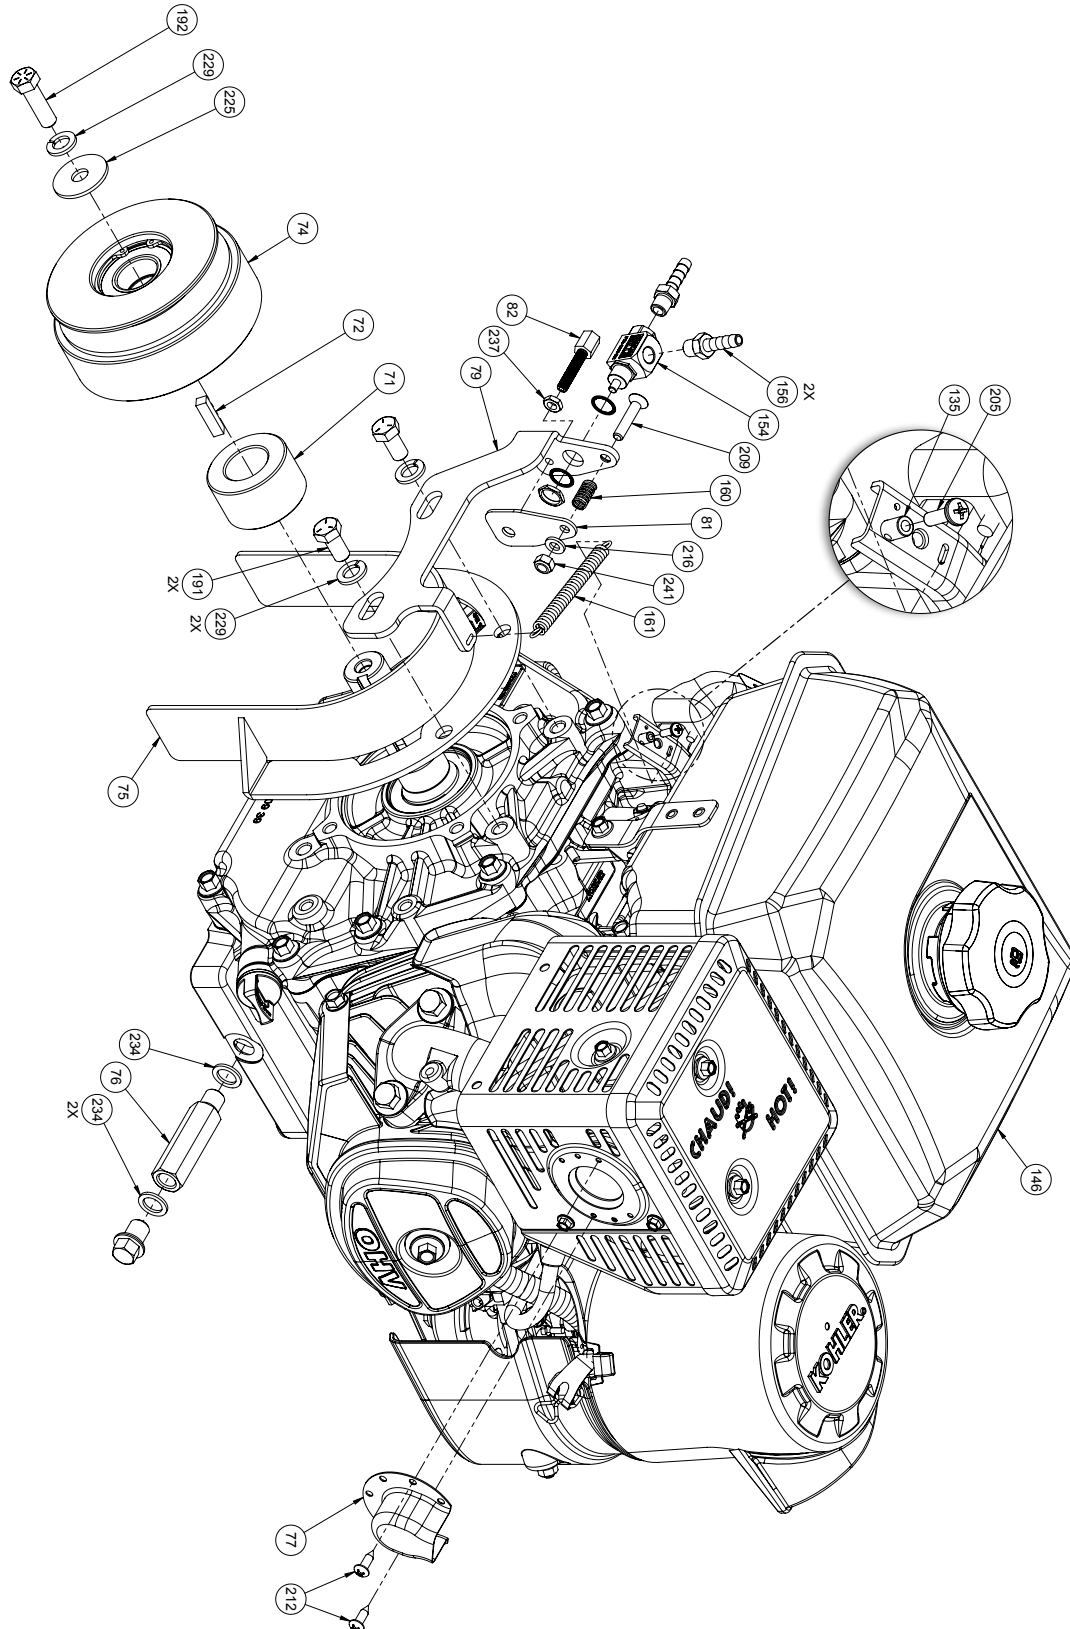




ENGINE COMPONENTS—9.5 hp

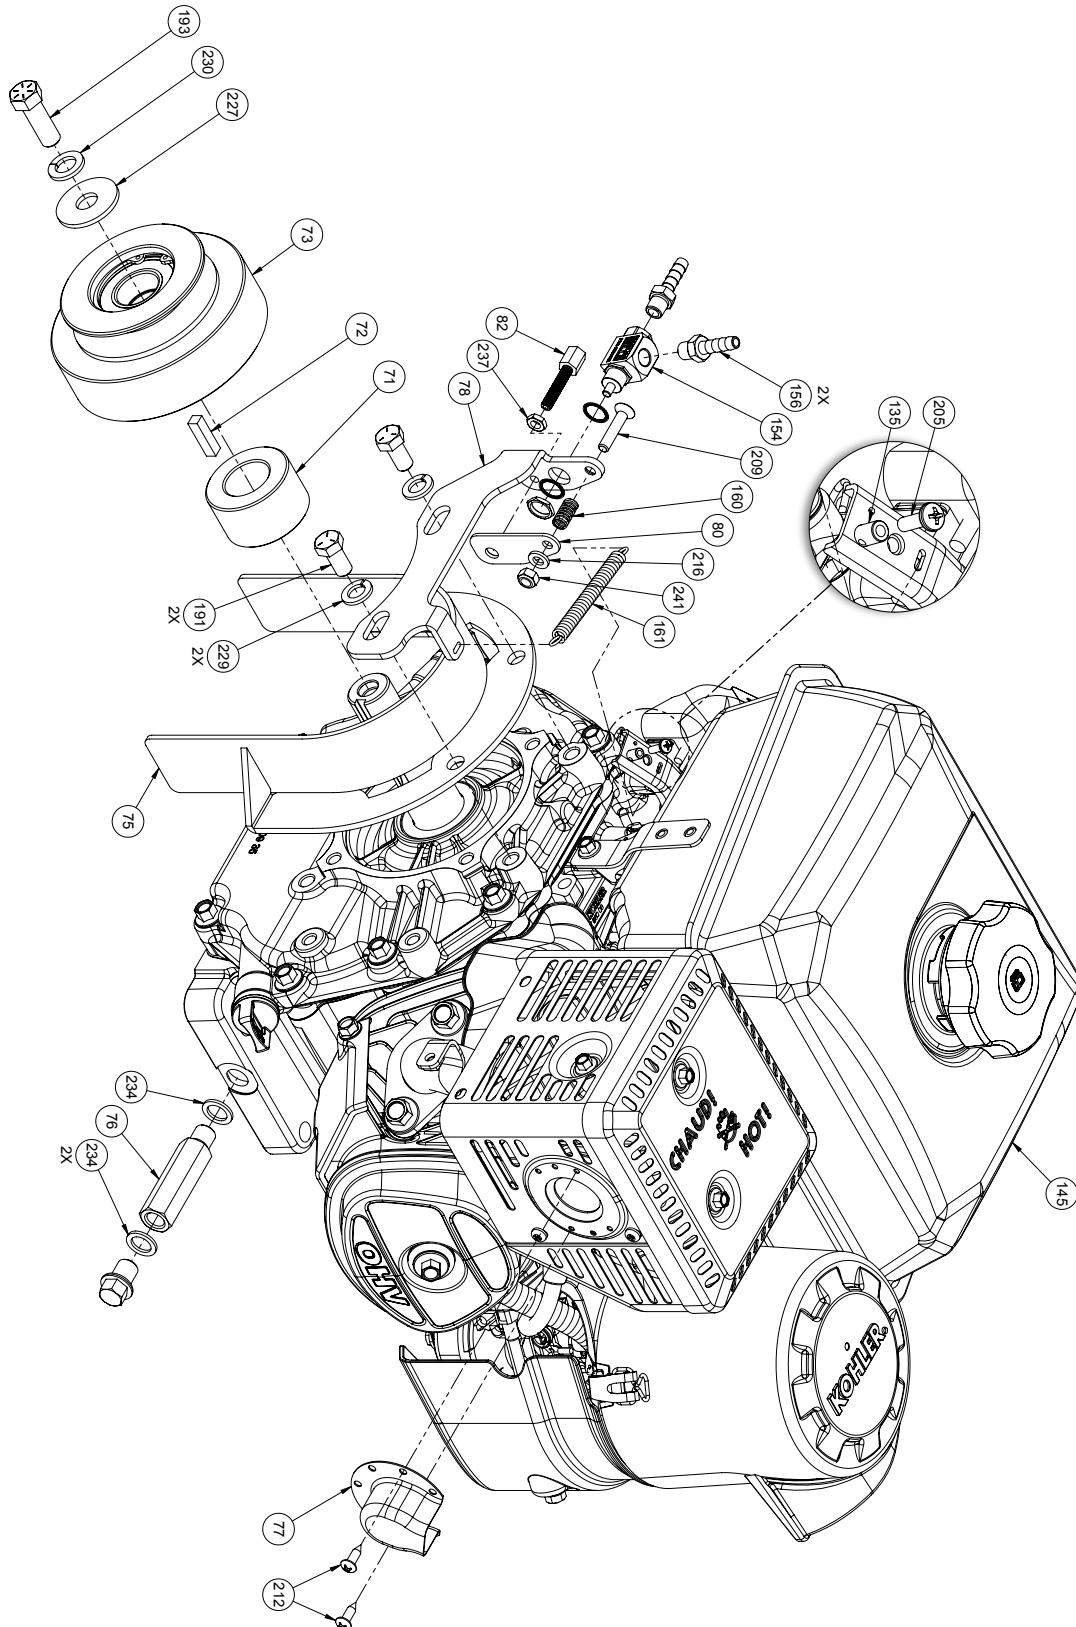




CARRIAGE

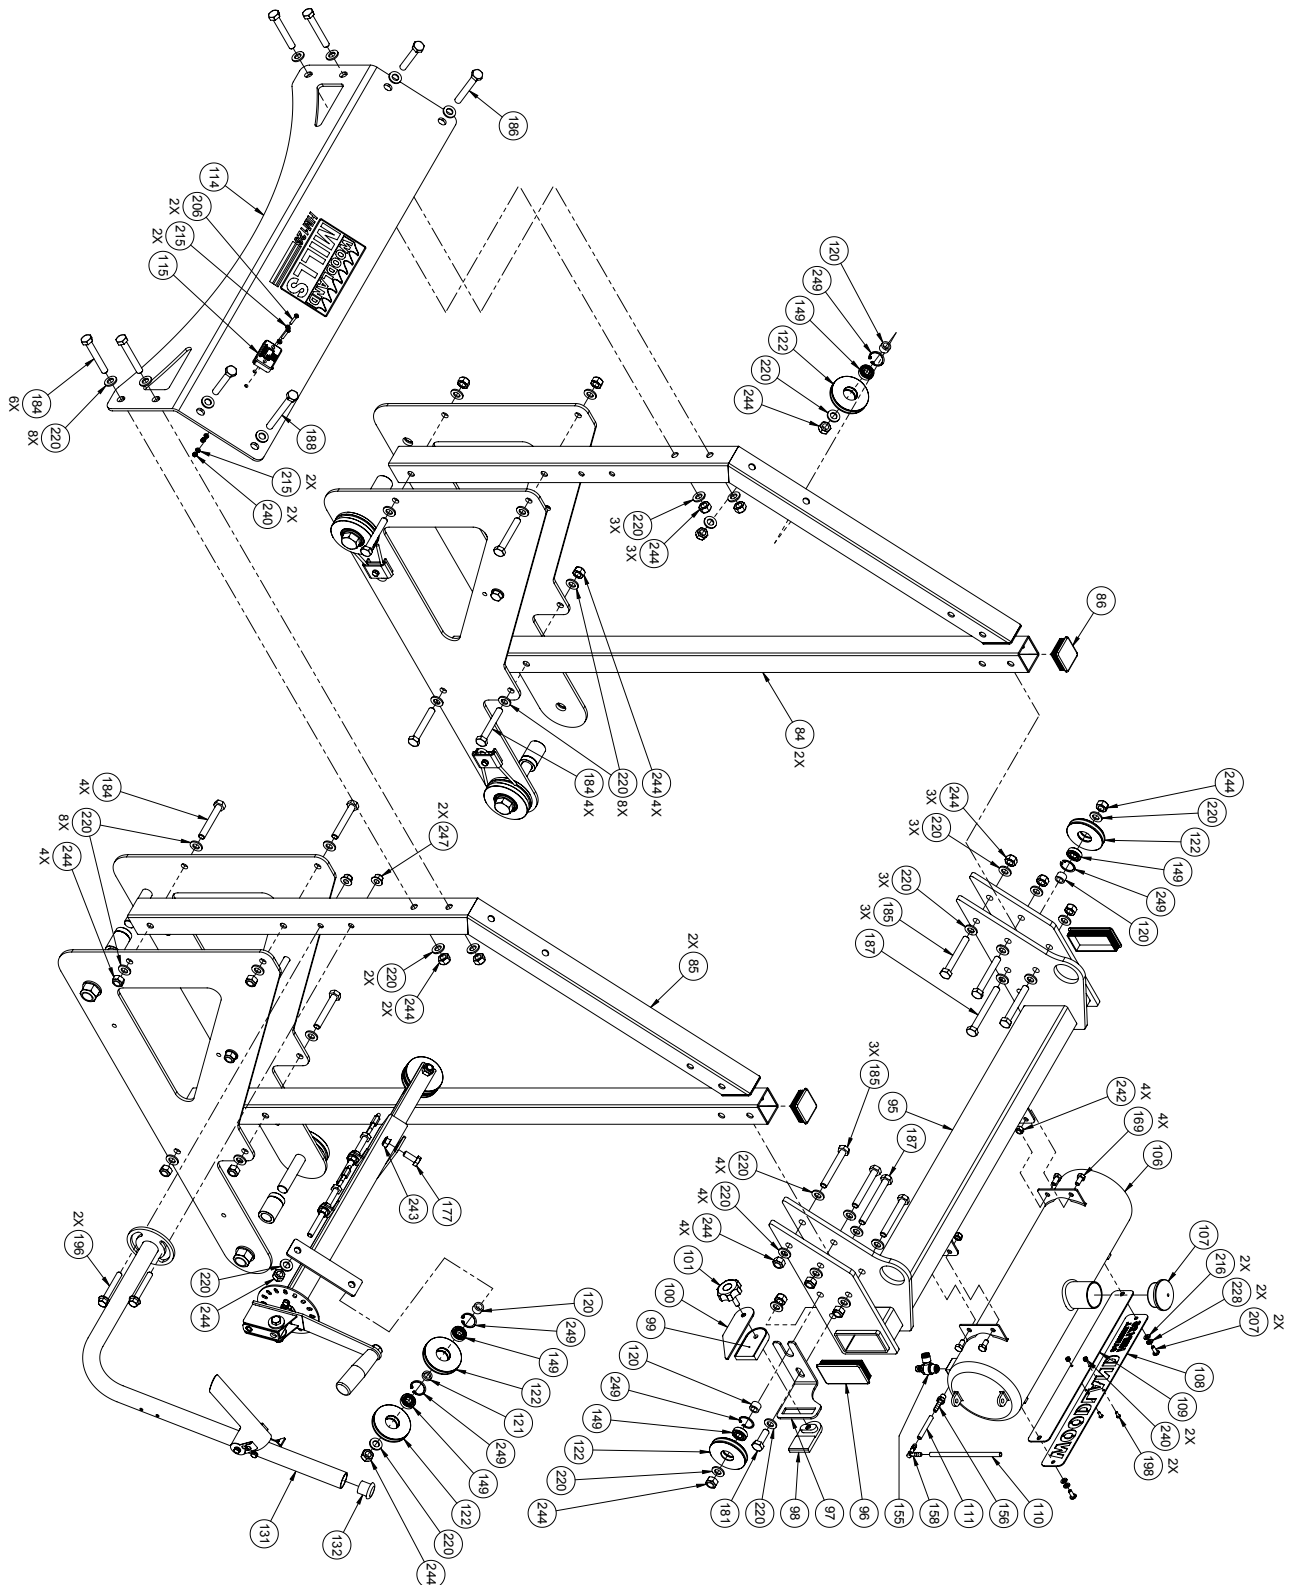




CARRIAGE LEG, WHEEL, AND SWEEPER

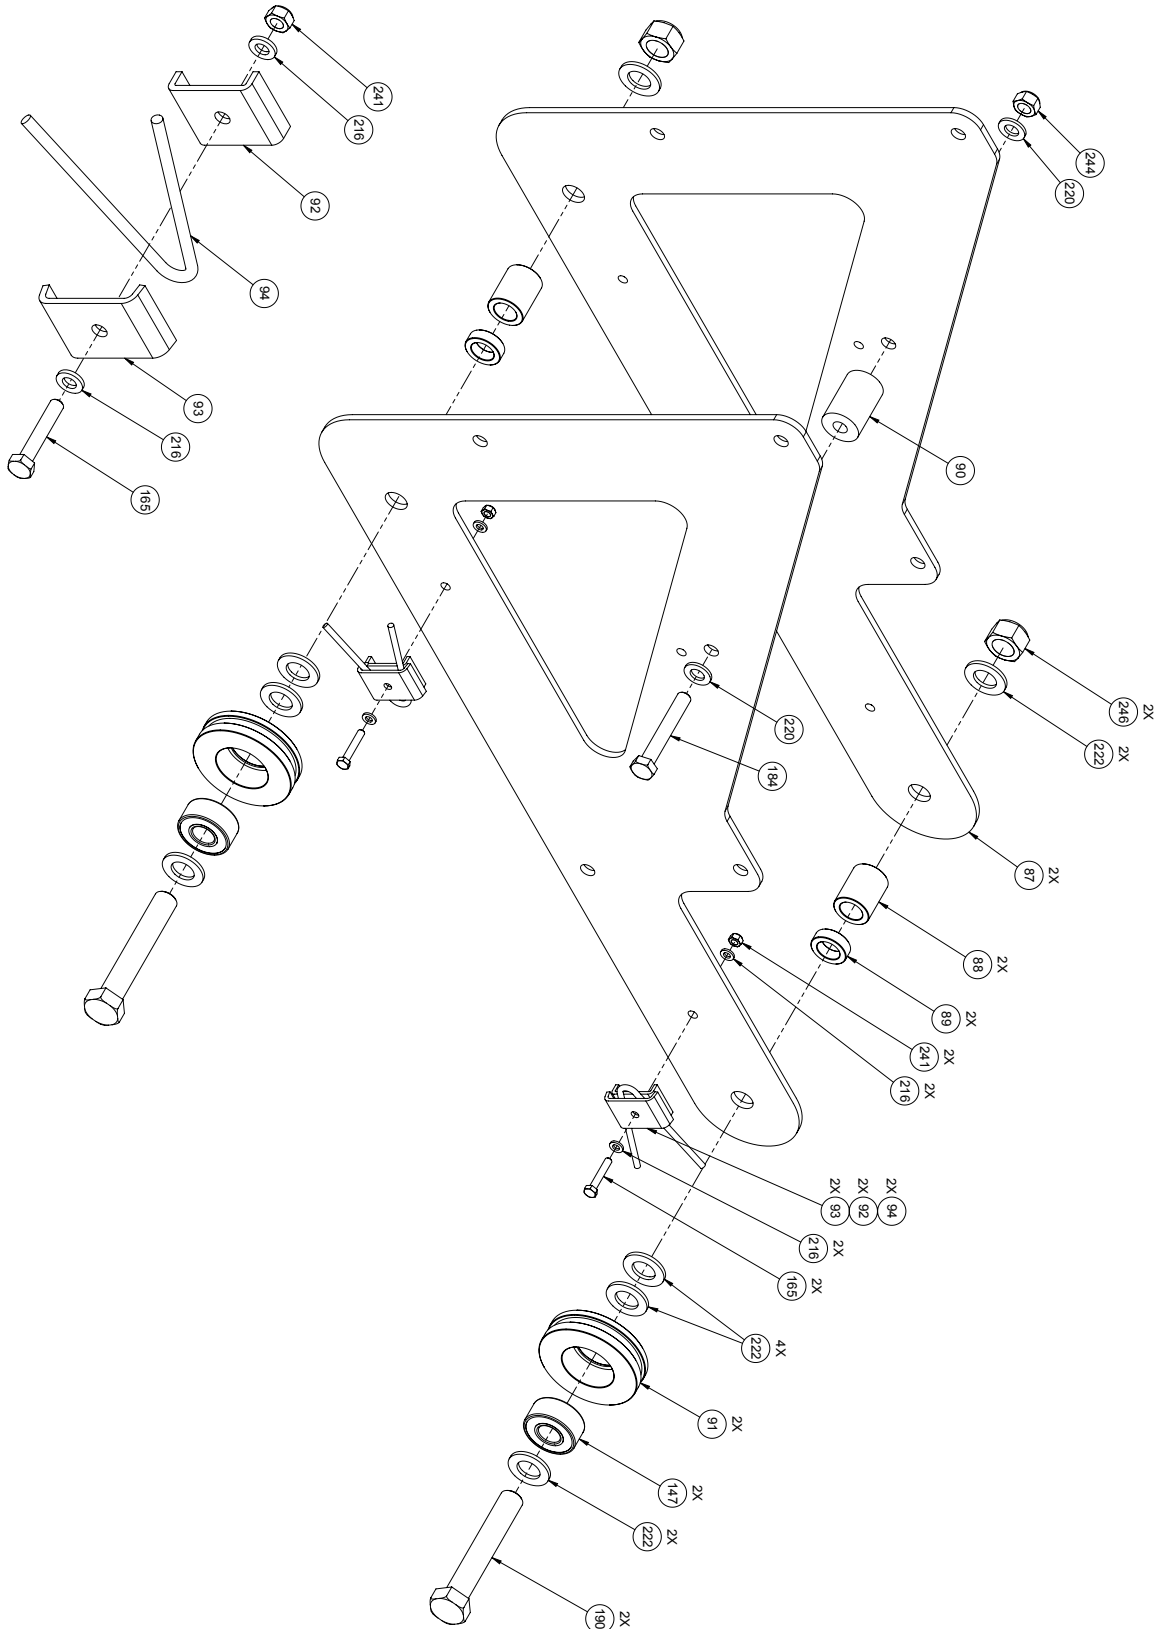





LIFT MECHANISM

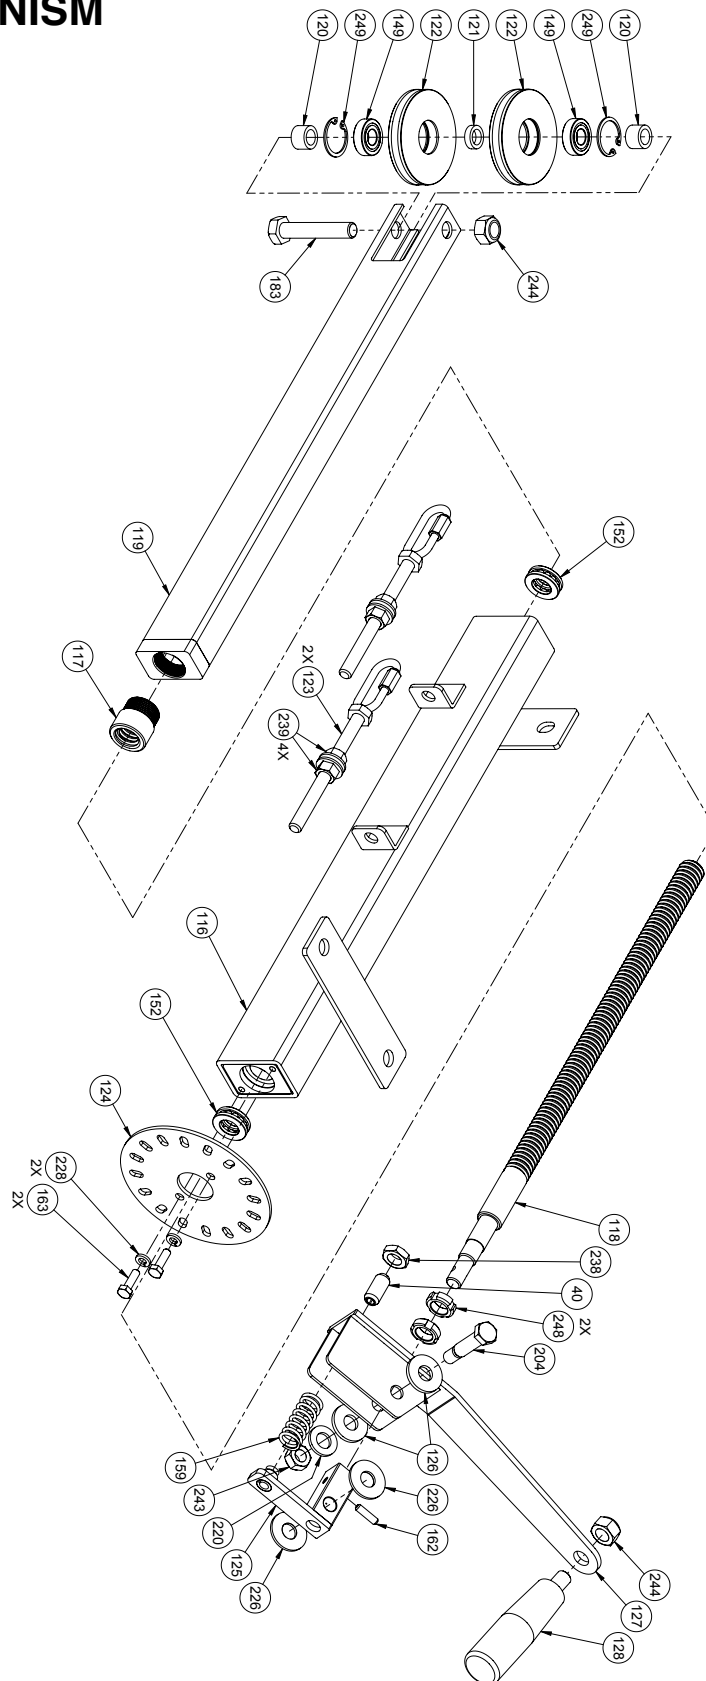




THROTTLE HANDLE

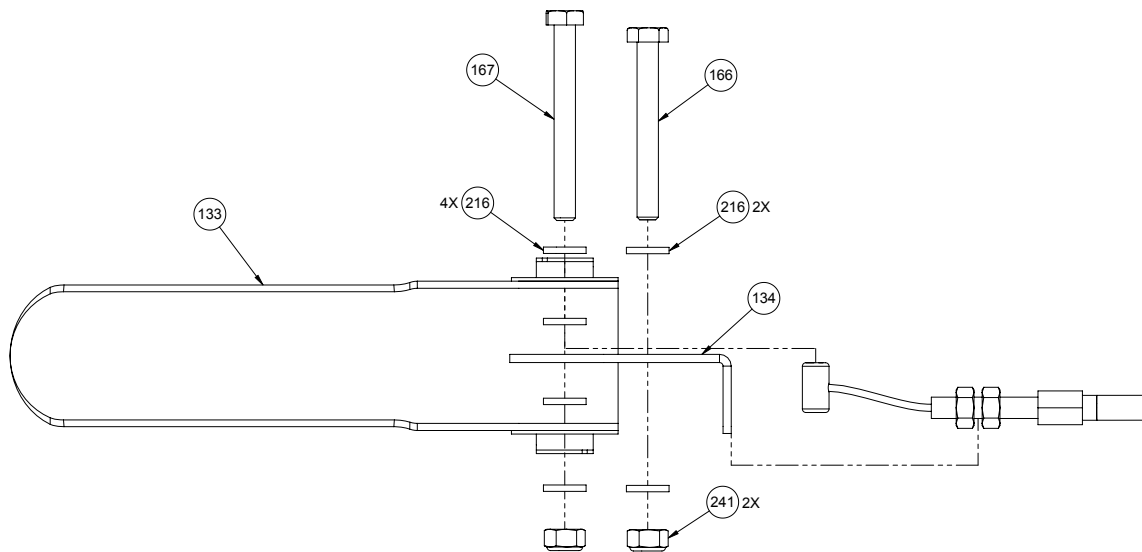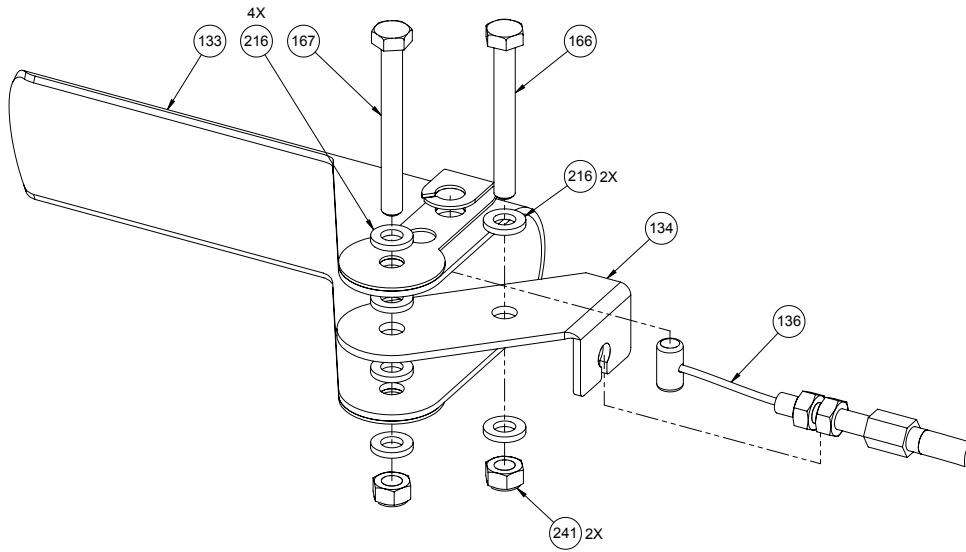



CABLES, TUBING & LABELS

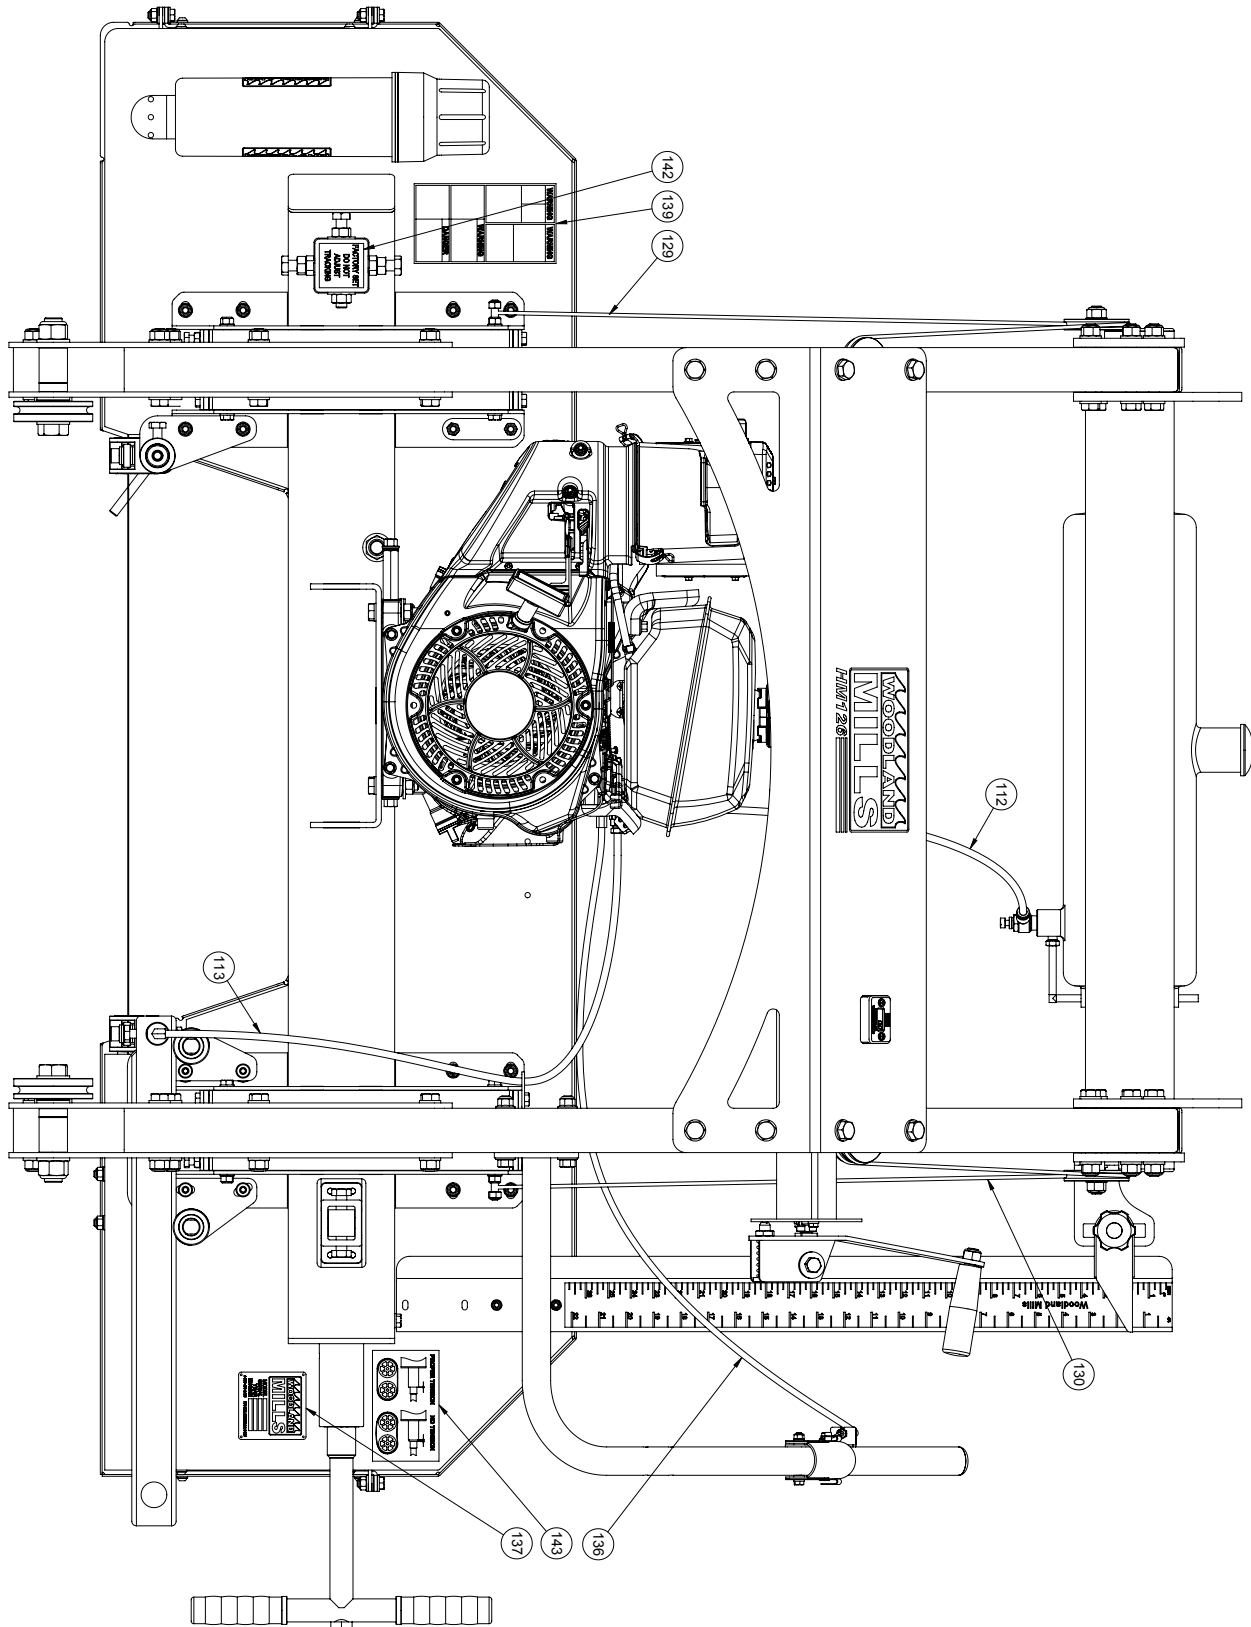

This page intentionally left blank.

