

QUICKSTART

KM 100/100 R Bp/Bp Pack



Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damage of the appliance and to risks for the operator and other persons.


Start up

1



Bp model


- A Open the device hood.
- B Switch off the charger and remove the plug from the socket.
Pull the battery cable from the charger cable and connect it to the appliance.
- C Close cover.

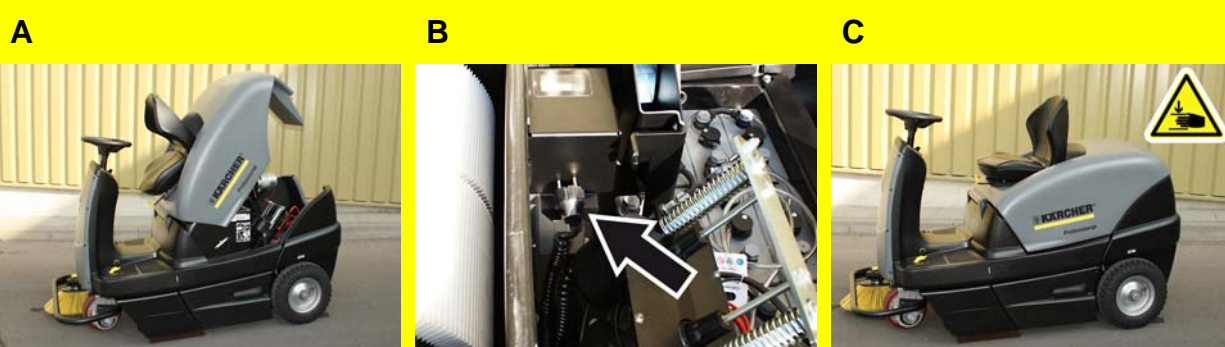

Bp Pack model

- A Open the device hood.
- B Unplug the charger from the mains.
Place the mains cable into the storage compartment.
- C Close cover.

2

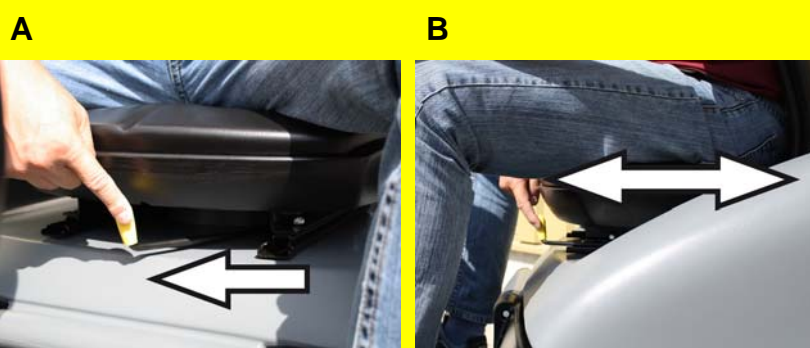


Adjust the seat

- A Pull seat adjustment lever inwards.
- B Move seat, release lever and lock in place.
Check that the seat is properly locked in position by attempting to move it backwards and forwards.

Operation

1

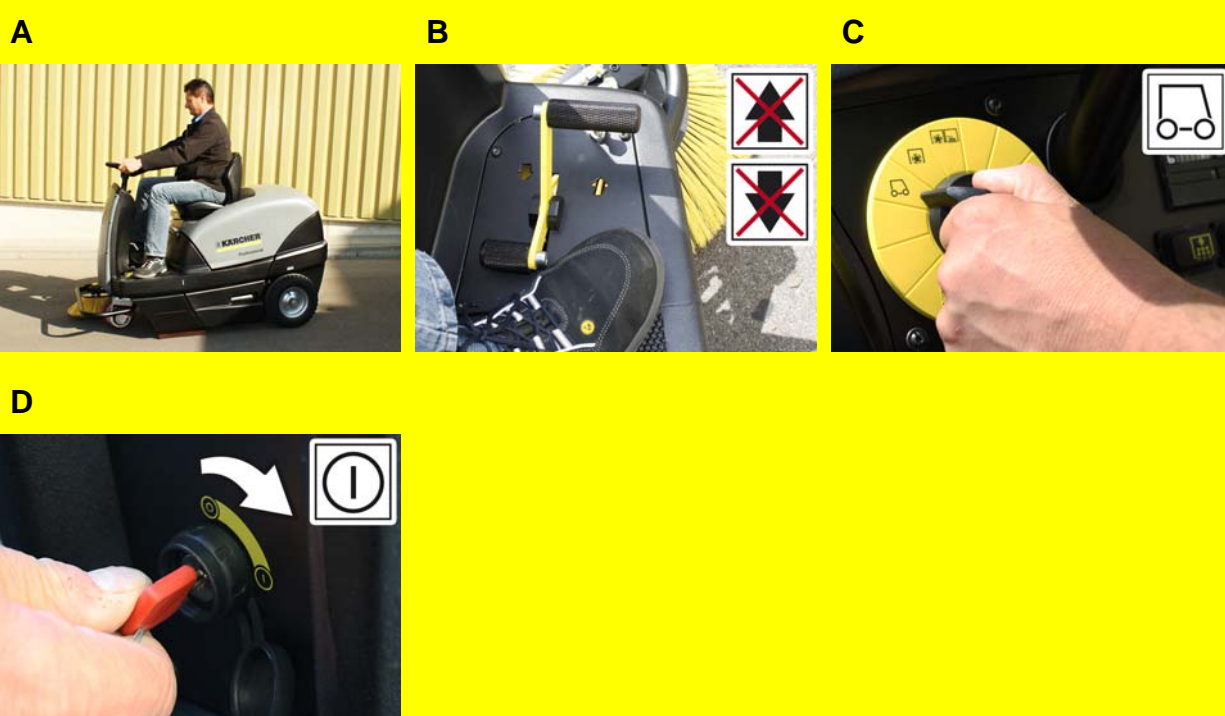

Starting the machine

- A Sit on the driver's seat.
- B Do NOT press the accelerator pedal.
- C Set programme switch to stage 1 (driving).
- D Turn the ignition key to position "I" - the battery display lights up.

Operation

2



Drive the machine

- A Press slowly the accelerator pedal "forward".
- B Press slowly the accelerator pedal "reverse".
- C Release the accelerator pedal, the machine brakes automatically and stops.

3



Sweeping with sweep roller

- A Set programme switch to stage 2. Roller brush is lowered.

4



Sweeping with side brushes

- A Set programme switch to stage 3. The side brushes and roller brush are lowered.

5



Sweeping with raised coarse waste flap

- A Push the coarse waste flap pedal towards the front and hold it there. To lower it, take foot off pedal.

6



Sweeping damp or wet floors

- A Open wet/dry flap.

7



Cleaning the dust filter

- A Open wet/dry flap.
- B Depending on the amount of the collected dust, the dust filter should be cleaned every 15-30 minutes during operation.
- C Close wet/dry flap

8



Emptying waste container

- A Slightly lift and pull out the waste container. Empty waste container. Slide in the waste container and snap it in place. Empty the opposite waste container.

Finish operation

- | | | |
|----------|---|---|
| 1 | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>A</p> </div> <div style="text-align: center;"> <p>B</p> </div> </div> | <p>Turn off the appliance</p> <p>A Set programme switch to stage 1 (driving). The side brushes and roller brush are raised.</p> <p>B Turn main key to "0" and remove it.</p> |
| 2 | <div style="text-align: center;"> <p>A</p> </div> | <p>Emptying waste container</p> <p>A Slightly lift and pull out the waste container. Empty waste container. Slide in the waste container and snap it in place. Empty the opposite waste container.</p> |
| 3 | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>A</p> </div> <div style="text-align: center;"> <p>B</p> </div> <div style="text-align: center;"> <p>C</p> </div> </div> | <p>Bp model</p> <p>A Open the device hood.</p> <p>B Remove battery plug and join it to the charging cable. Switching on the charger</p> <p>C Close cover.</p> |
| 3 | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>A</p> </div> <div style="text-align: center;"> <p>B</p> </div> <div style="text-align: center;"> <p>C</p> </div> </div> | <p>Bp Pack model</p> <p>A Open the device hood.</p> <p>B Remove the mains cable from the storage bin. Connect the charger to the mains and turn it on.</p> <p>C Close cover.</p> |

Maintenance and care

- | | | | daily | weekly | Kärcher Customer Service |
|----------|--|---|-------|--------|--------------------------|
| 1 | <div style="text-align: center;"> <p>A</p> </div> | <p>A Check the sweeping roller and the side brush for wear and wrapped belts.</p> | | | |

Maintenance and care

daily

weekly

Kärcher Customer Service


2



A Check dust filter and clean filter box, if required.
 B Clean the machine with a damp cloth which has been soaked in mild detergent.
⚠ Warning
 Risk of damage! Do not wash down the appliance with water and do not use aggressive detergents.

Troubleshooting

1

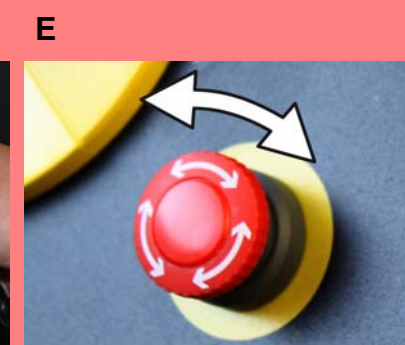

Appliance cannot be started
 A Sit on the driver seat, the seat contact switch gets activated
 B Turn the ignition key to position "I" - the battery display lights up.
 C **Bp model**
 Remove battery plug and join it to the charging cable.
 Switching on the charger
 D **Bp Pack model**
 Remove the mains cable from the storage bin.
 Connect the charger to the mains and turn it on.
 E Release emergency-stop button.

2



Engine is running but machine is not moving
 A Check setting of freewheel lever

3



Machine is not sweeping properly
 A Check roller brush and side brushes for wear, replace if necessary.
 B Check function of bulk waste flap

Troubleshooting

4



Dust gathers in the machine

A Empty waste container

B Check, clean or replace dust filter

C Close wet/dry flap

Roller brush does not turn.

A Remove belts or cords from roller brush