



PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR

MODEL:AC255



BEPOWEREQUIPMENT


.COM



PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR


MODEL:AC255

PISTON ASSEMBLY

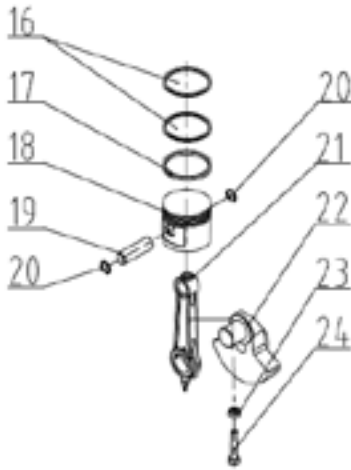

REF #	DESCRIPTION	QTY	BE PART #
22	CRANK SHAFT	1	42.001.031

COMPRESSOR HEAD

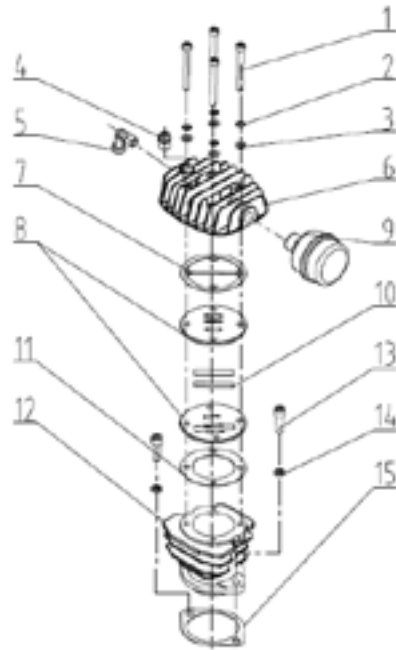


REF #	DESCRIPTION	QTY	BE PART #
2	WASHER, SPRING	8	42.001.028
3	WASHER, PLAIN	4	42.001.034
4	COLD WEATHER START VALVE	1	42.010.050
9	AIR FILTER, COMPLETE ASSEMBLY	1	42.012.013



PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR

MODEL:AC255

PUMP ASSEMBLY

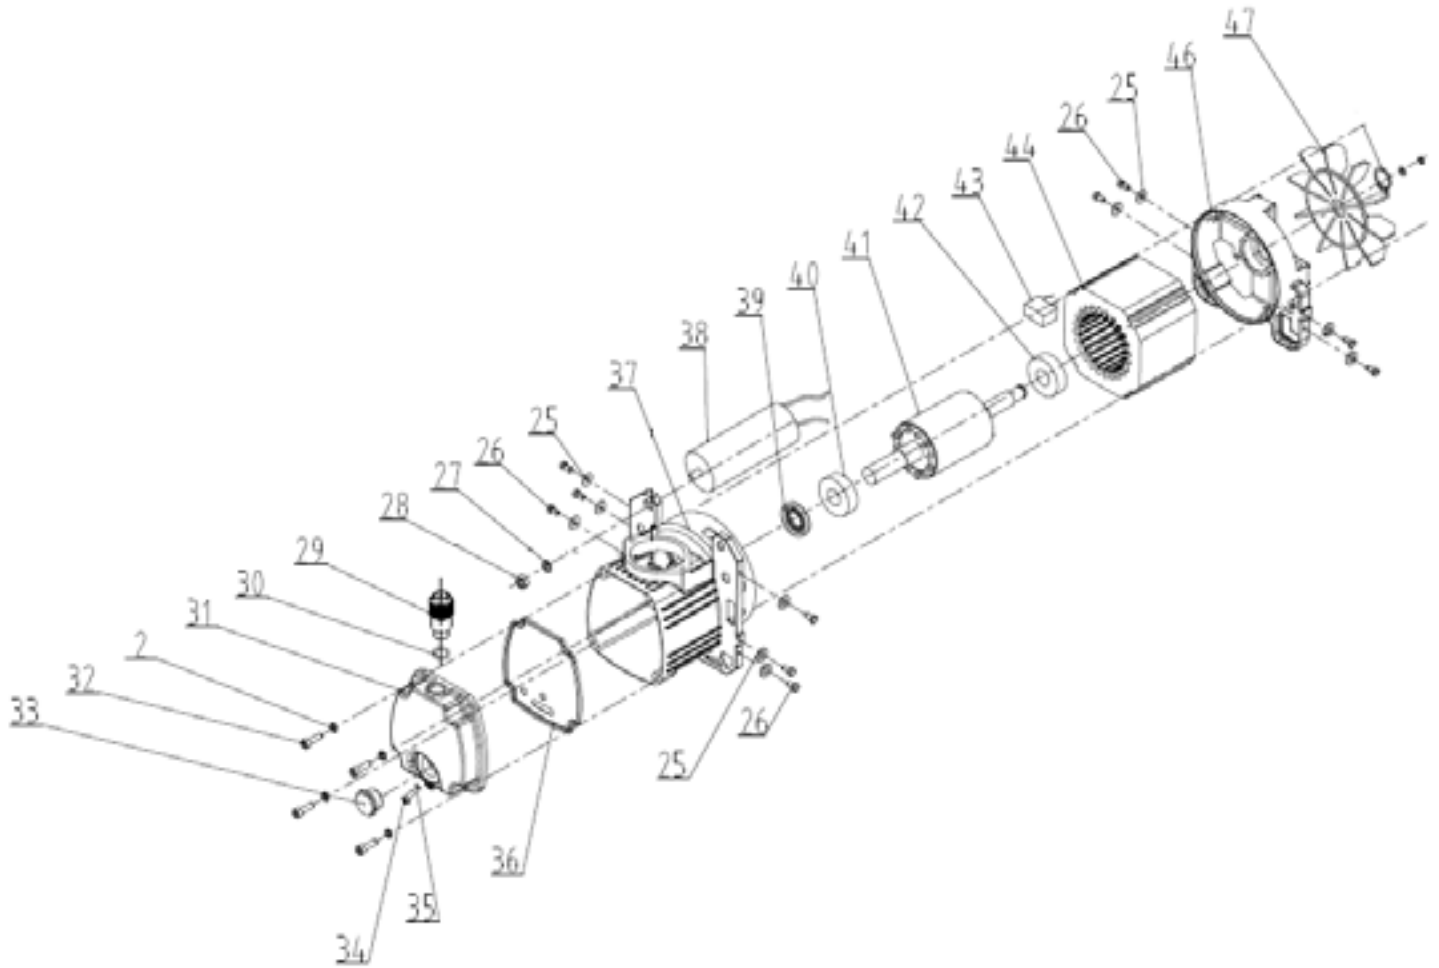


REF #	DESCRIPTION	QTY	BE PART #
33	SIGHT GLASS, OIL	1	42.001.029
37	CRANKCASE	1	42.001.032
38	CAPACITOR	1	42.012.026
39	SEAL, OIL	1	42.001.035
43	THERMAL PROTECTOR	1	42.001.036



PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR


MODEL:AC255

MANIFOLD ASSEMBLY, PRESSURE SWITCH

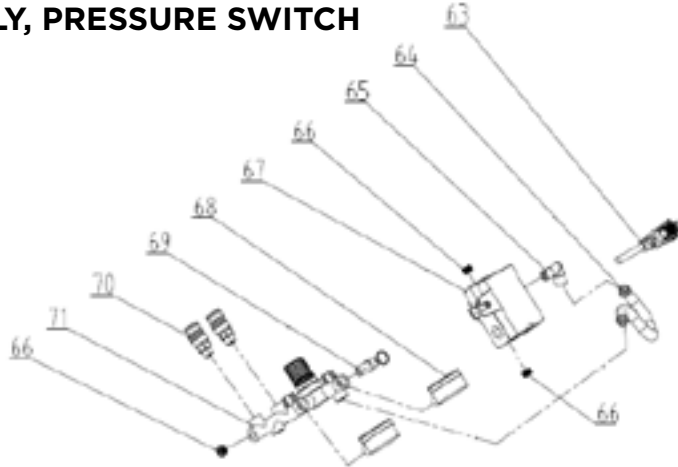

REF #	DESCRIPTION	QTY	BE PART #
64	HOSE, OUTLET	1	42.012.008
65	ELBOW	1	42.012.007
67	PRESSURE SWITCH	1	42.006.045
66	END CAP	3	42.012.009
68	GAUGE	2	
70	QUICK COUPLER	2	
71	REGULATOR	1	
69	SAFETY VALVE	1	42.006.009

WHEEL ASSEMBLY

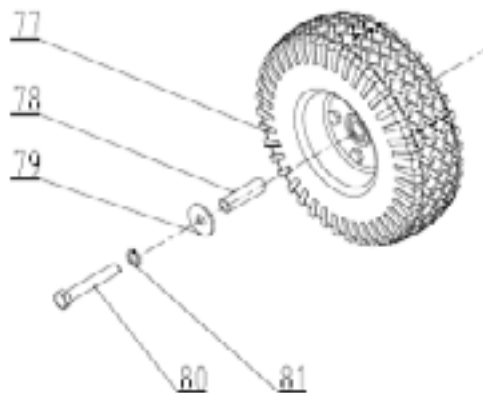

REF #	DESCRIPTION	QTY	BE PART #
77	WHEEL	2	42.012.002
78	WHEEL SPACER	2	
79	WASHER	2	
80	BOLT	2	
81	SPRING WASHER	2	



PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR


MODEL:AC255

RUBBER FEET



REF #	DESCRIPTION	QTY	BE PART #
74	FOOT, RUBBER	2	42.012.001
75	WASHER	2	
76	BOLT	2	

DISCHARGE TUBE

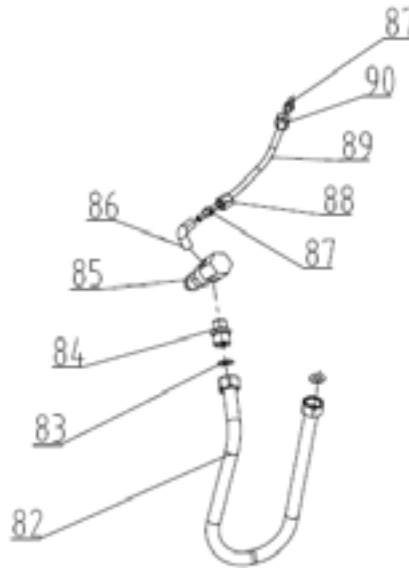


REF #	DESCRIPTION	QTY	BE PART #
82	INLET ASSEMBLY	1	42.012.005
83	SEAL GASKET	2	
84	STRAIGHT JOINT	1	
85	CHECK VALVE	1	42.012.003
86	ELBOW	1	42.012.004
87	FERRULE	2	
88	NUT	1	
89	ALUMINUM TUBE	1	
90	NUT	1	



PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR

MODEL:AC255

COMPLETE PUMP (REFERENCE ONLY)
SEE PAGES 2-3 FOR PARTS AVAILABILITY

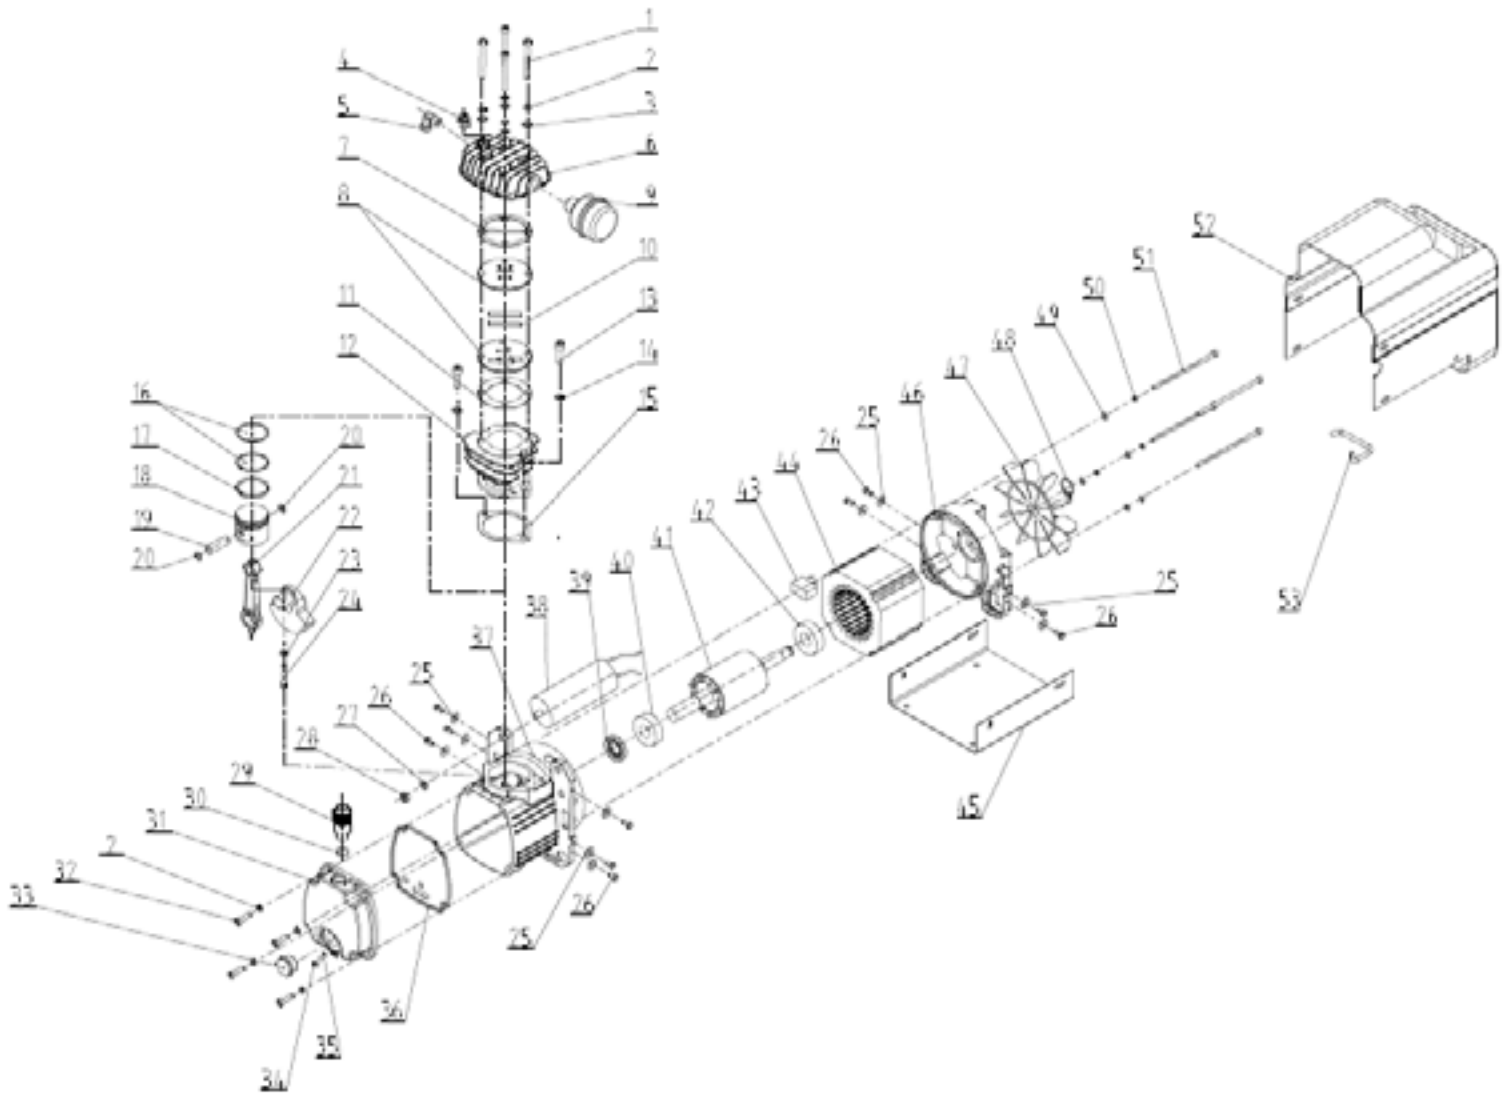




PARTS BREAKDOWN ELECTRIC AIR COMPRESSOR

MODEL:AC255

COMPLETE UNIT (REFERENCE ONLY)
SEE PAGES 3-5 FOR PARTS AVAILABILITY

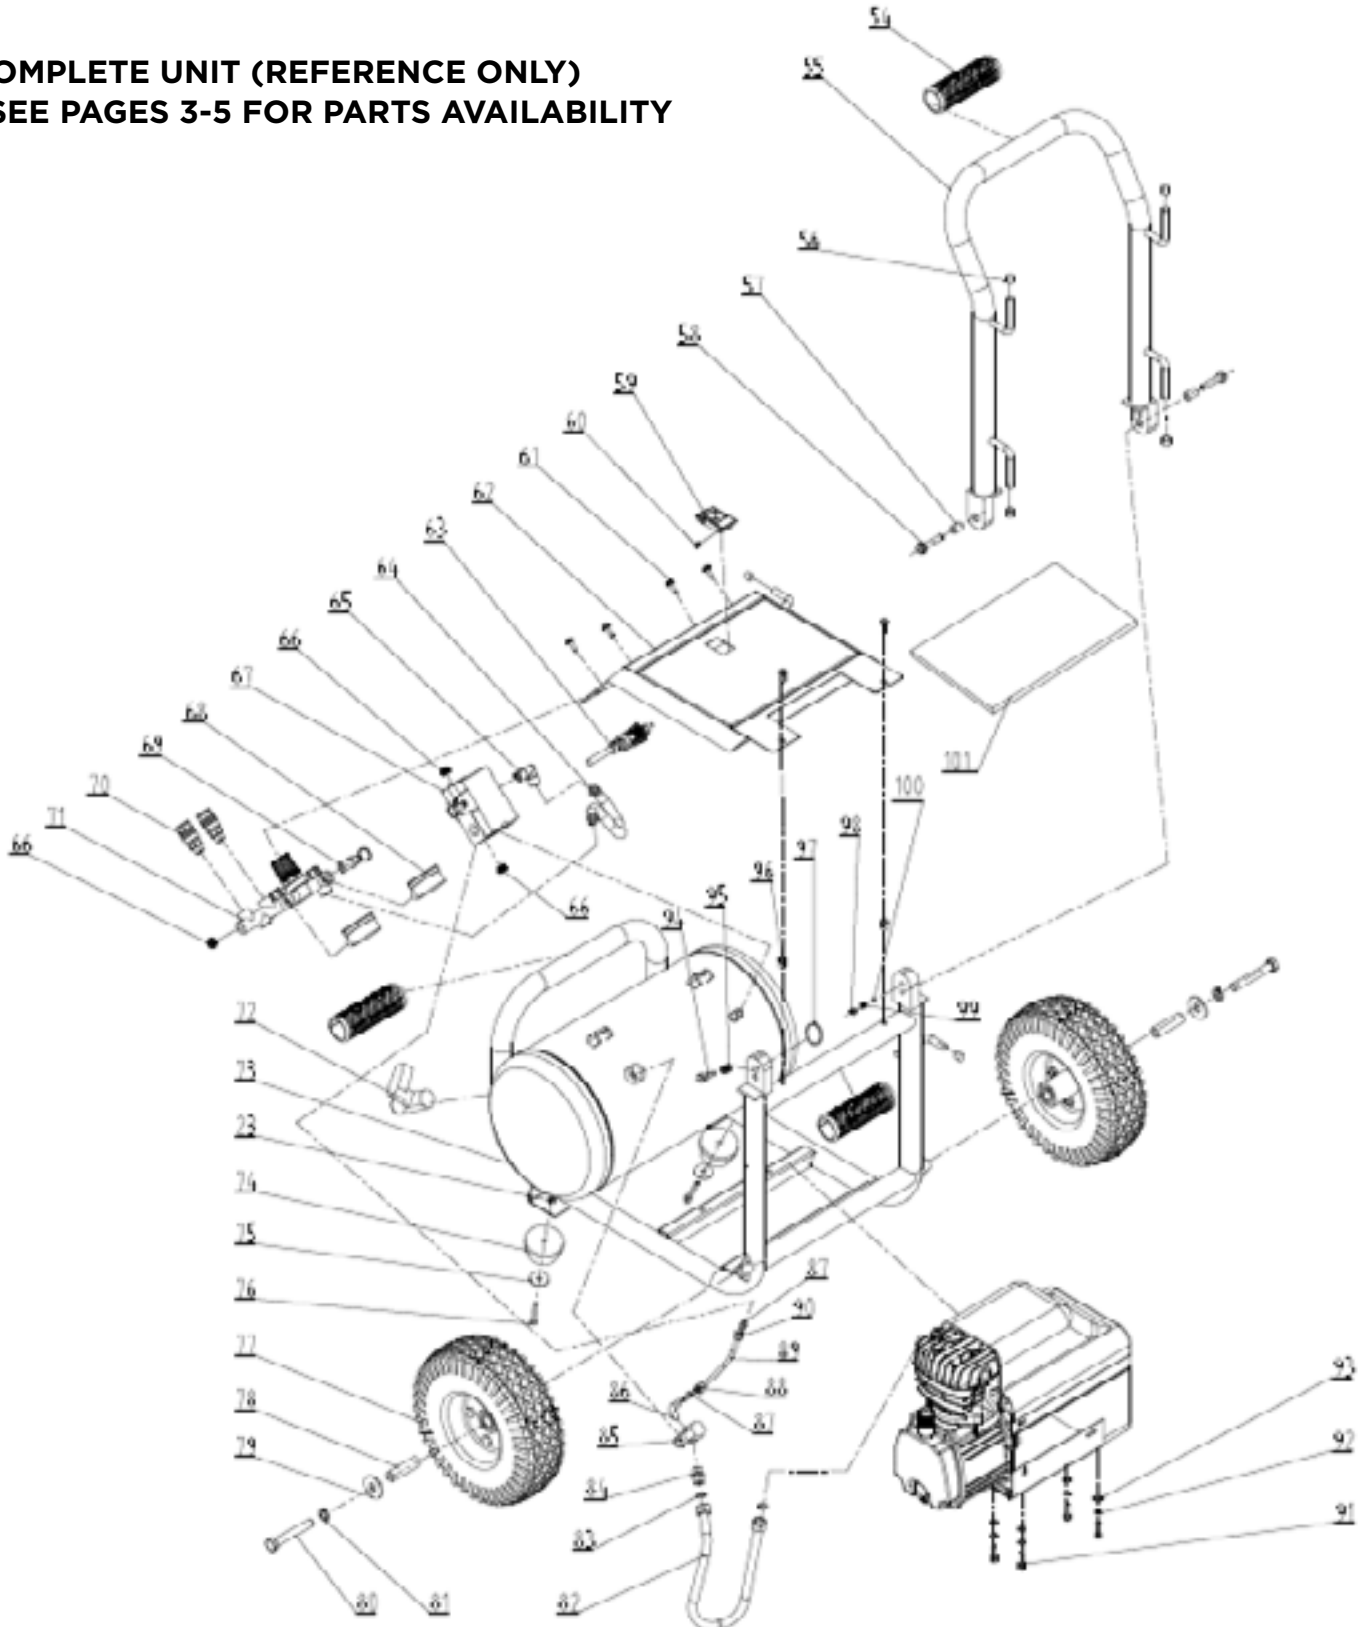

BE

POWER EQUIPMENT

If you need technical assistance call:

1-866-850-6662

(8:00am - 4:30pm PST, Mon - Fri)